

(19)



Europäisches Patentamt

European Patent Office

Office européen des brevets




(11) Publication number:

0 632 382 A1

(12)

EUROPEAN PATENT APPLICATION(21) Application number: **94109380.9**(51) Int. Cl.⁶: **G06F 11/22**(22) Date of filing: **17.06.94**(30) Priority: **29.06.93 US 85272**(43) Date of publication of application:
04.01.95 Bulletin 95/01(84) Designated Contracting States:
DE FR GB IT(71) Applicant: **Bull HN Information Systems Inc.**
Corporation Trust Center
1209 Orange Street
Wilmington
Delaware (US)(72) Inventor: **Gilbert, Jeremy H.**
158 Concord Rd., Apt. G-5
Billerica, Mass. 01821 (US)
Inventor: **Hout, David B.**
92 Clark Street
Newton Massachusetts 02159 (US)
Inventor: **Keohane, Michael P.**
65 Oakland St.**Brighton, Mass. 02135 (US)**Inventor: **Perlow, David K.****15 Mt. Lawny Lane****Merrimack,****New Hampshire 03054 (US)**Inventor: **Peters, Daniel G.****18 Kern Dr.****Nashua,****New Hampshire 03060-4252 (US)**Inventor: **Storch, Eric J.****M4 Snow Circle****Nashua,****New Hampshire 03062 (US)**(74) Representative: **Altenburg, Udo, Dipl.-Phys. et al****Patent- und Rechtsanwälte****Bardehle . Pagenberg . Dost . Altenburg .****Frohwitter . Geissler & Partner****Galileiplatz 1****D-81679 München (DE)**(54) **Method and apparatus for remote service of a host system.**

(57) A remote service facility (RSF) unit is integrated into the operating system of the host system being supported. The RSF unit utilizes a standard generic menu interface system (GMIS) unit through which a user can enter different types of commands which results in the display of a number of menu sequences for configuring how the different independently controllable components of the RSF unit will operate in performing remote support functions. The components include a problem detection and reaction component, a system action component and a callback component, each of which operatively couple to the GMIS unit. The components are integrated in a predetermined manner so that collectively, they carry out remote support according to the way in which they were configured.

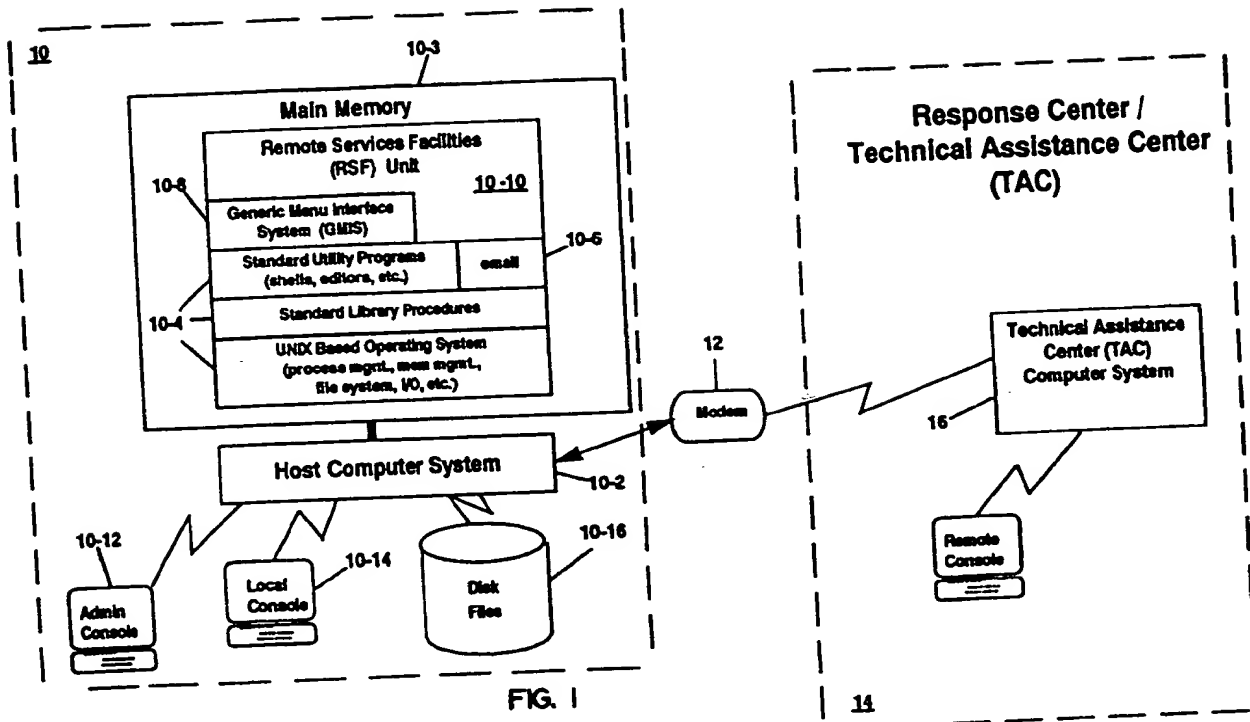

BACKGROUND OF THE INVENTION**Field of Use**

5 The present invention relates to systems for detecting and reporting problems encountered in a host system during normal operations and more particularly to methods and systems for providing remote maintenance and support services for such host systems.

Numerous kinds of systems have been developed over the years for maintaining and diagnosing faults occurring within data processing systems either locally or remotely. Such systems have taken the form of system management apparatus, maintenance processors and remote maintenance system interfaces and systems. Examples of these types of systems are discussed in U.S. Patent No. 4,298,935, 5,202,963, and 5,210,757.

Also, software components have been used to provide remote support for host systems. One such system disclosed in U.S. Patent No. 5,111,384 provides for automating the dump analysis process. Another type of system monitors a system error log to detect problems and automatically calls a remote center for diagnosis and corrective action. An example of this system is the remote maintenance manager (RMM) tool developed by Bull HN Information Systems Inc. which is described in the publication entitled, "DPX/2 500 Remote Maintenance Facility Guide," published by Bull HN Information Systems Inc., dated March, 1991 and having Order No. LW07-00.

20 The remote maintenance manager (RMM) subsystem tool is implemented as a single component which is integrated into the operating system of the host system. The tool includes a daemon (background) process that is initialized by an interface program run by an administrator or operator to set up parameters for the RMM subsystem. The daemon process continues to monitor the host system for error conditions established through exceeding predetermined thresholds and responds by making an automatic callout to a response center when an established threshold has been exceeded.

Upon receipt of the callout and accompanying message, a remote operator is able to determine the source of the callout by examining the message contents. When the callout is made, the administrator is informed of the action by receipt of a mail message. Also, the remote operator writes a message to the administrator's console notifying the administrator when a callback has been made to host system by the remote operator. Such callback takes the form of the remote operator logging onto the host system's operating system facilities wherein the remote operator initiates a remote session.

If the administrator needs to terminate the remote session, the administrator enters a standard command via the console or can communicate with the logged on remote operator by standard operating system utilities.

35 This type of system is very inflexible in that its operations are dictated by a set of predefined sequences of operations which assumes the existence of a particular configuration of host system components.

With more and more vital information databases being entrusted to computerized systems, access and security of such information is of the utmost importance to users. Also, it is essential that faults or errors be detected and corrected without delay to prevent any loss of user information and computer time. At times, there arise conflicts between these two requirements. Also, since security requirements could vary from installation to installation, there could be a variety of different needs to satisfy. Hence, it is desirable that the user be able to have a certain degree of control over how remote support is carried out.

An area which should be distinguished relative to remote support systems is developments pertaining to network management which provide for the handling or processing of events occurring on a communications network. Network management systems normally manage a network of local or remote distributed resources and other communications devices for the purpose of ascertaining the status of such resources and devices in order to ensure that certain jobs or tasks have been completed. Such systems have the ability to receive events and include means for signalling software related alert conditions visually or audibly to an operator based on receipt of such events so that the operator is able to take any necessary prompt corrective action to bring about the completion of such jobs and tasks in a timely and proper fashion. Thus, this type of system is concerned with monitoring network resources and applications which utilize such resources. Examples of this type of system are disclosed in U.S. Patent No. 4,965,772 entitled, "Method and Apparatus for Communication Network Alert Message Construction" which issued on October 23, 1990 and U.S. Patent No. 5,155,842 entitled, "Logical Event Notification Method and Apparatus" which issued on October 13, 1992.

Therefore, there is a need to provide a high degree of flexibility and control in providing remote support for a host system.

Accordingly, it is a primary object of the present invention to provide a highly modular and configurable remote support system for a host system.

Accordingly, it is a more specific object of the present invention to provide a remote support system which can be customized to meet user requirements for controlling how remote support is to be performed on a host system.

It is a further object of the present invention to provide a remote support system in which an administrator has greater control over the host system during the performance of remote support operations.

SUMMARY OF THE INVENTION

The above objects and advantages are achieved in a preferred embodiment of the present invention by a remote service facility (RSF) unit which is integrated into the operating system of the host system being supported. The RSF unit utilizes a standard generic menu interface system (GMIS) unit which is included as a standard part of the host operating system. Through this interface, a user can enter different types of commands which results in the display of a number of menu sequences for configuring how the different independently controllable components of the RSF unit will operate in performing remote support functions.

In the preferred embodiment, the RSF unit comprises three major components for carrying out the basic functions required for performing remote support. These are a problem detection and reaction component, a system action component and a callback component, each of which operatively couple to the GMIS unit. Each component is independently configurable and includes configuration means for storing configuration information accessed by the component which establishes how the component is to perform its particular function. The components are integrated in a predetermined manner so that collectively, they carry out remote support according to the way in which they were configured.

The problem detection and reaction component performs the function of monitoring a number of host error log file sources for determining when an error message over threshold condition occurs and initiating a specified action. In the preferred embodiment, the system action component includes modules for performing different types of support modification actions in response to the detection of a source over threshold condition. However, any defined action program module can be specified as the action to be performed when an overthreshold condition occurs. The callback component performs the function of processing calls from the response support center made in response to a callout action initiated by the problem detection and reaction component for purposes of conducting remote support operations.

The approach utilized by the present invention is that of defining a minimum number of basic functions required to perform the remote support function and then to utilize a corresponding number of independently operable components for carrying out those basic functions which are operatively coupled in a manner so as to collectively perform remote support function.

This approach makes it possible to maximize the configurability of each component. Additionally, the approach enables different components to be installed within the host system for supporting different host system communication configurations such as standalone and cluster configurations. Further, the arrangement facilitates the addition of new capabilities or improvements to components, new commands and new host system configurations without necessitating a redesign of the basic unit.

In the preferred embodiment, each component operates under the control of a separate daemon or background program which can be enabled or configured for operation through the GMIS unit. The configurations for components can be either preloaded or modified during installation of the unit's components as required for customizing the unit for a given host system configuration.

Considering each component in more particular terms relative to the preferred embodiment of the present invention, the configuring means of the problem detection and reaction component can be used to configure each type of error log source to be monitored. This is achieved by providing different search capabilities which are selected based on source type.

Also, the time interval for monitoring each source can be configured by setting a search time parameter to a desired value. This permits monitoring to be set according to the type of error information being stored by the host system or according to the frequency it was being stored by the host system. For example, where timing was critical to a source, the search time may be set to monitor the source once every second. If another source was used by the host system to store electronic mail messages or occasional messages, the search time for that source may be set to scan it once every hour. The associated daemon process, by accessing the configured search time parameters for each source, is able to schedule events for source monitoring according to such values. This has the advantage of being able to adjust search time values to reduce the amount of system overhead expended in executing the monitoring function.

Additionally, the configuration means of the problem detection and reaction component can be used to set a clean time parameter which establishes the time interval at which the daemon process cleans its associated database files to free them of stale messages. This parameter can be used in conjunction with another parameter (keepmax) for setting an upper limit on how many copies of a given message are to be stored in an associated storage message database file managed by the daemon process for each source being monitored thereby reducing host system storage requirements.

Also, in accordance with the present invention, the configuration means can be used to configure the problem detection and reaction component to enable different actions to be initiated in response to detecting an over threshold condition on a particular source. This decouples the problem detection and reaction component from the operation of the system action component thereby providing greater flexibility in prescribing what actions should be taken in a given case as well as the option to take no action in certain cases. Thus, a variety of different options can be configured. In the preferred embodiment, this includes callout via local or through shared communications facilities and mail notification actions.

The configuration means of the system action component of the preferred embodiment can be used to support the actions mentioned above through the facilities of the host system. Additionally, such means can be used to support the support notification actions for standalone and cluster host configurations (i.e., cluster client and cluster server). In the standalone configuration, the callout function is carried out by a daemon process which manages the execution of callout requests entered into a callout manager queue using the communication facilities (modem) of the host system. In the cluster configuration, the callout function is carried out through shared communication facilities using cluster client/server software facilities installed on the different systems which make up the cluster. An additional daemon process is used to manage such shared communications requests.

Also, the managing of the callout function in terms of how it is executed can also be configured. It is possible to select the type of response center communications protocol to be used in communicating a callout action and provide the appropriate parameters to a response center such as unique host system identification information for enabling the selected remote center to respond properly to such callout request, a comprehensive list of response center phone numbers to be tried in sequence until a successful connection is made, remote password information to be used by the center in responding to the callout and an electronic mail address to which notification of the callout action is to be sent.

Also, in accordance with the present invention, the configuration means of the system action component can be used in specifying a comprehensive set of communication parameters for establishing a communications link via a large number of different types of modems such as acknowledgment response (OK) byte strings and connection byte strings which can vary from link to link. The configuration means further enables configuring other parameters such as the number of tries to be made for each phone number, the delay between busy tries and communications (modem) delays. This capability provides an effective way of matching the callout action to the type of host system resources to be utilized in making and responding to the callout function in an efficient and expeditious manner.

In accordance with the present invention, the configuration means of the callback component enables remote access by a response center, the establishment of permissions to be granted to a remote user and selection of a number of different types of session scripting or monitoring options for enabling an administrator of the host system to view all of the actions being taken by a remote user. In this way, it is possible to maintain the security and integrity of host system data as well as capturing for later viewing, all actions taken during a given session conducted in the performance of the remote support function. A further feature of the callback component is a hot key capability which allows the administrator to immediately terminate any current session by the remote user thereby providing further security control.

The above and other objects of the present invention are achieved in the illustrative embodiment described hereinafter. Novel features which are believed to be characteristic of the invention, both as to its organization and method of operation, together with further objects and advantages, will be better understood from the following description when considered in connection with the accompanying drawings. It is expressly understood, however, that these drawings are for the purpose of illustration and description only and are not intended as definition of the limits of the present invention.

BRIEF DESCRIPTION OF THE DRAWINGS

Figure 1 is a block diagram of a standalone configured host system which incorporates the remote support facility of the present invention.

Figure 2 is a block diagram of cluster configured host systems which incorporate the remote support facility of the present invention.

Figure 3 is a block diagram of the remote support facility of the present invention.

Figures 4a through 4d illustrate in greater detail, the different components of Figure 3.

Figures 5a through 5e illustrate in greater detail, the formatting of the different databases and sources of the problem detection and reaction component of Figure 4a.

Figure 6 illustrates the organization of the menu system utilized by the generic menu interface system of Figure 1 in accordance with the present invention.

Figure 7a illustrates a sample sequence of configuration steps.

Figure 7b illustrates in greater detail, the install operation of Figure 7a.

Figure 7c illustrates in greater detail, the source configuration operations of Figure 7a.

Figures 7d1 through 7d4 illustrates in greater detail, the callout configuration operation of Figure 7a.

Figure 7e illustrates in greater detail, the set system identifier operation of Figure 7d.

Figure 7f illustrates in greater detail, the configure callback operation of Figure 7a.

Figure 7g illustrates in greater detail, the configure monitoring/mirroring operation of Figure 7f.

Figure 7h illustrates in greater detail, the configure diagnostic operation of Figure 7a.

Figure 7i illustrates in greater detail, the configure daemons operation of Figure 7a.

Figures 8a through 8t illustrate menus utilized in carrying out the configuration operations of Figures 7a through 7d.

Figures 9a through 9c illustrate menus utilized in carrying out the configuration operations of Figures 7f and 7g.

Figures 10a through 10d illustrate menus utilized in carrying out the configuration operations of Figures 7h and 7i.

Figures 11a through 11d are flow diagrams used in describing the operation of the problem detection and reaction component of Figure 4a.

Figures 12a through 12d and 13a through 13d are flow diagrams used in describing different functions performed by the callback component of Figure 4c.

DESCRIPTION OF HOST SYSTEM OF FIGURE 1

Figure 1 illustrates the use of the remote service facility (RSF) unit of the present invention in a standalone system environment. As shown, this environment includes a host system 10 coupled to a communications link via a modem 12 for establishing dial out access to a remotely located response center 14 or a technical assistance center (TAC) as well as dial in access for carrying out support operations. As shown, the host system 10 includes a host computer system 10-2 which operatively couples to a main memory 10-3 and to input/output storage devices, such as disk files 10-16. The disk files 10-16 provide storage for the different files utilized by the RSF unit of the present invention. For the purpose of the present invention, the host computer system is conventional in design and may take the form of the DPX/20 system marketed by Bull HN Information Systems Inc.

A user can directly access the computer system 10-2 through a terminal or local console 10-14 while a system administrator is able to access system 10-2 through a administration terminal or administration console 10-12. As shown, each of the consoles 10-12 and 10-14 includes a display device, keyboard and optionally, a pointing device such as a mouse.

The system 10-2 is operated under the control of a UNIX based software system 10-4 which includes a UNIX based operating system or kernel which controls the computer system 10-2 and provide a system call interface to all of the programs running on the system. The system 10-4 also includes a library for storing procedures for processing such system calls (one procedure per call) and a large number of standard utility programs such as the command processor or shell, compilers, text processing programs and file manipulation utilities. Additionally, the host system includes a generic menu interface system (GMIS) unit 10-8 which operates as a resident command building facility. For the purpose of the present invention, the unit 10-8 can be considered conventional in design. In the preferred embodiment, GMIS takes the form of the System Management Interface Tool described in the publication entitled, "Bull DPX/20 General Programming Concepts" dated April, 1993, published by Bull HN Information Systems Inc., order reference SC23-2205.

In accordance with the present invention, the system 10 includes a remote services facility (RSF) unit 10-10 of the present invention which has an interface to GMIS unit 10-8 and to the UNIX system 10-4. The RSF unit 10-10 operates to detect problems occurring in the host system, to report such problems to a response center via autodial out and to provide a secure operating environment for callback responses made via dial-in access by such response center utilizing the host system facilities.

In addition to operating in a standalone configuration, the RSF unit 10-10 also operates in a cluster configuration of client and server host systems such as that shown in Figure 2. As shown, each host system

connects to a local area network (LAN) or wide area network (WAN) system. In this configuration, the modem 12 is shared among all of the host systems using the network communication facilities of the LAN/WAN system and remote call procedures (RPCs) provided as part of the UNIX system 10-4 utilizing the TCP/IP network software protocol. Each host system also includes its own complement of consoles, disk devices, etc., not shown.

As indicated and described in further detail herein, a different component module (netact/netacd) is configured for client host systems and the server host system directly connected to the modem 12 which is to be shared by the client host systems. In this system configuration, a callout request originating on a client host system is able to utilize the server host system via the LAN/WAN to make the callout request.

DESCRIPTION OF RSF UNIT 10-10

Figure 3 shows in block diagram form, the packaging structure and major components of the RSF unit 10-10. As shown, the RSF unit 10-10 includes the following four subpackages: a problem detection and reaction subpackage 10-100; a system action subpackage 10-200, a cluster services subpackage 10-300 and a callback environment subpackage 10-400. As a function of the type of system installation, different ones of these subpackages are installed into the host system 10-2. The below table shows which subpackages are installed for the standalone, cluster client and cluster server system configuration illustrated in Figures 1 and 2.

TABLE

Type of System Installation	Problem Detection and Reaction Subpkg.	Callback Subpkg.	System Action (Autodial) Subpkg.	Cluster Subpkg.
Standalone	X	X	X	
Cluster Client	X	X		X
Cluster Server	X	X	X	X

As indicated by the table, in the standalone system of Figure 1, subpackages 10-100, 10-200 and 10-400 are installed. In each client system of Figure 2, subpackages 10-100, 10-200 and 10-300 are installed. In the server system of Figure 2, all of the subpackages 10-100, 10-200, 10-300 and 10-400 are installed.

Each of the subpackages will now be considered in greater detail. As shown in Figure 3, subpackage 10-100 includes the problem detection and reaction component of unit 10-10. This component operatively couples to GMIS unit 10-8, to administrator console 10-14 and to local console 10-12 for receiving commands therefrom. As shown, component 10-100 provides output action signals to system action subpackage 10-200 and cluster subpackage 10-300. This component can be configured to monitor different types of sources such as the host system log error file and any ASCII log file generated by any application running on host system 10-2.

The component 10-100 includes a plurality of databases and log files represented by block 10-102 which are accessed via routines contained within a RSF library 10-104. A number of command programs included within block 10-106 execute the different types of commands received from GMIS unit 10-8 and consoles 10-12 and 10-14 utilizing the library routines of block 10-104. Additionally, component 10-100 includes a rsfd daemon 10-110 which also accesses certain routines of library 10-104 for performing certain operations such as diagnostic callout operations discussed herein. The rsfd daemon 10-110 monitors the configured sources to detect when messages reach over threshold conditions and executes those types of actions specified for such sources.

The subpackage 10-200 includes the system action component of RSF unit 10-10. As shown, the system action subpackage 10-200 operatively couples to rsfd daemon 10-100 to modem 12 and to cluster subpackage 10-300. In the preferred embodiment, component 10-200 includes a mail action subcomponent 10-202 and an autodial/callout subcomponent 10-204. The subcomponent 10-204 includes a callout manager module 10-210, a call force module 10-212, a call configuration file 10-216, a call action module 10-218 and a callout/callbin module 10-220 which operatively couple to each other as indicated in Figure 3. When configured, the mail action subcomponent 10-202 operates to carry out electronic mail notification through the E-Mail facilities of the UNIX-based system 10-4. The callout subcomponent 10-204 when configured operates to carry out callout action operations initiated by the problem detection and reaction component 10-100 through modem 12 via module 10-220.

The cluster subpackage 10-300 includes the cluster services component of RSF unit 10-10. The cluster subpackage 10-300 operatively couples to rsfd daemon 10-110, the RPC and TCP/IP communication facilities of system 10-4 and to callout subcomponent 10-204 as shown. In the preferred embodiment, the component 10-300 includes a call force module 10-312, a callact module 10-318 and the netactd/netcall modules of block 10-320. To accommodate different installation requirements, modules 10-212, 10-214, 10-216 and 10-218 are also included in component 10-300 and correspond to modules 10-312, 10-314, 10-316 and 10-318. The modules netactd and netcall are used in cluster server and cluster client systems, respectively. When configured, the component 10-300 operates to carry out callout operations for cluster system configurations via the local area network and operating system communication facilities illustrated in Figure 2.

The callback subpackage 10-400 includes the callback component of RSF unit 10-10. The callback subpackage 10-400 operatively couples to the modem 12, GMIS unit 10-8 and to console 10-12. As shown, component 10-400 includes a mirroring subcomponent 10-402 and a permission control subcomponent 10-422. The subcomponent 10-402 can be configured to carry out a plurality of different mirroring and scripting operations which enable an administrator to observe all of the operations carried out by a remote user who dials into the host system 10-2 from TAC 16. The permission control subcomponent 10-420 can be configured as desired for security purposes to control remote user access to host system facilities.

PROBLEM DETECTION AND REACTION

COMPONENT 10-100 - Figure 4a

Figure 4a shows in greater detail, the problem detection and reaction component 10-100 of the present invention. The block diagram indicates the operative coupling between the different programs and files utilized by the component 10-100. As shown, block 10-106 includes command programs 10-106a through 10-106k and files 10-106l and 10-106m. These programs are invoked through a command line generated either via GMIS unit 10-8 or console 10-12. With the exception of command program 10-106a, these programs access one or more routines contained in RSF library 10-104 as a function of the parameters contained in the command line. The program 10-106a also receives an input from the system 10-4 and the user generated configuration file 10-106m. As discussed herein, program 10-106a generates the initialization file 10-106l which can be used by programs 10-106b, 10-106c and 10-106e.

As shown, library 10-104 includes a plurality of routines 10-104a through 10-104k which will be discussed in greater detail herein. The routines 10-104a through 10-104k described in greater detail in the appendix are used to manage the contents of the database files and log files of block 10-102 as indicated in Figure 4a. As shown, the database files 10-102 include an action log file 10-102a, a control or source attributes file 10-102b, a message template databases file 10-102c and a stored messages (keep) database file 10-102d. The source log files include any number of system error log files 10-102e and ASCII log files 10-102f. Additionally, block 10-102 includes a diagnostic configuration file 10-102g used by rsfd daemon 10-110.

The action log file 10-102a, shown in greater detail in Figure 5c, is used to maintain a record of actions for one of the system error log files 10-102e designated as "system." As indicated in Figure 5e, each action includes the data and time the action was initiated, the path of the action program, the result of the action (successful, unsuccessful) and a description of the particular action performed (e.g. callout).

The control or source attributes file 10-102b is shown in greater detail in Figure 5a. As shown, it contains one record for each source (log file) being monitored by RSF unit 10-8. Each such control record includes an identifier field specifying the user's name for the source, the path for accessing the source, the action to be taken such as identifying the program to be executed upon detection of an overthreshold condition, the type of source, and cleantime and searchtime values.

The message template databases file 10-102c is shown in greater detail in Figure 5b. As shown, it contains information about all potential messages that are being monitored for a particular source. This includes search criteria (message IDs for system error log files or regular expressions for ASCII log files) and information used to determine if the message is overthreshold.

The stored messages (keep) database file 10-102d is shown in greater detail in Figure 5d. As shown, the file contains messages of variable length, each of which include the following fields: ID, time stamp, expiration data, length of message and message field which store the indicated information. This database is used to carry out threshold detection operations. Since its operation is not pertinent to an understanding of the present invention, it is not described in further detail herein.

Examples of system error log files 10-102e and ASCII log files 10-102f are shown in Figure 5e. The system error file of Figure 5e is shown in human readable form as generated by system 10-4 of Figure 1. Each entry includes the following fields: ID, label, type, class and error description. The ID field is an 8-character hexadecimal number which uniquely identifies each of the potential messages in the host system error log. The label field identifies the particular error condition. The type field indicates the type of error such as unknown, temporary (transient) and permanent (hard).

The class field indicates whether the error is a hardware (H) or software (S) error. The error description field provides a description of the error condition.

The ASCII log file includes lines of text separated by new line characters as shown in Figure 5e. The text lines can take any form. In the case of clock errors, it was convenient to indicate the date, time, source and clock adjustments.

Considering the command programs of block 10-106 in greater detail, the make message template (mkmsgtmp) command program 10-106a allows for creation of an initialization file 10-106i which contains groups of messages to be added to the message template database file 10-102c for a particular source by programs 10-106b, 10-106c and 10-106e defining the potential messages to be monitored for over threshold conditions.

In greater detail, the mkmsgtmp program 10-106a reads in the standard input from a host system utility program normally used to print out all of the message templates utilized by the operating system 10-4 which contains information for all possible error messages which can be utilized by the host system 10-2. The user can set up values in tables within the configuration file which specify particular parameters, such as threshold, duration, keepmax values, for certain classes or types of potential error messages. The following is an example of such a configuration file:

HARDWARE			
PEND	2	10-mins	10
PERF	5	1-hour	10
PERM	1	1-day	10
TEMP	20	1-day	21
UNKN	1	1-hour	10
SOFTWARE			
PEND	7	1-day	10
PERF	10	1-day	11
PERM	6	1-hour	10
TEMP	25	1-day	26
UNKN	6	1-hour	10
RE			
X.*25	-5	1-hour	+ 20

When mkmsgtmp program 10-106a is invoked, it reads entries from system 10-4, examines the configuration file tables to determine which parameters the user has specified for that particular potential message and writes a record in the initialization file containing that potential message with the specified parameters. The mkmsgtmp program 10-106a is used for the creation of system source initialization files only. Examples of such initialisation files are as follows:

ASCII SOURCE INITIALIZATION FILE:			
#expression	threshold	duration	keepmax
"system__error__."	2	1-day	50
"i/o__error__on-device."	5	4-days	20

SYSTEM SOURCE INITIALIZATION FILE:			
#id	threshold	duration	keepmax
23e44f01	2	1-day	50
abcdef11	3	2-hours	50.

5

As explained herein, the command programs 10-106b, 10-106c and 10-106e can be invoked in a way to use the contents of the initialization file 10-106l to add a group of records at a time containing potential messages to a message template database included within block 10-102c. An example of the type of information written into the message template database is shown in Figure 5b.

The mkmsrc command program 10-106b in response to an mkmsrc command which is generated by either unit 10-8 or from console 10-14 initiates the operation of defining a new source to be monitored by unit 10-2 (i.e., either a system log file or arbitrary ASCII log file). The mkmsrc command described in greater detail in the appendix provides the necessary parameters in a generated command line. The mkmsrc program 10-106b parses the command line and performs the necessary error checking operations for validating the command line parameters to ensure that source is valid. It then accesses the control routines of library 10-104 for writing a control record with the appropriate source attribute information into the control file database 10-102b.

If the command line includes an initialization file parameter option, this causes mkmsrc program 10-106b to access the search routines of library 10-104 to write the records previously stored in initialization file 10-106l containing all of the potential messages to be monitored for a particular source into the message template database file of block 10-102c. The result is a database such as shown in Figure 5b.

Continuing with the other commands that can utilize initialization file 10-106l, the chmsrc program 10-106c allows modification of the message attributes of a particular source (e.g. 10-102e or 10-102f) being monitored utilizing the control routines of library 10-104. This program is invoked in response to a chmsrc command with the appropriate command line such as described in the appendix. If the command line includes an initialization file option parameter, then chmsrc program 10-106c accesses the search routines of library 10-104. The program 10-106c causes the record contents of the source's message template database to be replaced with the messages previously stored in initialization file 10-106l. It will be appreciated that with few exceptions, the information contained in initialization file 10-106l and information contained in the source's message template database is the same information, except for the following differences. The initialization file is in human readable format, while the message template database is in binary format. The message template database also contains count information which is initialized to zero when the messages are added.

The last command program which utilizes initialization file 10-106l is mkmsg program 10-106e. This program enables a message to be added to a source's message template database utilizing the search routines of library 10-104. This program is invoked in response to a mkmsg command with the appropriate command line such as described in the appendix. If the command line includes an initialization file option parameter, then mkmsg program 10-106e via the search routines adds the messages previously stored in initialization file 10-106l to the source's message template database.

The lsmsrc program 10-106b allows information pertaining to one or more identified sources being monitored by unit 10-10 to be displayed or printed using the control routines of library 10-104. This program is invoked in response to a lsmsrc command which generates an appropriate command line such as described in the appendix. The program 10-106c invokes various routines contained in library 10-104 for accessing information contained in action log 10-102a and control file 10-102b, to be displayed or printed as specified by the command line parameters.

The rmmsrc program 10-106d allows the removal of a source being monitored. This program is invoked in response to a rmmsrc command with an appropriate command line such as described in the appendix. When invoked, program 10-106d utilizing the applicable routines of library 10-104 removes the appropriate record from control file 10-102b, removes the source's message template database, removes the appropriate keep-base information pertaining to the source and action log information for the specified source.

The lsmsg program 10-106f allows the listing of messages being monitored for a particular source. This program is invoked in response to a lsmsg command with the appropriate command line parameters such as described in the appendix. The program 10-106f invokes the appropriate routines in library 10-104 for accessing information contained in control file 10-102b, and the source's message template database used in listing such messages.

The chmsg program 10-106g allows modification of the attributes of messages being monitored. This program is invoked in response to a chmsg command with the appropriate command line parameters such as described in the appendix. The program 10-106g invokes the appropriate routines in library 10-104 accessing the control file 10-102b to obtain the record specific to the identified source and uses the specified message ID to locate the message to be changed in the message template database. It then updates the message template database with all the changes made to the message. It also updates the keep database 10-102d as required so as to properly reflect and be consistent with such changes (e.g. if a new threshold value is less than the current count, the appropriate keepbase record entry for that message is cleared).

The rmmsg program 10-106h is used to remove a record from a message template database thereby stopping RSF unit 10-10 from monitoring a particular message for a particular source. This program is invoked in response to a rmmsg command with the appropriate command line parameters such as described in the appendix. The program 10-106h in turn invokes the appropriate routines in library 10-104 which remove the message from the message template database of block 10-102c identified by the command line parameters, in addition to removing all messages stored in the keep database of block 10-102d having the same message identifier.

The chrsf command program 10-106 is used to start and stop/shut down the operation of rsfd daemon 10-110 and netactd daemon of cluster service component 10-300. This program is invoked in response to a chrsf command with the appropriate command line parameters described in the appendix. When invoked, the program 10-106 accesses the PID routines in library 10-104 for accessing the RSF PID file to determine if the rsfd daemon is running. The program 10-106i then initiates the appropriate action to start or stop the daemons as specified by the command line parameters. For the purposes of the present invention, the daemons are started and stopped in a conventional manner using the facilities of system 10-4.

The confdiag program 10-106j allows configuration of a diagnostic callout feature which enables callout action to be initiated at selected intervals such as daily, weekly, biweekly, monthly or bimonthly. This program is invoked in response to a confdiag command with the appropriate command line parameters described in the appendix. When invoked, the program accesses the appropriate routines in library 10-104 which enter the frequency at which a diagnostic message is to be injected into the system error log 10-102e as designated by the command line parameters into the diagnostic configuration file 10-102g add the diagnostic message to the system log source's message template database.

The rsfstat program 10-106k allows the status or configuration of the daemons utilized by RSF unit 10-10. This program is invoked in response to a rsfstat command with the appropriate command line parameters described in the appendix. When invoked, this program accesses the appropriate routines in library 10-104 which determine through the PID files which daemons are running and displays such status on host system 10-2. There is one PID file for each daemon.

DESCRIPTION OF RSF DAEMON 10-110

The rsfd daemon 10-110, for the purpose of the present invention, operates in the background like any standard daemon running in a UNIX-based operating system. As discussed herein, rsfd daemon 10-110 performs checks on message sources and when necessary executes preconfigured actions. It also maintains the message template search database, keepbase and action log files 10-110a, 10-101a, 10-102c and 10-102d. Accordingly, daemon 10-110 maintains a list of such managed message sources including information such as the control record and open file descriptors for the template search database and keepbase. In addition to using certain ones of the library routines, the rsfd daemon also uses a number of its own routines. These include event routines, action routines, signal routines, initialization routines, source search routines, keepbase and diagnostic message routines. The event routines are used to schedule events by creating new event structures which are placed on an event list, described later herein.

The action routines are used to free and allocate space for action data structures, calculate arguments for action process and place them in an argument list in the action data structure.

The signal routines perform waits for the finished child processes and get the PIDs. It looks up the action records and adds the records to the action log of the associated source.

The initialization routines read the control file and initialize the source list. It reads entries from the control file and for each entry it opens all associated files, creates a new source item and places it on the list. It opens the message template database, the keepbase and source files. It initializes the action list to NULL. As discussed herein, the initialization routines schedule initial events.

The source search routines perform message scanning of a particular source. That is, they read messages from the source, compare messages against the message template database, manipulate counts,

manage the keepbase and perform actions if necessary. If a match between the source file message template database is detected, it adds the message with time stamp information to the keepbase. If a message template (search) database entry for a message is already overthreshold, this is noted and the message count is updated.

- 5 The keepbase cleaning routines delete excess messages and search for overthreshold errors for a source starting at the beginning of the keep database. The diagnostic routine writes a specified message into the system error log file.

SYSTEM ACTION COMPONENT 10-200

10

DETAILED DESCRIPTION - FIGURE 4b

Figure 4b shows in greater detail, a portion of the system action component 10-200. More specifically, it shows the modules which make up the callout manager module 10-210. These modules correspond to a make call (mkcall) module 10-210a, a calld daemon 10-210b, a file 10-210c containing a set of call control file access routines, a list call (lscall) module 10-210d, a change call (chcall) module 10-210e, a remove (rmcall) module 10-210f and a call control (callctrl) file 10-210g which are operatively coupled as shown. The lscall module 10-210d allows callout requests stored in a callout queue in file 10-210g by the callout manager 10-210 to be listed. As discussed, callout manager 10-210 controls the timing and sequencing of callout requests made to a response center. It manages the callout requests stored in the callout queue. The callout queue is serviced by calld daemon 10-210b and parameters relating to the queue can be set by chcall module 10-210e. This queue also can be manipulated by mkcall module 10-210a and rmcall module 10-210f.

The lscall module 10-210d is invoked by a lscall command with the appropriate command line parameters described in the appendix. When invoked, module 10-210d accesses the call control file access routines of block 10-210c to read out queued callout requests for listing as specified by the command line parameters.

The chcall module 10-210e is invoked by a chcall command with the appropriate command line parameters described in the appendix. When invoked module 10-210e enables configuration of the delay and max calls parameters stored in file 10-210g and used internally by the callout manager 10-210 in controlling the processing of queued callout requests.

The rmcall module 10-210f is invoked by a rmcall command with the appropriate command line parameters described in the appendix. When invoked, module 10-210f utilizing the call control file access routines of block 10-210c removes callout requests from the callout queue as specified by the command line parameters.

The calld daemon 10-210b, as indicated, services the queue by scanning it for waiting callout requests and executing the requested callout action by transmitting a callout record created by callact module 10-218 via callout/callbin module 10-220 and modem 12 to the response center.

The mkcall module 10-210a in response to receipt of a call action request from callact module 10-218 sets up a new record entry after determining that there are not too many callout requests waiting. It uses the command line parameters received from module 10-218 to be added to the callout queue of call control file 10-210g. It then updates its callout count and next sequence number in a call control header used to identify the sequence of callout requests.

The other modules of Figure 4b will now be discussed in greater detail. The call configuration (callcfg) module 10-214 allows the display and modification of all of the various parameters in configuration file 10-216. The module 10-214 is invoked in response to the callcfg command with the appropriate command line parameters as described in the appendix. When invoked, module 10-214 accesses the callconf file 10-216, reads it, verifies that the specified subpackages are installed and modifies the applicable configuration structure according to the command line parameters. Also, module 10-216 displays the different configuration parameters as specified by the command line parameters.

The callforce module 10-212 performs a forced callout operation with a user defined free form record of data. This module 10-212 is invoked in response to a callforce command with the appropriate command line parameters described in the appendix. When invoked, module 10-212 determines which editing facility in system 10-4 to use to create the free form record, gets the user generated callout message from a user file and generates a callout record containing the required information. The module 10-212 then performs the callout operation via callout module 10-220 in the case of a standalone host system or via the netact module 10-320 in a cluster system.

CLUSTER SERVICES COMPONENT 10-300 - FIGURE 4c

Figure 4c shows in greater detail, the cluster services component 10-300 can be viewed as having a cluster client subcomponent 10-300a and cluster server subcomponent 10-300b. Callcfg module 10-314, callconf file 10-316, callact module 10-318, callforce module 10-312 and netact module 10-320 make up the cluster client subcomponent 10-300a. The netact daemon 10-320 and netcall module 10-320 make up the cluster server subcomponent 10-300b. The callact module 10-318 and callforce module 10-312 perform the same functions as described in connection with system action component 10-200. The netact module 10-320 when invoked by either module 10-312 or 10-318 in response to receipt of command arguments, contacts the cluster server system subcomponent 10-300b via the operating system network facilities and sends the command arguments to netactd daemon 10-320. The daemon 10-320 in turn calls netcall module 10-320 which sends out a callout record to the response center 16 via callout module 10-220 in the case of callforce module 10-312 or through the callout manager in the case of callact module 10-312.

CALLBACK COMPONENT 10-400 FIGURE 4d

Figure 4d shows in greater detail, the mirroring subcomponent 10-402 and permission control subcomponent 10-422 of callback component 10-400. As shown, subcomponent 10-402 includes a remote account module 10-403, a command for configuring monitoring options (confmon) module 10-404, a monitoring configuration file 10-405, a callscript module 10-406, a PID file 10-407, an interactive session monitoring file 10-408, a session log file(s) 10-409, a lsles module 10-410, a rmlses module 10-411, a showlses module 10-412, a showses module 10-413 and a showscript module 10-414. These modules and files are operatively coupled as shown in Figure 4d. The .profile module 10-403 is operatively coupled to receive the remote login from the TAC 14 via modem 12. The login is received and processed by host system 10-2 in a conventional manner through the remote login facilities of UNIX based system 10-4. However, the .profile module 10-403 causes the remote login session to be executed in a predetermined manner under control of callback component 10-400 as described herein.

The confmon module 10-404 allows the configuration of the callback monitoring sessions by mirroring subcomponent 10-402. The confmon module 10-404 is invoked in response to a confmon command with the command line parameters described in the appendix. When invoked, module 10-404 reads the existing configuration from configuration file 10-405, processes the command line parameters, performs any necessary checks and writes the new configuration into configuration file 10-405.

The callscript module 10-406 performs the required operations necessary to carry out the scripting operations in response to a callscript command with the command line parameters described in the appendix. When invoked, module 10-406 opens up the appropriate file(s) into which data from modem 12 is to be written, then sets the terminal modes and routes the data into the designated files (i.e., 10-408, 10-409). Additionally, the module 10-406 also accesses PID file 10-407 as required for recording the process ID of the child process it creates to carry out the operation specified by the command line parameters. The child process also performs other functions such as closing those files opened by the parent process not needed by the child process.

The showscript module 10-414 operatively couples to administrator console 10-14. The module 10-414 allows display or playback of the monitoring output captured by callscript module 10-404 and stored in one or more of the files 10-408 and 10-409 during a scripting session. The module 10-414 is invoked in response to a showscript command with the command line parameters described in the appendix. The command may be initiated by GMIS unit 10-8 through showlses module 10-412 and showses module 10-413 as indicated in Figure 4d. When invoked, module 10-414 reads the files-created by callscript module 10-406 and enables playback of the session files on console 10-14 in two modes. In one mode, module 10-414 shows complete session and terminates operation. In another mode, it shows the current session as it is being created and where the end of the file is reached it waits for more data to be added to the file.

The first mode is carried out under control of showlses module 10-412 while the second mode is controlled by showses module 10-413. The showlses module 10-412, as mentioned, allows the playback of a completed or logged session. The module 10-412 is invoked in response to a showlses command with the command line parameters described in the appendix. When invoked, module 10-412 performs the necessary checks (i.e., access permission and valid command line argument). It obtains the designated or named logged session(s) to be reviewed and provides the required parameters to showscript module 10-414 for displaying the session file(s).

The showses module 10-413, as mentioned, allows the playing of a currently active session, if available. The module 40-413 is invoked in response to a showses command described in the appendix. When

invoked, shows module 10-413 performs the necessary checks and verifies that there is a current session taking place (i.e., callscript module 10-406 is running). If there is current session running, module 10-413 passes the required parameters for displaying the current session to shows script module 10-414.

The lsles module 10-410 allows listing of logged sessions. This module is invoked in response to a lsles command described in the appendix. When invoked, module 10-410 accesses the directory of session log files 10-409 and lists the logged sessions using the facilities of system 10-4.

The rmles module 10-411 allows removal of logged sessions. This module is invoked in response to a rmles command which generates command line parameters described in the appendix. When invoked, module 10-411 performs permission and command argument checks and then accesses the directory of the session log files 10-409 and removes the specified session.

The permission control subcomponent 10-422 includes a doremodule 10-424, a remote configuration (remote conf) file 10-426, a configure permissions (confperm) module 10-428, a privileged tasks function module 10-430 and nonprivileged tasks function module 10-432. The modules are operatively connect as indicated in Figure 4d.

The doremodule 10-424 performs operations for the "remote" user that require a certain level of permission. The module 10-424 is invoked in response to a doremodule command which generates command line parameters described in the appendix. When invoked, module 10-424 accesses remote config file 10-426 for determining if root access is allowed. When it is, the module spawns a root subshell.

The confperm module 10-428 allows the configuration of permissions to be granted to remote users who have logged onto the host system 10-2 through remote account module 10-403 and operating under the control of callback component 10-400. This module is invoked in response to a confperm command with the command line parameters described in the appendix. When invoked, module 10-403. It accesses the permissions configuration file through access routine, not shown, similar to those described above and reads the existing configuration from file 10-426. It then processes the command line parameters and writes the new configuration into file 10-426.

The privileged tasks module 10-430 and the nonprivileged tasks module 10-432 provide the appropriate interface call parameters to the operating system 10-4 required for carrying out their respective tasks.

RSF UNIT MENU SYSTEM - FIGURE 6

As discussed above, the RSF unit 10-10 utilizes the generic menu interface system (GMIS) unit 10-8 which provides a graphic interactive screen oriented command interface. This interface in the preferred embodiment uses a hierarchical screen organization which includes menu, selector and dialog screen to generate the required command line parameters for causing RSF unit 10-10 to perform a specific task. Figure 6 illustrates the relationships between the different menu, selector and dialog screens utilized by unit 10-10 according to the present invention. As indicated, RSF unit 10-10 is accessible from the top level of the menu system which corresponds to a problem determination submenu. This submenu includes four selection items corresponding to message sources, messages, actions and callout/callback. All four menu items lead to submenus and all traversals down through the menu structure eventually lead to dialogs for each RSF command associated with the menu selection. Therefore, the different command line operations described above in connection with Figures 4a through 4d are normally carried out using this interface.

DESCRIPTION OF RSF CONFIGURATION PROCESS

FIGURES 7a THROUGH 7i

Figure 7a illustrates a sequence of configuration operations which have been chosen only for the purpose of explaining by way of example, how the different components of RSF unit 10-10 can be configured to operate according to the present invention. In many instances, the parameters being configured in the example would normally have been preconfigured within unit 10-10 and the user or customer running the host system 10-2 would only need to modify such parameters if there was a need to do so.

Considering Figure 7a, it is seen that to integrate RSF unit 10-10 into host system 10-2, an install operation is performed as indicated by block A. This operation is initiated by a user through GMIS unit 10-8. The install operation proceeds in a conventional way relative to placing the diskettes containing the RSF subpackages into an available disk drive device. The user next selects the device name for the drive device to be used for installing RSF (e.g. /dev/fd0) by an initial dialog menu. The user upon indicating to unit 10-8 to continue the install operation, is next presented with the dialog menu of Figure 8a.

As shown, the menu indicates that the previously named device is the device being used to install the RSF subpackages. The user changes the "SOFTWARE to install" menu item to select only the subpackages that are required for the type of host system configuration which is going to use RSF unit 10-10. Assuming that the host system is configured as a standalone system, the user would make the selections as shown in Figure 7b. This is carried out by selecting the "List" button next to the "SOFTWARE to install" field. This causes the unit 10-8 to display the selector menu of Figure 8b. Next, the user selects both the "obj" and "data" parts for each subpackage which is to be installed. Such selections are made according to Figure 7b. After each subpackage selection is made, the user causes the dialog to be executed according to the instructions displayed on the menu screen. As indicated in Figure 7b, after completing the selection process of block 700, the user causes the dialog to be executed which begins the installation operation of block 702. During this operation, the host system 10-2 prompts the user for the disks to be swapped during the installation. In the present example, the result is that subpackages 10-100, 10-400 and 10-200 will be installed in host system 10-2.

As indicated in Figure 7a, by way of example, the user performs the operation of configuring a host system source such as ASCII source 10-102f of Figure 4a. The sequence of operations for configuring the source is shown in detail in Figure 7c. Referring to Figure 7c, it is seen from Figure 6 that the user selects the "message sources" submenu from which can be run, four tasks, one of which is labeled "add a source." The submenu can be selected directly through a fast path. For this submenu, the user types GMIS msg_sources. This results in the display of the first submenu of Figure 8c as indicated by block 710 of Figure 7c.

The user by selecting the "add a source" menu item causes the display of the dialog screen shown in menu #2 of Figure 8c.

As indicated by blocks 712, 714 and 716, the user enters information such as the source identifier, source path name and the pathname of the action to be executed such as a callout action indicated as /usr/bin/callact. Next, as indicated by block 718, the user enters information specifying the source type as an ASCII source which is indicated as "ASCII." Also, the user specifies the source's cleantime and searchtime parameters as indicated by blocks 720 and 722.

In adding the source, the user also needs to specify the potential messages which are to be monitored by the source being added. This can be done in two ways. One way is to prepare an initialization file ahead of time either manually or by using the mkmsgtmp program 10-106a in the manner previously discussed. In that case, the user need only specify the initialization file as indicated by block 724 and then perform the indicated dialog. The block 106 of Figure 4a will cause these messages to be added to the message template database for the specified ASCII source 10-102f when the source is added. The GMIS unit 10-8 generates a command line for the mkmsrc command with the user supplied information. Mkmsrc program 10-106b causes the source to be added by establishing the appropriate control record for the ASCII source within control file 10-102b in the manner discussed above.

If an initialization file has not been prepared ahead of time, the user can add messages one at a time by selecting the "add messages to message template database" submenu. As shown in Figure 6, this submenu is displayed by selecting the "add messages to message template database" item of the messages submenu as indicated in block 730. Selecting this item results in the display of a selector screen containing the identifiers of all sources currently being monitored by RSF unit 10-10. The user selects the source identifier that was just added as indicated in block 732. Once the desired source is selected, the dialog screen of Figure 8d is displayed by GMIS unit 10-8.

Next, as indicated in block 734, the user selects the regular expression value for the message which is the parameter used to match messages read from ASCII log file 10-102f. The user next performs the operations of blocks 736 through 738 for selecting the message threshold, the duration and keepmax parameters for that message. This results in the generation of a mkmsg command line by GMIS unit 10-8 which invokes the mkmsg program 10-106e of Figure 4a. As previously discussed, this program causes the message having the user specified parameters to be added to the message template database of the added ASCII source as indicated by block 740. If there are more messages to be monitored for the source, then the user repeats the sequence defined by blocks 730 through 740 for each message to be added.

Following completion of adding an ASCII source, the user by way of example, next configures a system source as indicated by block C in Figure 7a. This operation is performed in the same way as configuring an ASCII source. The only differences are when the user specifies the source type, "SYSTEM" is selected instead of ASCII. Also, instead of selecting a regular expression value, the user selects a message identifier (ID) which uniquely identifies each of the potential messages in the host system error log 10-102e of Figure 4a (see Figure 5e). The above described arrangement facilitates the addition of other types of binary log files having specific structures.

As seen from Figure 7a, the user by way of example, next performs the configure callout operation of block E for configuring the system action component 10-200 of Figure 4b. The sequence of operations performed relative to block E are shown in Figures 7d and 7e.

As indicated by block 750 of Figure 7d, it is necessary to determine if the host system utilizing RSF unit 10-10 is a cluster client system since the operations for configuring the callout component are different for the cluster client system than those for configuring a cluster server or standalone system. The reason is that the cluster server or standalone system includes a directly connected modem. Since the cluster client system performs the callout function through a cluster server system over the LAN/WAN, the user of a cluster client system does not have to configure all of the parameters which relate to such modem connection.

Since the host system 10-2 is a standalone system, the user performs a "configure callout (local modem)" selection of block 752 which results in the display of the submenu of Figure 8e by GMIS interface 10-8 as indicated in block 753. The menu path is as indicated in Figure 6.

The submenu of Figure 8e contains a set of selections that allows customization of the autodial function of component 10-200. These selections include site parameters, modem parameters and callout tuning. Selecting the "site parameters" item of block 754 results in the display of another submenu such as shown in Figure 8f. As indicated in block 756, this submenu contains further selections for manipulating local operator and system information.

When the user selects the "System Identifier" menu item of Figure 8f, this causes GMIS unit 10-8 to generate submenus requiring further user actions. The set system identifier operation of block 758 is shown in greater detail in Figure 7e. Upon selection of the "set system identifier" item on the displayed submenu, GMIS presents a dialog screen which asks the user to select what type of support center protocol will be used as indicated by block 758. This allows the host system 10-2 to communicate with response centers in different geographical areas which may use different standard protocol sequences/procedures for processing support calls. As indicated by block 758-2, the user selects either "RC" or "SC." This results in the user performing the operations of either block 758-4 or block 758-8. For block 758-5, the user only enters the system number information. In the case of block 758-8, the user enters several items of information which are the site identifier, the model, the serial number and a TAC character all of which have some specific meaning to the SC site processing the host system call. In either case, upon completing the entering the required information items, the user executes the dialog according to the instructions on the menu to execute the procedure for storing the system identifier parameters (i.e., "execute dialog in blocks 758-4 and 758-8"). This causes GMIS unit 10-8 to generate a callcfg command. The callcfg command is provided with a command line containing all of the required system identifier parameters defined by the user which are provided or passed in the proper form to callconfig module 10-214 for causing the storage of the user selected system identifier parameters in callconfigfile 10-216. Independent of which procedures are executed, both lead to the operation of block 760 of Figure 7d.

When the user selects the "BRC Phone Numbers" menu item according to block 760, this results in the display of the submenu of Figure 8g. This submenu allows the user to list, add or delete response center telephone numbers sequentially as indicated in block 762. When the user selects the item "Add a BRC Phone Number," this allows the user to enter or configure each of the proper phone numbers as indicated by blocks 764 and 766. The GMIS unit 10-8 generates a callcfg command to carry out the required "execute dialog" of block 766.

As described above, callcfg command is provided with a command line containing the appropriate phone number parameters based upon user selections which are provided to the callconfig module 10-214 for causing storage of the user selected parameters in callconfig file 10-216.

As indicated by block 768 in Figure 7d, the user repeats the operations of blocks 764 and 766 until all of the proper phone numbers have been entered. Next, the user returns to the "site parameters" submenu as indicated by block 770. This involves following the path indicated in Figure 6 for again displaying the submenu of Figure 8f. This time, the user selects the "other side parameters" menu item which results in the displaying of the submenu of Figure 8i.

As indicated by block 774, the user enters other site parameters such as those illustrated in Figure 8i. As shown, these include operator name and phone number, system phone number, remote password, the path name of the terminal (TTY) utilized in making the callout operation and the E-Mail address of the local system operator or to the person whom notification of the callout attempt should be sent. The operator name and phone number enables the TAC 14 to contact the local system operator to arrange for a problem determination session. The remote password enables access to the remote account module 10-403 of callback component 10-403 of Figure 4d. When the local administrator or user does not wish to allow remote access, this item is left blank. It will be appreciated that the actual password is set by using the

"passwd" command facilities of system 10-4. The user then executes the dialog according to the instructions displayed by the submenu of Figure 8i to execute the procedure for processing the entered information. As described above, it causes GMIS unit 10-8 to generate a callcfg command. The callcfg command is provided with a command line containing all of the required user entered other site parameters which are passed in the proper forms to callconfig module 10-214 for causing the storage of such parameters in callconfig file 10-216.

As indicated by block 776, the user backs out to the "configure callout (local modem)" menu of Figure 8e. This is done by sequencing back through the path indicated in menu system of Figure 6. As indicated by block 780, the user determines if the modem being used by host system 10-2 is the normal preconfigured (default) modem connection. If it is not, the user selects the "modem parameters" menu item of Figure 8e (i.e., block 782). This causes GMIS unit 10-8 to display the submenu of Figure 8j as indicated by block 782.

The user performs the sequence of operations of blocks 786 through 810 for certifying that the correct modem communication string parameters are provided for configuring callout communications for both standone alone and cluster server system configurations.

As shown, the user selects the "OK strings" menu item on the display submenu of Figure 8j. This causes GMIS unit 10-8 to display the submenu of Figure 8k as indicated by block 788. As seen from Figure 8k, the user can list, add or delete OK strings. OK strings are the messages sent by the modem indicated the successful completion of a modem command. A list of modem OK strings can be displayed by having the user selecting the "list" menu item of the submenu of Figure 8k as indicated in block 790 of Figure 7d.

In response to block 790, GMIS unit 10-8 displays the current list of modem OK strings without any user dialog. As indicated by block 792, if the user determines that an OK string needs to be added, the user then selects the "ADD OK string" item from the menu of Figure 8k. This causes GMIS unit 10-8 to display the dialog screen of Figure 8l.

Next, the user enters the OK string which for most modems corresponds to the default of "0" and "OK" and presses the enter key. This causes GMIS unit 10-8 to execute the required procedure (i.e., execute dialog) as indicated in block 795. That is, this causes GMIS unit 10-8 to generate another callcfg command. The callcfg command is provided with a command line containing the user entered OK string and command parameters which are passed in the proper format to callconfig module 10-214 for the storage of such parameters in call config file 10-216.

If an OK string does not need to be entered, the user determines if an OK string needs to be deleted as indicated by block 796. If a string is to be deleted, the user selects the "delete OK string" item on menu Figure 8l as indicated in block 797. This causes GMIS unit 10-8 to display a dialog screen similar to that of Figure 8l. This OK string to delete may be entered manually or selected from a list. In this sequence, when a string is selected by the user and the dialog is executed to carry out the procedure (execute dialog) indicated in block 798, GMIS unit 10-8 causes the removal of the selected string from the list. That is, this causes unit 10-8 to generate a callcfg command containing a command line which includes the selected string and command parameters. These parameters are passed in the proper format to call config module 10-214 which accesses config file 10-216 and deletes the specified string from such file.

As indicated in Figure 7d, the user can carry out a similar sequence of operations relative to connect strings. Connect strings are the messages sent by a modem to indicate that a successful communication connection has been established. The operations of blocks 801 through 809 are carried out in the same manner as the list, add and delete operations for the OK strings described above. As shown in block 799, the user backs out to the "modem parameters" menu screen shown in Figure 8j. This is done by following the path indicated in Figure 6.

As indicated in Figure 7d, the user, by selecting the "connect strings" menu item of Figure 8j, causes GMIS unit 10-8 to display the submenu screen of Figure 8m. If a connect string needs to be added, the user selects the "ADD Connect String" submenu item as indicated in blocks 804 and 805. This causes GMIS unit 10-8 to display the dialog menu screen of Figure 8n. Again, the user enters the connect string to be added and executes the dialog. As indicated in block 806, this causes GMIS unit 10-8 to execute the procedure for adding the user entered connect string. That is, GMIS unit 10-8 generates a callcfg command containing a command line which includes user entered "connect string" and command parameters. These parameters are passed in the proper format to call config module 10-214 which accesses config file 10-216 and stores the specified connect string. If a connect string needs to be deleted, the user selects the "Delete Connect String" menu item from the submenu screen of Figure 8m, enters the string to be deleted and executes the dialog as indicated in blocks 807 through 809. This sequence causes GMIS unit 10-8 to execute the procedure for deleting the user selected connect string. That is, GMIS unit 10-8 generates a callcfg command containing a command line which includes the user selected connect string and command

parameters. These parameters are passed in the proper form to call config module 10-214 which accesses config file 10-216 and deletes the specified connect string from the file.

After completing this sequence, the user is able to enter additional modem parameters by backing out to the modem parameters submenu screen of Figure 8j. As indicated by blocks 810, 812 and 814, the user upon selecting the "other modem parameters" menu item on the menu screen of Figure 8j causes GMIS unit 10-8 to display the menu screen of Figure 8o. As indicated in Figure 7d, the user can enter several other modem parameters.

As illustrated in Figure 8o, these include selection of modem network protocol (yes or no), a callback condition string which defines the modem callin conditioning string, a callout condition string which defines the modem callout conditioning string, a dial string which is the modem command string that is used to execute modem dialing operation, a redo string which is a modem command string used to execute a modem dial repeat operation, a disconnect string which is a modem command string used to execute a modem disconnect operation, a hang-up string which is a modem command string used to execute a modem hang-up operation, a busy string which is a modem reply string for indicating when the dialed number is busy, character size (bits) parameter defining the number of bits in a character (5-8), a stop bit parameter indicating the number of stop bits in a character, a parity parameter for indicating odd, even or no parity and a baud rate parameter defining the baud rate of the modem. Upon completing the entering of the parameters, the user executes the dialog which causes GMIS unit 10-8 to execute the required procedure for adding the user entered modem parameters. That is, GMIS unit 10-8 generates a callcfg command containing a command line which includes the other modem and command parameters. These parameters are passed in the proper form to call config module 10-214 which accesses config file 10-216 and stores the other modem parameters in the file.

The final menu item appearing in the "Configure Callout (Local Modem)" menu screen of Figure 8e is "Callout Tuning." The selection of this menu item causes GMIS unit 10-8 to display the callout timing parameters menu dialog screen of Figure 8u. Although not shown in Figure 7d, this sequence would be represented similar to block 776 and 782. A user via the screen of Figure 8u can fine tune several callout parameters to satisfy the host system modem performance requirements. More specifically, the user can fine tune the following parameters: a try condition parameter specifying the number of retries when conditioning the modem, a retry for each number parameter specifying the number of retries to be attempted for each TAC phone number, a delay between busy retries parameter specifying the delay between attempts for retrying a TAC phone number, a modem intercommand delay parameter specifying the delay between items of data sent to TAC 12, and a remote time-out parameter specifying the time-out period for waiting for data from TAC 12. Upon completing the entering of the parameters, the user executes the dialog which causes GMIS unit 10-8 to execute the procedure for adding the callout tuning parameters to config file 10-216 similar to the manner described above.

As indicated in Figure 7d, the user next performs the "perform callout management sequence" of block 830. As indicated in Figure 7d, this sequence would be performed in the case where the host system modem is the same as the preconfigured modem as indicated by block 780. Again, the user would backup to the configure callout (local modem) menu by following the path indicated in Figure 6. The user, by selecting the "callout management" menu item on the menu screen of Figure 8e, causes GMIS unit 10-8 to present the menu screen of Figure 8p. As seen from Figure 8p, the user is able to configure different callout manager operating parameters as required for controlling the manner in which the callout manager processes incoming callout requests received from the host system and any cluster clients. This is done by blocks 832 through 839.

As indicated when the user selects the "change/show callout manager status" item on the menu screen of Figure 8p, this causes GMIS unit 10-8 to display the dialog screen of Figure 8q. The user can enter the amount of time that the callout manager module 10-204 of Figure 3 will delay between consecutive callout requests. Additionally, the user can configure the maximum number of callout message requests that callout manager module 10-204 will queue at one time. After entering the values in the fields of Figure 8q, the user executes the dialog to cause GMIS unit 10-8 to execute the procedure for storing the configured values. This causes GMIS unit 10-8 to generate a chcall command containing a command line including the selected callout manager values and command parameters. These parameters are passed to the chcall module 10-210e of Figure 4b which using the call control file access routines of block 10-210c, stores the user selected callout manager parameters in callctrl file 10-210g.

Also, the user may also want to establish when calld daemon 10-210b of Figure 4b is to be started. As indicated by block 837, this is done by selecting the "start callout manager daemon" menu item on the menu screen of Figure 8p. This causes GMIS unit 10-8 to generate the dialog menu screen of Figure 8r. As shown, the user can choose to start daemon 10-210b now, at reboot time or now and at reboot time. Upon

completing the selections, the user executes the dialog to cause GMIS unit 10-8 to carry out the procedure of storing the daemon configuration values. This causes GMIS unit 10-8 to generate a chcall command containing a command line which includes the user configuration and command parameters. These parameters are passed to the chcall module 10-210e which starts the calld daemon and/or uses conventional system commands to configure boot time behavior. As shown in Figure 7d, this ends the illustrated "callout management" sequence.

It will be appreciated that the user could make other changes or view the status of the callout manager module 10-204 by selecting other parameter items on the menu screen of Figure 8p. For example, the "List Queued Callouts" shows all of the callout requests stored in the callout manager queue. The "Show a Queued Callout" item allows an item from the queue to be shown including the callout contents when a queue index value is supplied. The "Remove Queue Callout" item allows a callout request to be removed from the queue. The "Show Callout Manager Status" item allows the current callout manager configuration and status to be displayed. The "Start Next Callout" item causes the next callout request to start. The "Restart Failed Callouts" causes the status of all failed callout requests to be changed to "Waiting." The "Display and Reset Callout Records" items allow the callout manager's callout log included within file 10-210g to be viewed and erased.

As indicated in Figure 7d, if at block 750 the user determined that the host system was configured to operate a cluster client system then the configure callout (cluster client) sequence of blocks 850 through 858 would be performed. This involves first selecting the "configure callout (cluster client)" submenu. As indicated in Figure 6, this involves selecting the "configure callout (cluster client)" menu item of the callout/callback submenu. This causes GMIS unit 10-8 to display the submenu of Figure 8s as indicated in block 852. These operations are carried out in the same manner as that described in connection with blocks 758 and 752. The user selects the "System Identifier" menu item of Figure 8s which causes GMIS unit 10-8 to display a dialog screen similar to Figure 8f. The user enters the system identifier parameters as a function of the type of support protocol being provided (i.e., "RC" or "SC") and executes the dialog causing GMIS unit 10-8 to execute the procedure. This causes GMIS unit 10-8 to generate a callcfg command including the user selected system identifier and command parameters. These parameters are passed to callcfg module 10-214 of Figure 4b which stores them in call config file 10-216.

In the case of block 856, the user selects the "set other parameters" menu item on the configure callout (cluster client) menu screen of Figure 8s. This submenu allows the user to configure the host client system to make network callout requests to the cluster server system rather than via a directly connected modem. This is done by specifying the host name of a cluster server system rather than response center phone numbers. In response to such selection, GMIS unit 10-8 displays the dialog menu screen of Figure 8t. As shown, the user enters local system specific parameters such as operator name, operator phone number, remote password, cluster server and E-Mail address. After entering the appropriate parameters, the user executes the dialog causing GMIS unit 10-8 to execute the procedure for storing the user selected parameters in call config file 10-216 of Figure 4b. Again, this is done via a callcfg command.

Following completion of the configure callout operation of block D, it is assumed by way of example, that the user next configures the callback function for establishing how callback component 10-400 of Figure 4d is to process callback requests made by TAC 12. Specifically, this refers to how such processing is performed in terms of configuring the level or extent of TAC user access allowed by permissions subcomponent 10-422 and configuring how TAC login sessions are to be monitored by mirroring subcomponent 10-402.

The configuration operation is shown in detail in Figures 7f and 7g. Referring to Figure 7f, it is seen in block 900 that the user selects the "configure callback" menu item on the callout/callback submenu screen which is accessed by the path indicated in Figure 6. The user executes the dialog which causes GMIS unit 10-8 to display the submenu screen of Figure 9a. As indicated by block 904, the user selects the "Configure Permission" menu item which causes GMIS unit 10-8 to display the dialog screen of Figure 9b. In accordance with blocks 906 through 912, if the system is a standalone or cluster server system, the user can choose whether or not remote dial-in access is to be permitted by specifying enabled or disabled. If the system is configured as a cluster client system, such access will always be disabled since dial-in is done by the cluster server system. Next, the user can then set remote user privileges to allow or deny root access to local host system 10-2 in the manner indicated by blocks 914 through 918. This selection is done by entering either a YES or NO command.

After entering the appropriate configure permission parameters, the user executes the dialog. This causes GMIS unit 10-8 to generate a confperm command with a command line containing the user selected permission and command parameters. GMIS unit 10-8 provides these parameters in the proper format to the confperm module 10-428 of Figure 4d which accesses remote configuration file 10-426 for storage of

the user configured parameters.

As indicated in Figure 7f, the user configures the monitoring functionality of subcomponent 10-402. As indicated in Figure 7g, this operation is begun by the user selecting the "configure monitoring" menu item of the menu screen of Figure 9a through the path indicated in Figure 6 and executes. This causes GMIS unit 10-6 to the dialog menu screen of Figure 9c.

In accordance with blocks 920-2 through 920-24, the user enters the appropriate values. The selection of the "session notification interactive" menu item enables session notification. This is used to alert the system operator in real time that the TAC has connected to the local host system 10-2. Using this type of monitoring allows a local administrator to immediately log the remote user off the host system by pressing the "K" key while running showses module 10-413 of Figure 4d. The selection of the "Notification Device" menu item allows the user to specify the device on which session notification will appear when session notification is enabled. The selection of the session logging menu entry enables session logging to be written into a session database file for later viewing. The selection of the Enable E-Mail on call-in menu item enables electronic mail notification to the local system operator that the TAC has connected to the local host system. The "E-Mail address" menu item is used to specify where such notification is to be sent. The Terminal Type for Callback" menu item enables the user to specify the terminal type necessary for making the TAC callback to the host system. As previously indicated, this parameter requires the TAC to use the selected terminal type to ensure that such callback sessions can be viewed on terminal type available within host system 10-2.

After all the parameters have been configured, the user executes the dialog to cause GMIS unit 10-8 to execute the procedure for storing the user selected monitoring parameters. Specifically, this causes GMIS unit 10-8 to generate a confmon command containing a command line which includes the monitoring and command parameters. These parameters are provided to confmon module 10-104 which stores the parameters in mon config file 10-405. This completes the configure monitoring operation of block E of Figure 7a.

Next, the user performs the configure diagnostic operation of block F. This operation sequence allows configuring the rsfd daemon 10-110 of Figure 4a to periodically test the end-to-end connectivity between the host system and the TAC. This diagnostic configuration will check to make certain that a callout request is made by daemon 10-100 when the specified message exceeds threshold by periodically injecting system error log 10-102e with a diagnostic message.

This operation is shown in greater detail in Figure 7h. Referring to Figure 7h, it is seen that the operation involves execution of blocks 930 through 942. As indicated by block 930, the user selects the "actions" menu item on the remote services facilities menu obtained by following the path specified in Figure 6. This results in GMIS unit 10-8 displaying the submenu of Figure 10a. The user next selects the "configure diagnostic" menu item and executes the dialog. In response to such selection, GMIS unit 10-8 displays the dialog menu screen of Figure 10b. As indicated in Figure 10b, the user enters the appropriate parameters according to blocks 936 through 942 and executes the dialog. This causes GMIS unit 10-8 to execute the procedure for storing the user selected parameters for accessing by daemon 10-110. That is, GMIS unit 10-8 generates a confdiag command which includes the user selected command parameters. These parameters in the proper form are passed by GMIS unit 10-8 to the confdiag program 10-106 of Figure 4a. The program 10-106j utilizing the configuration routines of RSF library 10-104 enables storage of the specified parameters within diagnostic configuration file 10-102g.

Upon completing the operations of Figure 7h, next the user performs the configure daemons operation of block G of Figure 7a. The operation involves the execution of blocks 950 through 962 as shown in Figure 7i. Referring to Figure 7i, it is seen that the user again selects the "actions" menu item on the remote services facilities menu. This results in GMIS unit 10-8 displaying the submenu of Figure 10a. The user next selects the "start RSF daemon" menu item and executes the dialog. This causes GMIS unit 10-8 to display the dialog menu screen of Figure 10c. As indicated by block 956, the user is asked to specify if the RSF daemon 10-110 is to be started now, at system reboot or both. The user enters the selection and executes the dialog. This causes GMIS unit 10-8 to execute the procedure for storing the user selected parameters. Specifically, it generates a chrfs command line containing the specified command parameters. These parameters in the proper form are passed to the chrfs program 10-106i. Program 10-106i utilizing the appropriate routines of library 10-104 starts the rsfd daemon and/or uses conventional system commands to configure boot time behavior.

Next, the user specifies when the cluster server daemon netactd of block 10-320 is to be started. As indicated in block 960, the user selects the "start cluster daemon" menu item of dialog menu screen of Figure 10a and executes the dialog. This causes GMIS unit 10-8 to display the dialog menu screen of Figure 10d. The user is asked to specify if the cluster daemon 10-320 is to be started now, at system

reboot or both. The user enters the selected choice and executes the dialog. This causes GMIS unit 10-8 to generate another chrsh command line containing the specified command which are passed in the correct form to chrsh program 10-106i. The program utilizing the appropriate routines of library 10-104 starts the netactd daemon 10-320 and/or uses conventional system commands to configure boot time behavior. This completes the configure daemon's operation of block G of Figure 7a. At this point, the user will have completed configuration of each of the RSF components of Figure 3 preconditioning RSF unit 10-10 as desired.

DESCRIPTION OF OPERATION

Figures 11a through 13d illustrate how certain ones of the RSF components of Figure 3 operate as configured to carry out the remote support function.

Referring first to Figures 11a through 11c, these figures are used to explain the operation of problem detection and reaction component 10-100 of Figure 4a. This component operates under control of daemon 10-110. As discussed, rsfd daemon 10-110 detects problems by scanning the system error log 10-102e and ASCII file 10-102f in addition to any other configured source for specific messages and keeping count of how many messages of each kind it finds and determining whether or not a message is overthreshold. If a message is overthreshold, rsfd daemon 10-110 executes an action.

As previously described, for each configured source, there is a record stored in control file 10-102b containing assigned attributes, such as how often to scan the source for new messages, how often to clean its database and what action to execute if one of the messages in the source goes over threshold. Also, rsfd daemon 10-110 maintains the message template database for each source containing the search criteria for each message which it uses to scan for particular messages and to count the messages that are being searched for on the source. Also, rsfd daemon 10-110 also performs diagnostic callouts. As discussed, it can be configured to generate a callout action at specific predefined configured time intervals. These operations are diagrammatically illustrated in the simplified diagram of the problem detection and reaction component 10-100 shown in Figure 11a.

Referring to Figure 11b, it is seen that first, rsfd daemon 10-110 performs the setup operation of block 1100. This operation is shown in greater detail in Figure 11c. As indicated by blocks 1100-2 and 1100-4, daemon 10-110 opens the source attributes database 10-102b and begins reading each of the records from the database. Each database record read out is read into an area of main memory 10-3 as indicated in block 1100-10 for building an internal list of such records. The daemon 10-110 uses the search time parameter in each such record to schedule a search event for the specified source as indicated by block 1100-12. It uses the clean time parameter in each such record to schedule a clean event for the source as indicated by block 1100-14.

The daemon 10-110 performs the operations of blocks 1100-10 through 1100-14 for all of the sources having records in the source attributes database 10-102b. Upon completion of this operation, which is signalled by an end of file indication, daemon 10-110 next reads the diagnostic configuration parameters from diagnostic configuration file 10-102g as indicated by block 1100-6. As indicated by blocks 1100-8 and 1100-9, when the parameters indicate that the diagnostic feature has been enabled, daemon 10-110 uses the diagnostic frequency parameter to schedule a diagnostic event. This completes the setup operation of block 1100. At this time, the daemon 10-110 will have scheduled all of the different events in an event queue which will control its operation from that time.

Following setup, daemon 10-110 will enter a loop wherein it will wait for the occurrence of the next event as indicated by block 1102. When the event occurs, daemon 10-110 gets the event from the event queue and schedules the next occurrence of that event as indicated by blocks 1104 and 1106. Next, daemon 10-110 performs a dispatch operation of block 1108 based on the type of event to one of the routines of blocks 1108, 1110 and 1112 (i.e., search type, clean type and diagnostic type). When it is done processing the event, daemon 10-110 returns to block 1102 to wait for the occurrence of the next scheduled event.

Figure 11d shows in greater detail, the search operation of block 1108. As seen from Figure 11d, in processing the search event, daemon 10-110 reads messages from the log file for that source as indicated by block 1108-2. It will continue to process any new messages that are in that log file as indicated by block 1108-4. In order to read each message from the log file, it performs a dispatch operation based upon the log type as indicated by block 1108-12 (i.e., constructs a dispatch call based on log type). The daemon 10-110 uses the source type parameter to determine which routine to call to read the message. In the present host system, there are two types of search routines, one for reading ASCII log file 10-102f and another for reading system log file 10-102e. As indicated by block 1108-12, once a message has been read, daemon

10-110 again uses the source type parameter to determine which routine to call to search for a match through the message templates for that source. In the case of ASCII log file 10-102f, daemon 10-110 calls the regular expression matching search routine which looks for regular expressions in records in the source's message template database which match the record just read from the ASCII log file as indicated by block 1108-14. In the case of system log file 10-102e, daemon 10-110 calls the error ID search routine which looks for error ID parameters in the source's message template database which match the error ID parameter contained in the record just read from the system log file as indicated by block 1108-16.

As indicated by block 1108-18, when a match is detected, daemon 10-110 updates the count parameter in the template database message for the message in which the match was found. Daemon 10-110 then checks for an overthreshold condition as indicated by block 1108-22. This is done by determining if the count in the template database message exceeded the configured count value previously obtained from source attribute control file 10-102b. When the count has been exceeded, daemon 10-110 executes the action configured for that particular source as indicated by block 1108-24. As previously discussed, in the preferred embodiment, there are two supplied actions, a mail notification action and a callout action. This results in daemon 10-110 invoking the mailact module 10-202, the callact module 10-218/10-312 of Figure 3 or whatever action has been selected.

Following that, daemon 10-110 continues on with reading messages. When there are no more messages to be read from the source log file by an end of file, daemon 10-110 returns to block 1114 of Figure 11b.

Figures 12a through 12c are used to illustrate the operation of callback component 10-400 relative to how the configured parameters as used to control its operation. Figure 12a illustrates diagrammatically, the operational flow through the different configured subcomponents of callback component 10-400 when a remote user at TAC 14 dials into the host system 10. As shown, the operating system kernel and drivers of block 10-4 are utilized to allow the remote user called "remote" to dial back into the host system "getty" daemon. The getty daemon will accept the connection to host system 10 and spawn a shell for the user to run the remote user's profile file. In the present invention, the .profile file is a special .profile file corresponding to .profile module 10-403 which is part of RSF unit 10-10. The .profile module 10-403 performs certain functions pertaining to callback component 10-400 such as starting callscript module 10-406.

Figure 12b illustrates the sequence of operations performed by .profile module 10-403. As indicated in block 1202, module 10-403 performs a setup operation and starts callscript module 10-403. Also, .profile module 10-403 includes means for trapping remote user control signal sequences normally used to gain control of the host system. This operates as a security mechanism.

Next, module 10-403 queries the mon.conf file 10-405 via confmon module 10-404 to read out set configuration parameters to determine what terminal TYPE is to be used for callback as indicated in block 1204. If the TYPE parameter has been set, .profile module 10-403 will set the TERM environment variable in memory to the configured value. If there is no configured TYPE parameter, module 10-403 will use the default value. This completes blocks 1208 and 1210. It then displays any desired proprietary message (e.g. copyright notice) as indicated in block 1212 and then queries the mon.conf file 10-405 via confmon module 10-404 to read out the configuration parameters for the E-Mail address to send notification of remote log-in and log-out operations as indicated in block 1214. If an E-Mail address has been preconfigured, module 10-403 sends notification to the configured address, notifying that a remote user has logged onto host system as "remote" as indicated in blocks 1216 and 1218.

Next, as indicated by block 1220, module 10-403 queries the mon.conf file 10-405 via confmon module 10-404 to read out the configuration parameters to determine whether or not any of the scripting options such as direct terminal, monitoring, interactive monitoring or session logging have been enabled. If direct to terminal monitoring has been enabled, module 10-403 builds a command line for callscript module 10-406 containing the argument parameters which will support direct to terminal monitoring as indicated by blocks 1222 and 1224. If session notification-interactive monitoring or session logging has been enabled, module 10-406 will build a command line for supporting the corresponding scripting option as indicated by blocks 1226 through 1232. Upon completing the building of the command line, module 10-403 next determines if there are any arguments on the command line for establishing if any one of the above scripting options has been enabled. If none of the options have been enabled, module 10-403 runs the GMIS unit 10-8 directly as represented in Figure 12a as a dotted line (i.e., block 1238). However, if a scripting option has been enabled, module 10-403 will invoke the callscript module 10-406 and pass the argument parameters supporting the enabled option to it with a command specifying that callscript module 10-406 also run GMIS unit 10-8 as a subtask (see block 1236).

At this point, the GMIS unit 10-8 is running, the "remote" user has logged into the host system and is carrying out the required support operations. More specifically, when the "remote" user has logged into the host system, the callback administration menu of Figure 12d is presented to the "remote" user. As shown in Figure 12d, there are several selectable menu items. These include crash analysis, list overthreshold messages, root login, user login and run GMIS. Selecting the crash analysis menu item is a privileged task requiring use of module 10-430. It causes the "crash" command utility of the host system to be run against the host system's primary dump device. The crash command requires "root" access and, therefore, is allowed or not allowed as a function of how permission subcomponent 10-422 has been preconfigured using the confperm command.

The list overthreshold messages menu item when selected causes the generation of a list message command (lsmsg) with appropriate command line parameters. This causes lsmsg command program 10-106f of Figure 4a to cause a display of a list of all the overthreshold messages and the text of each message that caused the overthreshold condition.

The root login menu item is a privileged task requiring use of module 10-430. When selected, it spawns a "super user" shell from which the "remote" user can have access to all host system functions. Again, access to this menu item is granted as a function of how permission subcomponent 10-422 has been configured by the local system administrator via the confperm command. The "user login" menu item is a non-privileged task requiring use of module 10-432. When selected, an ordinary user shell is spawned from which the "remote" user can have access to user host system functions.

The run GMIS menu item is a non-privileged task requiring the use of module 10-432. The selection of this menu item causes the GMIS unit main menu to be displayed to the "remote" user and allows ordinary user access to all of the functions available from the GMIS unit 10-8.

When the remote user logs out, control is returned to profile module 10-403 which performs the operations of blocks 1240 and 1242 before closing. It needs to send E-Mail notification of the logout. Therefore, it queries the mon.conf file 10-405 via confmon module 10-404 to determine if an E-Mail address has been configured (i.e., block 1240). If it has, module 10-403 sends an E-Mail notification message to the configured address notifying the occurrence of the logout (see block 1242). It then will perform the required cleanup operations and exit.

While the remote user is logged into host system 10, the remote user is running the GMIS unit 10-8. From this unit, the user has the option of running several different tasks, some of which are non-privileged and some of which are privileged. The system administrator on the host system is normally responsible for saying whether or not the remote user is allowed to run these privileged tasks. The running of such tasks is under the control of doremote module 10-424 which uses the configuration parameters stored in remote.conf file 10-426. Anytime the remote user attempts to run one of these privileged tasks, this invokes doremote module 10-424. This module runs as a setuid program on the UNIX based system which means that it is capable of obtaining super user privileges as it requires. Hence, it is able to bestow such privileges to run such privileged tasks. However, before carrying out such a task, it first examines the command line parameters to determine which privileged task is requested. It then queries the remote.conf file 10-426 to determine if the task is allowed. If it is not allowed, module 10-424 will print a permission denied error. If it is allowed, module 10-424 performs the task. This sequence of operations is shown in blocks 1250 through 1260 of Figure 12c.

Figures 13a through 13d as used to describe the hot key capability of callback component 10-400 according to the present invention. Figure 13a diagrammatically illustrates the operational flow of a hot key operation which will be described in connection with the flow charts of Figures 13b through 13d. In order to understand the hot key capability, it is helpful to understand how callscript module 10-406 operates. As previously discussed, callscript module 10-406 performs all of the actual scripting of the session when a remote user logs into host system 10. As indicated in blocks 1300 through 1306, when callscript module 10-406 starts up, it parses its command line arguments and determines what all of its inputs and outputs are. It then starts a subshell. If the provided command line has been set up to request the creation of a PID file, then callscript module 10-405 writes the PID of the subshell into PID file 10-407. As indicated in blocks 1308 through 1340, it will then enter a main loop wherein it reads from its inputs and writes to its outputs. At the same time, it checks to see if the subshell has exited. When the subshell exits, callscript module 10-406 performs cleanup and exits.

While these operations are taking place, the local administrator upon receiving notification of the occurrence of the remote user login may want to monitor the current session initiated by the TAC. The administrator does this by running "showses" module 10-412 via terminal 10-12 as indicated in Figure 13a. When invoked, showses module 10-412 executes the sequence of operations shown in blocks 1350 through 1356 of Figure 13c.

As indicated, module 10-412 checks for the current session file in file 10-408. If the current session file does not exist, it displays a message saying there is no current session. If the current session file exists, module 10-412 invokes showscript module 10-414 and passes the proper arguments to it for monitoring that current session file. It also passes to module 10-414, the PID obtained from PID file 10-407.

5 Showscript module 10-414 performs the sequence of operations indicated in blocks 1360 through 1374 of Figure 13d. As shown, the module parses its command line arguments, reads from session file 10-408 and writes to the local system administrator terminal 10-12. While it is reading from session file 10-408 and writing to terminal 10-12, showscript module 10-414 also checks to see if anyone is typing on the keys of local administrator console 10-12.

10 Because the administrator can hit a "hot key" to terminate the session, module 10-406 checks to see if any key has been selected. If the "k" key has been selected, this signals showscript module 10-414 that it has to terminate the session. In so doing, module 10-406 first checks if the PID was specified on the command line which it would have been because that is how showses module 10-413 executes. That is, showses module 10-413 is programmed to read the PID from file 10-407 and pass it to showscript module
15 10-414. Upon seeing that the PID is specified, module 10-414 sends a "kill" signal to GMIS unit 10-8 as indicated in Figure 13a. If the key selected is not the "k" key but the "Q" key, module 10-414 performs cleanup operations and exits. By having the modules of Figure 13a operate in the described manner, this provides the local administrator with a hot key capability thereby providing the local user with greater control over callback sessions.

20 From the above, it is seen how the RSF components of the present invention can be configured and in turn how such configuration information controls the operations of such components. The organization of the RSF unit into such basic components facilitates configuration as well as expansion. According to the teachings of the present invention, each component can be configured with a small manageable set of commands. Also, new sources can be easily added or deleted and any action program can be easily
25 specified to perform any desired type of support notification operation.

30

35

40

45

50

55

APPENDIXSECTION I DESCRIPTION OF COMMANDS
AND COMMAND PROGRAMS1. **callact Module**

Syntax:

```
callact source_identifier description_file
        message_identifier
```

Description

Callact is a utility which executes an action (i.e., it may be configured as an action that is taken by the RSF unit when an over-threshold condition occurs). The callact action sends a callout record to a response center location according to the parameters configured with the callcfg command.

If configured for a standalone host system which has a modem attached, callact will use the callout manager module (see mkcall) to send a callout record to a response center. In a clustered host environment (where there is one machine with a modem and several other LAN connected machines which share that modem over the network) callact may redirect callout requests to the callout manager on a specified central node which has a modem which is used, in turn, to call a response center.

The callout record that is sent to the response center is created by callact and includes the following items:

```
Current date and time
Site callout configuration (phone numbers, system
ID, etc.)
The text of the over threshold message:
"description_file"
Information about the operating system (uname -svr)
Information about hardware configuration (lscfg -v)
```

Callact may also be configured to send mail to a given E-Mail address whenever a callout is made.

This utility is not used from the command line or from GMIS. It is invoked by rsfd daemon process as an action.

Options

source_identifier Which monitored source is involved with this action.

description_file File containing text of over-threshold message.

message_identifier ID of the message that is over-threshold.

Related Information:

The following commands/programs: callcfg, callforce, netact, netactd, netcall, mkcall, lscall, rmcall, chcall, calld, callout, callbin.

2. callbin Command Program

Syntax:

```
callbin -p primary-code -s secondary-code -f file
        -S "site_information"
```

Description

Callbin uses a modem to communicate with a response center to deliver RSF messages. This is a lower level program, not meant to be run from the command line or from GMIS, but which is called from the "callout" script.

The primary and secondary error codes provide the following high level information about the message being sent.

Primary Code	Secondary Code	Meaning
0x0001	0x0000	Undetermined Error
0x0001	0x0001	Hardware Error
0x0001	0x0002	Software Error
0x0001	0x0003	Operator Message
0x0002	0x0000	Forced Callout

This command program uses parameters configured with the callcfg command to control telephone numbers dialed, the tty port of the modem used, modem control strings used,

site identification information sent to the response center, and other configurable parameters such as delays, retries, and tracing controls.

5 This command program relies on its wrapper, "callout", to ensure that the modem is not in use by another application (such as ate, or cu).

10 The contents of the specified file are sent to the response center as the "free-form buffer" of the callout record. There is an imposed 65 Kilobyte maximum length for the data in this file. If the file is larger, the message will be truncated.

15 If "site_information" is not provided, the local site information (as configured with callcfg) will be sent in the callout record. The -S option is used to specify site identifier information for LAN connected RSF "cluster clients".

20

Options

-p primary-code Hexadecimal Primary Error Code
(see above table)

25

-s secondary-code Hexadecimal Secondary Error Code
(see above table)

30

-f file File specifying content of callout
record

-S "site_information" Site identifier (from cluster
clients)

35

Related Information:

The following commands/programs: callcfg, callact,
callforce, netact, netactd, netcall, mkcall, lscall,
rmcall, chcall, calld, callout.

40

45

50

55

3. callcfg Command

Syntax:

```

callcfg [opphone='phone number']
        [opname='operator name']
        [mail='mail addr'] [sysphone='phone number']
        [passwd='password'] [suptype='RC or SC']
        [siteid='SC site'] [model='SC model']
        [serial='SC serial #'] [tac='SC tac char']
        [sysid='RC system ID']
        [calltype='modem or network']
        [server='cluster server'] [tty='tty path']
        [cbits='character bits'] [sbits='stop bits']
        [parity='line parity'] [baud='baud rate']
        [mnp='yes or no']
        [condout='callout conditioning string']
        [condin='callback conditioning string']
        [dial='dial string']
        [{add | del} phone 'phone number']
        [{add | del} ok 'ok string']
        [{add | del} connect 'connect string']
        [redo='redo string']
        [disconnect='disconnect string']
        [hangup='hangup string'] [busy='busy string']
        [tryphone='retries per each phone number']
        [trycondition='retries conditioning modem']
        [comdelay='modem inter-command delay']
        [busydelay='delay between busy retries']
        [remdelay='remote latency delay']
        [remtimeout='remote time out']
        [tracelevel='0-10'] [tracefile='pathname']
        [-s] [-m] [-t] [-a]

```

Description

The callcfg command is used to set and display all of the parameters relating to the autodial function including those used on cluster clients. The various options are explained below. There are GMIS menus for this command. Use the GMIS fastpath "brc_callout" for local modem configuration, or "brc_cluster_callout" for cluster client configuration.

Options

opphone= Sets the phone number of the local system administrator. This information is included in all callout records set to the response center.

opname= Name of the local system administrator.

This information is included in all callout records set to the response center.

5	mail=	E-Mail address to which notification of all callouts from this system will be posted. No E-Mail will be sent if this parameter is set to "" (the empty string).
10	passwd=	Sets the published password of the "remote" account as it is sent to the response center in a callout record. Setting this parameter DOES NOT actually set the login password on "remote". Setting the login password is a separate operation. This parameter is optional, but should be set to the real password of "remote" if call-back support is desired and should be changed to the current password whenever the password of "remote" is changed.
15	suptype=	This parameter sets the type of response center protocol that will be called when a callout occurs. Set this parameter to "RC" for RC response centers or "SC" for SC response centers. If set to RC, the "sysid" parameter must also be set. If set to SC, the following parameters must also be set: siteid, model, serial, tac.
20	sysid=	This parameter sets the system identifier for this system. This parameter is required only for use with RC response centers.
25	siteid=	This parameter sets the site identifier for this system. This parameter is required only for use with SC response centers.
30	model=	This parameter sets the model name of this system. This parameter is required only for use with SC response centers.
35	serial=	This parameter sets the serial number of this system. This parameter is required only for use with SC response centers.
40	tac=	This parameter sets the Technical Assistance Center (TAC) ID of the responsible TAC. This parameter is required only for use with SC response centers.
45	calltype=	If set to "modem" this configures the autodial facility to work with a local

55

modem (attached to this machine). If "modem" callout is configured then the following other callcfg parameters must also be set: tty, cbits, sbits, parity, baud, mnp, condout, condin, dial, redo, disconnect, hangup, busy, tryphone, trycondition, comdelay, busydelay, remdelay, remtimeout, tracelevel, and tracefile, BRC phone number(s), OK strings and connect strings. If set to "network" then this machine is assumed to be a cluster client which, lacking a modem of its own, must use a cluster server to perform the callout. If "network" callout is configured then the "server" callcfg parameter must also be set.

server= This parameter sets the hostname of the cluster server machine. This parameter is required only when calltype=network.

tty= This parameter sets the TTY device (e.g. /dev/tty1) that will be used for callout and call-back. The port for this device must have a modem attached and should be configured as a shared line if call-back support is desired.

sysphone= This parameter sets the phone number that may be used to call back to this system. This is the phone number of the modem attached to the port associated with the device specified with "tty=".

cbits= This parameter sets the number of bits (5-8) per character that are used when communicating with the response center.

sbits= This parameter sets the number of stop-bits (1/2) that are used when communicating with the response center.

parity= This parameter sets the parity setting (none, even, odd) that is used when communicating with the response center.

baud= This parameter sets the baud rate (e.g. 1200, 2400, 4800, 9600) that is used when communicating with the response center.

mnp= This parameter sets whether or not the modem being used is a modem network protocol (MNP) type of modem. These modems

require an extra disconnect command when closing a connection.

5 **condout=** This parameter sets the modem conditioning string that is used when conditioning the modem for callout.

10 **condin=** This parameter sets the modem conditioning string that is used after a callout to make the modem ready to accept calls back.

15 **dial=** This parameter sets the modem control string that will be used to dial out.

20 **{add | del} phone 'phone number'** This syntax is used to add or delete phone numbers from the list of response center phone numbers. During a callout these numbers will be tried in sequence until a successful connection is made.

25 **{add | del} ok 'ok string'** This syntax is used to add or delete strings from the list of possible "OK" strings that may be returned by the modem.

30 **{add | del} connect 'connect string'** This syntax is used to add or delete strings from the list of possible "connection achieved" strings that may be returned by the modem.

35 **redo=** This parameter sets the modem control string that will be used to retry the dial out command in the event of a failed connection. If the modem being used does not support a redo command then set this parameter to "" (the empty string). In this case the entire dial out command will be re-sent to the modem on a retry.

40 **disconnect=** This parameter sets the modem control string that will be used to end a modem connection.

45 **hangup=** This parameter sets the modem control string that will be used to hang up after ending a modem connection.

50 **busy=** This parameter specifies what string to expect from the modem if the dialed number is busy.

55 **tryphone=** This parameter sets how many times to retry

making a connection with each telephone number if the connection fails for any reason.

5 **trycondition=** This parameter sets how many times to retry conditioning the modem if modem conditioning should happen to fail.

10 **comdelay=** This parameter sets the number of seconds to pause before sending commands to the modem.

15 **busydelay=** This parameter sets the number of seconds to wait between retries making a connection if the connection failed because the phone was busy.

20 **remdelay=** This parameter sets the number of seconds to wait before sending data to the response center.

25 **remtimeout=** This parameter sets the number of seconds to wait for data from the response center before giving up.

Example

30 To set the local system administrator's name to "John Smith", add a phone number to the list of response center phone numbers, change the delay between retries on each phone number to 1 minute, and then display the complete configuration:

35 **callcfg opname="John Smith" add phone 5553421**
busydelay=60 -a

Files

40 **/var/call/call.conf** A binary file which stores the configuration managed by this command.

Related Information:

45 The following commands/programs: **callact, callforce, netact, netactd, netcall, mkcall, lscall, rmcall, chcall, calld, callout, callbin.**

4. **calld Daemon Program**

50 **Syntax:**

calld**Description**

The RSF callout manager program controls the sequencing and timing of callouts to a response center. It manages a queue of callout requests. The queue is manipulated with the `mkcall` and `rmcall` commands. Requests and parameters are viewed with the `lscall` command. Configuration parameters are set with the `chcall` command.

This daemon controls the timing of callout requests according to the parameters configured with `chcall`. Callout requests are serviced on a first-come-first-serve basis. The `calld` daemon is started and stopped using the `chcall` command.

A log of all callout requests executed by the callout manager daemon is kept in `/var/call/callout.log`.

Files

`/var/call/calls/call.ctrl` A binary file which stores the callout manager queue and configuration parameters.

`/var/call/callout.log` Log file listing all callouts invoked by the callout management daemon and the results of each.

Related Information:

The following commands/programs: `callcfg`, `callact`, `callforce`, `netact`, `netactd`, `netcall`, `mkcall`, `lscall`, `rmcall`, `chcall`, `callout`, `callbin`.

5. callforce Command Program**Syntax:**

`callforce [-b] [-f file]`

Description

`Callforce` sends a callout record to a response center according to the parameters configured with the `callcfg` command.

This command program is normally used for testing

purposes.

If a file is specified with the `-f` option then the contents of the file are sent as a part of the callout record, otherwise a text editor is invoked (using the EDITOR environment variable or `"vi"` as a default) and the message to be sent may be entered.

If configured for a standalone host system which has a modem attached, callforce will use the "callout" program to send a callout record to a response center. In a clustered environment (where there is one machine with a modem and several other LAN connected machines which share that modem over the network) callforce may redirect callout requests to the cluster server configured with callcfg.

The callout manager program is bypassed for forced callouts. This implies a higher priority for forced callouts.

The callout record that is sent to the response center is created by callforce and includes the following items:

- Current date and time
- Site callout configuration (phone numbers, system ID, etc.)
- The message to be sent
- Information about the operating system (`uname -svr`)
- Information about hardware configuration (`lscfg -v`)

This utility is used from the command line. It is not available from GMIS.

Options

- `-b` Do the callout in the background.
- `-f file` Use the contents of the specified file as the message to send.

Example

To send the contents of a file to a response center

```
callforce -f message.file
```

Related Information:

The following commands/programs: `callcfg`, `callact`, `netact`, `netactd`, `netcall`, `mkcall`, `lscall`, `rmcall`, `chcall`, `calld`, `callout`, `callbin`.

6. callout Command Program

Syntax:

```
callout -p primary-code -s secondary-code -f file
        -S "site_information" [-bdr]
```

Description

This program is a wrapper for the "callbin" program which uses a modem to send a message to a response center. This wrapper script manages the modem's tty port.

If the tty port is in use by another application (such as ate or cu), callout will either wait until the line becomes free, or put itself in the background and wait for the line to become free, depending on the given arguments.

While callbin is using the line the tty will be disabled and then reset to its previously configured state when callbin is finished.

This program is not meant to be executed from the command line or from GMIS. It is called from the callout manager daemon (calld), the RSF daemon (rsfd), and the netcall and callforce scripts.

See callbin for information about the -p, -s, -f, and -S options.

Options

-p primary-code	Hexadecimal Primary Error Code (see callbin)
-s secondary-code	Hexadecimal Secondary Error Code (see callbin)
-f file	File specifying content of callout record (see callbin)
-S "site_information"	Site identifier (see callbin)
-b	Run callout in the background whether or not the line is currently in use by another application

-d Print a message and run callout in the background if the line is currently in use by another application

-r Remove the file specified by -f when callbin is finished.

Files

/etc/locks/LCK.* Lock files used to synchronize access to serial lines

Related Information:

The following commands/programs: callcfg, callact, callforce, netact, netactd, netcall, mkcall, lscall, rmcall, chcall, calld, callbin.

7. callscript Command Program

Syntax:

```
callscript [-c command] [-f file] [-t tty]
           [-s session_file]
           [-l ctrl_file]
```

Description

This command program is used to support the RSF call-back environment's remote session scripting/mirroring features.

The standard script command program allows only a user shell to be scripted. This command program allows a command to be specified on the command line. When the specified command exits the scripting session completes. If no command is given, callscript uses the current user's \$SHELL, or /bin/sh.

The -f, -t, and -s options allow files/devices to be specified as destinations for scripted data. Each option represents a different form of scripting (see below). Any of these options may be specified multiple times with different destinations (e.g. callscript -f file1 -f file2).

This command program is not used directly by RSF users and is not available from GMIS.

Options

-c command Runs the specified command instead of user's shell.

5 **-f file** Standard "script" command style output. Verbatim copy of all data sent to, received from the user's terminal including control codes and carriage returns.

10 **-t tty** Mirrors the session on the terminal associated with the specified tty device. The tty may be a real tty (e.g. "/dev/tty1") or a pseudo-tty (e.g. "/dev/pts/4"). The specified tty will be put into "raw" mode for the duration of the mirroring and will be put back to its original state when the session is over.

15 **-s session_file** Writes a file in a special format that includes timing information. This kind of file can be played back like a movie using the "showscript" command. The showscript command program can also be used to strip the timing information out. This results in a regular script file.

20 **-l ctrl_file** If this option is given, the PID of the command program being scripted is written to the specified file.

25

30

Example

35 To script a curses GMIS session to a session file named "session".

callscript -c smitty -s session

Related Information:

40 The following commands/programs: confperm, doremote, confmon, callscript, showscript, showses, lsles, showlses, rmlses

8. chcall Command

Syntax:

50 chcall [-d delay] [-m maxcalls] [-n] [-r]

```
[-s (now | reboot | both)]
[-x (now | reboot | both)]
```

Description

The RSF callout manager controls the sequencing and timing of callouts to a response center. It manages a queue of callout requests. The queue is manipulated with the `mkcall` and `rmcall` commands. Requests and parameters are viewed with the `lscall` command. The queue is serviced by the callout manager daemon (`calld`).

This command is used to configure parameters that are used by the callout manager daemon (`calld`) to control when callouts will be taken off of the callout manager queue and sent to a Bull Response Center.

The delay specified with the `-d` option controls the time interval between sending callouts when there are multiple callouts in the queue. This delay keeps the modem from being "hogged" when there are many callout requests that occur within a small period of time. The delay allows a remote service representative to log in (if configured). If the delay is set to "Infinite" then the callout manager daemon will not start another callout until the `"chcall -n"` command is run. If the delay is set to "None" then callouts will always be started the moment they are enqueued. Other valid delays are of the form `(1-999)-(hours | mins | secs)`.

The `maxcalls` parameter specified with the `-m` option sets an upper limit on the length of the callout manager queue. If the number of items in the queue reaches this number then no more callout requests may be enqueued until items are taken off the queue by `rmcall` or `calld`.

The `-n` option will cause the next callout request on the queue to be started. This is normally used when the delay parameter is set to "Infinite" and manual intervention for callout request processing is desired.

The `-r` option will re-start callouts that have failed. When `calld` executes a callout request and the "callout" command fails, the callout remains in the callout manager queue with a status of "F". These callouts may be tried again (presumably after the problem that caused the callout failure has been rectified) by running `"chcall -r"`.

The `-s` and `-x` options are used to start and stop the callout manager daemon (`calld`) and to configure whether or not this daemon should be started automatically at

boot time. The -s option starts calld and the -x option stops calld.

This command is available from within GMIS. The fastpath is "brc_callman".

Options

-d delay	Set the delay between callouts
-m maxcalls	Set the max. length of the callout manager queue
-n	Start the next callout
-r	Re-start failed callouts
-s when	Start the callout manager daemon
-x when	Stop the callout manager daemon

Example

To set the delay between callouts to 10 minutes:

```
chcall -d 10-mins
```

Files

/var/call/calls/call.ctrl A binary file which stores the callout manager queue and configuration parameters.

Related Information:

The following commands/programs: callcfg, callact, callforce, netact, netactd, netcall, mkcall, lscall, rmcall, calld, callout, callbin.

9. chmsg Command**Syntax:**

```
chmsg -n source_identifier -I message_identifier
[(-i newid | -e expression)] [-t threshold]
[-d duration] [-k keepmax] [-r]
```

Description

The chmsg command is used to modify the attributes of a monitored message in the RSF unit. The identifier of the message and the identifier of the source to which it belongs are required options. The following attributes of the message can be changed with this command:

message id This is the hexadecimal identifier used by the RSF unit to differentiate between messages.

expression This is the regular expression used for pattern matching log messages. For example, consider the following fictional log messages:

```
BUS ERROR: CONTROLLER NUMBER 5
BUS ERROR: CONTROLLER NUMBER 6
```

Although these two messages are not syntactically identical, they are both reporting a problem with the bus. The RSF unit uses regular expressions to match these messages together.

The following regular expression could be used to categorize all bus errors regardless which controller failed:

"BUS ERROR:CONTROLLER NUMBER .*"

threshold This is the integer number of a given message which the RSF unit must record before it will perform an action. When the threshold has been reached, the next message of that type will result in an action.

duration This is the time period during which a given threshold must be exceeded to result in an action. For example, the RSF unit may be configured to perform an action if message x is detected n times during time duration t. The duration must be specified as follows:

{0-999}-(days | hours | mins)

keepmax This will specify the maximum number of the given message that will be stored by the RSF unit. This will eliminate the possibility of runaway error messages creating a runaway RSF database.

Options

-n source_identifier Specifies the identifier of the source.

-I message_identifier Specifies the identifier of the message.

-I new_message_identifier Specifies the new id for the message.

-e expression Specifies the new regular expression for the message.

-t threshold Specifies the new threshold value for the message.

-d duration Specifies the new duration value for the message.

-k keepmax Specifies the new keepmax value for the message.

-r Resets the message count to zero.

Example

To change message FFFFFFFF for source "testsource" to have a threshold of 25 and a duration of 1 day:

```
chmsg -n testsource -I FFFFFFFF -t 25 -d 1-day
```

Related Information:

The following commands/programs: chrsf, chmsrc, rsfd, lsmsg, lsmsrc, mkmsg, mkmsrc, rmmsg, rmmsrc, netact, netactd.

10. chmsrc Command**Syntax:**

```
chmsrc -n source_identifier [-i new_source_identifier]
      [-t type] [-p path] [-a action] [-c cleantime]
      [-s searchtime] [-f initialization_file] [-b]
      [-u] [-e] [-r]
```

Description

The chmsrc command is used to modify the attributes of a monitored source in the RSF unit. The identifier of the monitored source is a required option. The following attributes of the source can be changed with this command:

source identifier	This is the ASCII identifier specified by the user for the monitored source.
type	This is the type of the source. It can be either ASCII or SYSTEM. A SYSTEM source is the system log and an ASCII source can be any log file in ASCII format.
path	This is the path to the source, or log file, to be monitored.
action	This is the path to the action which will be executed when the RSF unit detects that a message has gone over threshold.
cleantime	This is the time interval at which the RSF database is flushed. The following format is required for

the time interval:

{0-999}-(days | hours | mins)

searchtime

This is the time interval at which the source, or log file, is scanned for new messages. The following format is required for the time interval:

{0-999}-(days | hours | mins)

initialization_file

This is a file which specifies a list of messages to be monitored by the RSF unit on the given source. An example of the required format is given below for both ASCII and SYSTEM sources. Lines beginning with # are comments:

For an ASCII source:

#expression	threshold	duration	keepmax
system_error.*	2	1-day	50
i/o_error_on_device.*5		4-days	10

For a SYSTEM source:

#id	threshold	duration	keepmax
23e44f	2	1-day	50
abcdef	10	2-hours	10

action blocking

The action associated with a source can be blocked from executing.

action log

The record of actions associated with a source can be erased.

reset

The count of over threshold messages can be reset.

Options

-n source_identifier

Specifies the identifier of the source to be changed.

-i new_source_identifier

Specifies the new identifier for the given source.

-t type

Specifies the new type of the source.

-p path

Specifies the new path to the source.

-a action Specifies the new action for the source.

-c cleantime Specifies the new cleantime.

-s searchtime Specifies the new searchtime

-f initialization_file Specifies the path to the initialization file.

-b Blocks the action associated with this source.

-u Unblocks the action associated with this source.

-e Erases record of actions for this source.

-r Resets counts of over threshold messages for this source.

Example

To modify the source "testsource" to scan the log files every 5 minutes and erase the action log:

chmsrc -n testsource -c 5-mins -e

Related Information:

The following commands/programs: chrsf, chmsg, rsfd, lsmsg, lsmsrc, mkmsg, mkmsrc, rmmsg, rmmsrc, netact, netactd.

11. chrsf Command**Syntax:**

```

chrsf (-s ( now | reboot | both ) | -x ( now | reboot |
        both ) ) { -a ( now | reboot | both ) | -n ( now
        | reboot | both ) }

```

Description

The **chrsf** command is used to start or stop the RSF daemon and the **netactd** daemon. The daemons can be started or stopped in three different ways:

```

now          perform startup/shutdown now.

reboot       perform startup/shutdown at reboot time.

both         perform startup/shutdown now and again at
             reboot time.

```

Options

```

-s          Starts the RSF daemon.

-x          Stops the RSF daemon.

-a          Starts the netactd daemon.

-n          Stops the netactd daemon.

```

Example

To start the RSF daemon at reboot time:

```
chrsf -s reboot
```

To stop the netactd daemon now:

```
chrsf -n now
```

To start the RSF daemon and the netactd daemon now:

```
chrsf -s now -a now
```

Related Information:

The following commands/programs: chmsg, chmsrc, rsfd,
 5 lsmsg, lsmsrc, mkmsg, mkmsrc, rmmsg, rmmsrc, netact,
 netactd.

12. confdiag Command

Syntax:

confdiag [-s | -x] [-t frequency] [-q]

Description

The RSF unit may be configured to test itself
 periodically. If enabled, a diagnostic routine will
 20 force a message to be written to the system log file.
 The RSF unit is set to monitor the system log file for
 this message and will perform a callout as soon as it is
 detected by the RSF daemon. This feature allows the
 system administrator to confirm that the RSF unit is
 25 actually detecting messages. If callout(s) are not made
 periodically when this feature is enabled, this is the
 first diagnosis that the RSF unit is sick.

Options

30 -s Enables the diagnostic message injection.
 -x Disables the diagnostic message injection.
 35 -t frequency Specifies the frequency of the diagnostic
 message injection to be performed by the
 RSF daemon. Valid settings are DAILY,
 WEEKLY, BIWEEKLY, MONTHLY, and BIMONTHLY.
 40 -q Displays the current status of the
 diagnostic feature.

Defaults

45 If no options are provided, the default option is -q.

Examples

1. To enable the diagnostic feature with a weekly frequency:

```
confdiag -s -t WEEKLY
```

2. To disable the diagnostic feature:

```
confdiag -x
```

Related Information:

The following commands/programs: chrsf, chmsg, chmsrc, rsfd, lsmsg, lsmsrc, mkmsg, rmmsg, rmmsrc, netact, netactd.

13. confmon Command

Syntax:

```
confmon [-d] [-x] [-t device] [-s] [-n] [-m device] [-e]
        [-f] [-a address] [-l] [-g] [-c TermType]
        [-DSALTO]
```

Description

This command is used to configure the session scripting features of the RSF call-back environment. With session scripting enabled all characters sent and received to/from the remote user's terminal is captured and echoed to one or more destinations depending on the configuration. This can be used by the local system administrator to watch everything that is being done by the remote user to preserve system security. There are three forms of session scripting that are supported:

Direct-to-Terminal Scripting

With this form of scripting the moment a remote user logs in on the system a specified terminal is immediately taken over and a mirror of the remote user's terminal is displayed.

Session-Notification-Interactive Scripting

With this form of scripting, when a remote user logs in on the host system, a warning message is sent to the specified terminal. Once warned the local system administrator may run a command to view a mirror of the remote session. In this mode

if the 'K' key is hit the remote user will be immediately logged off the host system.

Session Logging

With this form of scripting a file is created which contains a script of the remote user's session. There will be one such file for each time the remote user logs in. These files are stored in /var/call/sessions and are named based on the date/time of the login. These files may be listed, played back, and removed with the lslogs, showlogs, and rmlogs commands.

All three of these scripting options may be turned on and off independently.

The -d option turns on direct-to-terminal scripting, the -x option turns it off. The -t option configures the tty device to which the remote session should be copied.

The -s option turns on session-notification-interactive scripting, the -n option turns it off. The -m option configures the tty device to which the warning about remote user login should be sent.

The -e option turns on E-mail notification. With this enabled, an E-mail message is sent to the address specified with -a whenever the remote user logs in and out. The -f option turns off E-mail notification.

The -l option turns on session logging, -g turns it off.

The -c option is used to specify the terminal type (\$TERM) that must be used for call-back. This parameter is important because scripted sessions may be viewed only on a terminal that is equivalent to the terminal being used by the remote user. Using this parameter, the local system administrator configures the type of terminal on which the administrator plans to view scripted sessions. The remote user is then forced to use a terminal or terminal emulator that is equivalent to the configured terminal type.

Note: if Direct-to-Terminal scripting is enabled the -c option should be set to the terminal type of the terminal attached to the specified tty port.

This command is available from GMIS. The fastpath is "conf_mon".

Options

- d Turn on direct-to-terminal scripting
- x Turn off direct-to-terminal scripting
- 5 -t device Specify the tty device to use for direct-to-terminal scripting
- s Enable session-notification-interactive scripting
- 10 -n Disable session-notification-interactive scripting
- m device Specify the tty device to use for session-notification-interactive scripting
- 15 -e Turn on E-mail notification
- f Turn off E-mail notification
- 20 -a address Specify the E-mail address to use for E-mail notification
- l Turn on session logging
- 25 -g Turn off session logging
- c TermType Specify the terminal type that must be used for callback
- 30 -D Display direct-to-terminal device, if enabled
- S Display session-notification-interactive device, if enabled
- 35 -A Display E-mail address, if E-mail notification is enabled
- L Display "Y" if session logging is enabled, "N" otherwise
- 40 -T Display the terminal type configured with the -c option
- O Command to discover (used by GMIS)

45 Example

To disable direct-to-terminal scripting, enable session-notification-interactive scripting on the console, enable E-mail to user "phoenix" on system "hazel" when remote users login/logout, and set the call-back

terminal type to vt100:

```
confmon -x -s -m /dev/console -e -a phoenix@hazel -l -c vt100
```

Files

/var/call/mon.conf A binary file which stores the session scripting configuration parameters.

/var/call/sessions Directory where date-stamped logged session files are kept.

Related Information:

The following commands/programs: confperm, doremove, confmon, callscript, showscript, showses, lsises, showlses, rmlses.

14. confperm Command

Syntax:

```
confperm [-r] [-n]
```

Description

This command allows the local system administrator of a system to control whether or not remote users will be granted root access. This applies to the "Crash Analysis" and "Root Login" items on the "Callback Administration" menu that is presented to remote users when they log in.

If the -r option is used then future requests for root access will be granted. If the -n option is used then future requests for root access will be denied.

This command is available from within GMIS. The fastpath is "conf_perm".

Options

-r Allow future root access requests

-n Deny future root access requests

Example

To allow root access run the following command as root:

confperm -r

Files

5 /var/call/remote.conf A binary file which stores permissions configuration parameters.

Related Information:

10 The following commands/programs: confperm, doremote, confmon, callscript, showscrip, showses, lsles, showlses, rmlses.

15. doremote Command

Syntax:

20 doremote -r

Description

25 If root access is allowed then a root sub-shell will be spawned. Otherwise an error message is printed and root access is not granted.

The only valid option is -r and it must be supplied.

30 This command is not meant to be run from the command line. It is run from the GMIS "Callback Administration" menu that is presented to remote users when they log in using the RSF call-back environment.

Options

-r Request root access

Example

To request root access:

doremote -r

Files

/var/call/remote.conf A binary file which stores permissions configuration parameters.

Related Information:

The following commands/programs: confperm, doremote, confmon, callscript, showscript, showses, lsles, showlses, rmlses.

16. lscall Command Program

Syntax:

lscall [-n #] [-a] [-N] lscall { -c | -O }

Description

The RSF callout manager controls the sequencing and timing of callouts to a response center. It manages a queue of callout requests. This queue may be manipulated using the mkcall and rmcalls commands. The queue is serviced by a daemon process (calld). Parameters relating to this queue may be set with the chcall command.

Running lscall with no arguments will show the list of queued callouts along with a header that describes each of the columns. See the following example.

	Date	Time	Origin	Condition
	-----	-----	-----	-----
1 S	12/14/92	15:09:52	jonathan	RSF DIAGNOSTIC MESSAGE

The first two items "I" and "S" are the callout request ID and the callout status. The callout request ID is a number that may be used to reference a particular callout when using `rmcall` or `-n` option of `lscall`. The callout status may have the following values:

- W Waiting for the `calld` daemon to service this request. Requests are serviced on a first-come-first-serve basis.
- S Started. The callout is in progress.
- F Failed. An earlier callout attempt has failed. Failed callouts remain in the queue and may be restarted with the `"chcall -r"` command.

The date and time fields represent when a callout request was queued with the `mkcall` command. The origin field shows the name of the system that generated the callout request. The condition field shows a short description of the reason for the callout request.

If the `"-n #"` option is used then information will be shown for the callout with the given request ID only. If the `-N` option is used the the header will not be displayed. If the `-a` option is used then the contents of the callout record will be displayed. Use `-n` and `-a` together to look at the callout record for a particular callout.

If the `-c` option is used then callout manager status will be shown as follows:

```
Delay:      4-mins
Calls:      0
Max Calls:  20
Next Call:  Immediate
```

The following explains the meaning of each field:

Delay The time interval that should be allowed between sending callouts when there are multiple callouts in the queue. This delay keeps the modem from being "hogged" when there are many callout requests that occur within a small period of time. The delay allows a remote user to log in (if configured). A delay of "Infinite" means `calld` will not start another callout until the `"chcall -n"` command is run. A delay of "None" indicates that callouts will always be started immediately upon being enqueued.

Calls The number of calls currently in the callout manager queue.

Max Calls The maximum length of the callout manager queue. If there are this number of callouts already in the queue, `mkcall` will return an error if an attempt is made to enqueue another one.

Next Call Shows the amount of time before the callout daemon will start another callout. "Immediate" means the next callout to be enqueued with `mkcall` will start immediately. "On demand" means that `calld` will not start another callout until the "`chcall -n`" command is run.

The `-O` option is used by GMIS as a "command to discover".

This command is available from within the GMIS unit. The fastpath is "`brc_callman`".

Options

`-n #` Show information about the callout with the specified callout ID (`#`)

`-a` Show callout record content

`-N` Do not show headers

`-c` Show callout manager status information

`-O` "Command to Discover" (used by GMIS)

Example

To show information about callout ID number 37 including the callout record contents:

```
lscall -n 37 -a
```

Files

5 /var/call/calls/call.ctrl A binary file which stores the callout manager queue and configuration parameters.

Related Information:

10 The following commands/programs: callcfg, callact, callforce, netact, netactd, netcall, mkcall, rmcall, chcall, calld, callout, callbin.

17. lslses Command

Syntax:

20 lslses

Description

25 If Session Logging is enabled (see confmon), when a remote user calls in to a system a file is created which contains a log of all activities performed. There is one such log file for each time a remote service representative logs in to the system. These session files may be listed with the lslses command. The name of the log file represents the date and time at which the call-back occurred. For example:

BRC-121892144357

35 Indicates that a call-back occurred on December 18th 1992 at 2:43:57 PM.

40 This command is not available from within GMIS as an individual command, but is used by GMIS to build a list of logged sessions from which a session to review or delete may be picked.

Related Information:

45 The following commands/programs: confperm, doremote, confmon, callscript, showscript, showses, showlses, rmlses.

18. lsmsg Command Program

Syntax:

```
lsmsg [-n source_identifier] [ (-i | -e | -a) ] [-d]
      [-o] [-N] [[-S] -I message_identifier]
```

Description

The lsmsg command program is used to output the messages monitored by the RSF unit. There are several options provided for different output formats. If no options are provided, the default is to use -i for SYSTEM sources and -e for ASCII sources.

Options

-n source_identifier	Specifies the identifier of the source to be listed.
-i	List the ID's only.
-e	List ID's and expressions (only with ASCII sources).
-a	List the following information: expression(ASCII sources only), id, count, threshold, duration, and keepmax.
-d	In addition to what is displayed with -a, output the timestamp and full description of all messages with a count > 0.
-o	List only the over-threshold messages.
-N	Suppress the headers.
-S	List output in GMIS ready format.
-I message_identifier	List only the message with given id.

Example

To give a full listing of all messages that are over-threshold:

```
lsmsg -a -o
```

Files**Related Information:**

The following commands/programs: chrsf, chmsg, chmsrc, rsfd, lsmsrc, mkmsg, mkmsrc, rmsg, rmsrc, netact, netactd.

19. lsmsrc Command Programs**Syntax:**

```
lsmsrc [-iaArcpN] [-t type] [[-S] -n source_identifier]
```

Description

The lsmsrc command is used to output the sources monitored by the RSF unit. There are several options provided for different output formats.

Options

30	-n source_identifier	Specifies the identifier of the source to be listed.
	-i	List source identifiers only.
35	-a	Full listing of source identifier, type, cleantime, searchtime, and overthreshold values.
40	-A	List source identifier, action, and action-blocked values.
	-r	List record of actions.
45	-c	List record of actions on behalf of cluster nodes.
	-p	List source identifier and path.
	-N	Suppress headers.
50	-t type	List only sources of given type.

Can be ASCII or SYSTEM.

-S List output in GMIS ready format.

Example

To give a full listing of all ASCII sources:

lsmsrc -a -t ASCII

Related Information:

The following commands/programs: chrsf, chmsg, chmsrc, rsfd, lsmsg, mkmsg, mkmsrc, rmmsg, rmmsrc, netact, netactd.

20. mailact RSF Action Program

Syntax

mailact source_identifier description_file
message_identifier

Description

Mailact is an RSF action (i.e., it may be configured as an action that is taken by RSF when an over-threshold condition occurs). The mailact action sends E-mail to an address specified with the callcfg command.

To use this action, RSF is configured as though it were to use a local modem to make callouts. Telephone numbers for the response center and other modem related parameters are ignored if this action is used. Only E-mail is sent.

If the E-mail address specified is the address of a user on a remote machine, be user to configure sendmail appropriately.

The callout record that is sent via E-mail is created by callact and includes the following items:

Subject line with originating system and short description
Current date and time
The text of the over threshold message:
"description_file"

This utility is not used from the command line or from GMIS. It is meant to be invoked by rsfd as an action.

Options

source_identifier Which monitored source is involved
with this action.

description_file File containing text of over-threshold
message.

message_identifier ID of the message that is over-
threshold.

Related Information:

The following commands/programs: callcfg, callforce,
netact, netactd, netcall, mkcall, lscall, rmcalls,
chcall, calld, callout, callbin.

21. mkcall Command

Syntax:

mkcall [-o origin] [-d description] [-f file]
[-p pcode] [-s scode] [-S site-information]

Description

The RSP callout manager controls the sequencing and
timing of callouts to a response center. It manages a
queue of callout requests. This queue may be viewed and
manipulated using the lscall and rmcalls commands. The
queue is serviced by a daemon process (calld).
Parameters relating to this queue may be viewed and set
with the lscall and chcall commands.

The mkcall command queues a new callout request with the
callout manager. The information specified with the -f,
-p, -s, and -S options is queued along with the request
and is eventually passed to the "callbin" command. See
the "callbin" command for more information on these
options.

The -o argument is used to specify the origin of the
callout (the hostname of the system that is the source
of callout). This is used to identify the calling
system in the case of several cluster clients on a LAN.
If this parameter is not supplied "Unknown" is used. See
callact for more information on cluster callouts.

The -d argument specifies a short description of the

reason for the callout. This description is shown when lscall is used to list queued callouts. If this parameter is not supplied "Unknown" is used.

If -f is not supplied, mkcall will read from stdin. If -p or -s are not supplied, a default of 0x0000 is used.

This command is not meant to be executed from the command line or from GMIS. It is called from the netcall and callact script programs. For callouts associated with the system error log the short description passed with -d is the "Error Description" field.

Options

-o origin	Origin of callout (name of calling system)
-d description	Short description of the reason for the callout
-f file	File specifying content of callout record (see callbin)
-p primary-code	Hexadecimal Primary Error Code (see callbin)
-s secondary-code	Hexadecimal Secondary Error Code (see callbin)
-S "site_information"	Site identifier (see callbin)

Example

Files

/var/call/calls/call.ctrl A binary file which stores the callout manager queue and configuration parameters.

Related Information:

The following commands/programs: callcfg, callact, callforce, netact, netactd, netcall, lscall, rmcall, chcall, calld, callout, callbin.

22. mkmsg Command

Syntax:


```

mkmsg -n source_identifier (( -e expression | -i
    message_identifier ) [-t threshold] [-d duration]
    [-k keepmax]) | ( -f initialization_file )

```

Description

The mkmsg command adds a new message to be monitored by the RSF unit for the given source. The identifier of the source for which the message is monitored is a required option and either the -e, -i, or -f options must be used. The -e and -i options are used for making a single message and the -f option is used for batch message creation.

Options

-n source_identifier	Specifies the identifier of the source to be removed.
-e expression	Specifies the regular expression for the message (ASCII sources).
-i message_identifier	Specifies the message id (SYSTEM sources).
-t threshold	Specifies the threshold value for the message.
-d duration	Specifies the duration value for the message.
-k keepmax	Specifies the keepmax value for the message.
-f initialization_file	Specifies the initialization file for batch message creation. The following is an example of the format for both ASCII and SYSTEM sources:

For an ASCII source:

#expression	threshold	duration	keepmax
"system_error_.*"	2	1-day	50
"i/o_error_on_device.*"	5	4-days	10

For a SYSTEM source:

#id	threshold	duration	keepmax
23e44f	2	1-day	50
abcdef	10	2-hours	10

Defaults

If the options are not provided, the default threshold is 5, duration is 1-day and keepmax is 20.

Example

To make a new message for the ASCII source "testsource":

```
mkmsg -n testsource -e "controller number .*" -t 10
```

Related Information:

The following commands/programs: chrsf, chmsg, chmsrc, rsfd, lsmsg, lsmsrc, mkmsrc, rmmsg, rmmsrc, netact, netactd.

23. mkmsrc Command

Syntax:

```
mkmsrc -i source_identifier -p path -a action
        [-t type] [-c cleantime] [-s searchtime]
        [-f initialization_file]
```

Description

The mkmsrc command is used to define a new source to be monitored by the RSF unit. The source is a file located on the system which is either a system log file or an arbitrary ASCII log file generated by any application. The mkmsrc command requires a user defined identifier for the source, the path to the log file, and the path to the action to execute when an over-threshold condition occurs.

Options

-i source_identifier	Specifies the identifier of the source to be created.
-p path	Specifies the path to the source.
-a action	Specifies the path to the action to execute when an over-threshold condition occurs.
-t type	Specifies the type of the source (ASCII or SYSTEM).
-c cleantime	Specifies the interval at which

the RSF database is cleaned.

-s searchtime Specifies the interval at which the RSF daemon scans the log for new messages.

-f initialization_file Specifies an input file for initializing the messages associated with the new source. The following is an example of the format for both ASCII and SYSTEM sources:

For an ASCII source:

#expression	threshold	duration	keepmax
"system_error_.*"	2	1-day	50
"i/o_error_on_device.*)" 5	4-days	10	

For a SYSTEM source:

#id	threshold	duration	keepmax
23e44f	2	1-day	50
abcdef	10	2-hours	10

Defaults

If the options are not provided, the default type is ASCII, cleantime is 1-day and seektime is 5-hours.

Example

To make a new source named "testsource" of type ASCII:

```
mkmsrc -i testsource -p path_to_source -a path_to_action
-t ASCII
```

Related Information:

The following commands/programs: chrsf, chmsg, chmsrc, rsfd, lsmsg, lsmsrc, mkmsg, rmmsg, rmmsrc, netact, netactd.

24. netact Command Program

Syntax:

```
netact hostname action source_identifier
description_file message_identifier [options]
```

Description

The netact command program contacts the netactd daemon on the server machine "hostname" and requests that "action" be run on that machine. The rest of the options are arguments to the remote action. The "description_file" is a local file which is temporarily transferred to the remote host. The standard and error output from the remote command is transferred back and written on standard output of netact program. Following "message_identifier," a list of additional options may be specified. These will be passed to the remote action as is.

The netactd daemon must be running on the remote host. This utility is not used from the command line or from GMIS. It is used in scripts like callact and callforce.

Options

hostname	The remote host to contact.
action	The pathname of the action on the remote host.
source_identifier	Which monitored source is involved with this action.
description_file	File containing text of over-threshold message.

message_identifier ID of the message that is over-threshold.

[options] Optional list of options which will be passed to the remote action.

Related Information:

The following commands/programs: callcfg, callact, callforce, netactd, netcall, mkcall, lscall, rmcall, chcall, calld, callout, callbin.

25. netactd Cluster Daemon

Syntax:

Description

The netactd daemon services requests from the netact command program running on remote hosts. It is implemented as an RPC server using the TCP/IP protocol. This daemon and the associated netact command are used to implement the callout cluster environment.

The daemon is not run directly from the command line. It may be started and stopped from GMIS or from the command line with the chrsf command. The fast path for GMIS is "actions".

Related Information:

The following commands/programs: chrsf, callcfg, callact, callforce, netact, netcall, mkcall, lscall, rmcall, chcall, calld, callout, callbin.

26. netcall RSF Action Program

Syntax:

netcall source_identifier description_file
message_identifier host_name site_information

Description

Netcall is an RSF action. It is used on a cluster server system in conjunction with the callact, netact, and netactd programs to send a callout record to a response center from a cluster client system response center in a clustered callout environment.

When a cluster client needs to make a callout to the response center, callact is invoked by rsfd on the client system. Callact determines that it needs to send the callout record to the cluster server system, so callact invokes netact with an action of netcall. Netcall passes the callout record to the callout manager (see mkcall). Netcall also handles remote callforce requests.

The callout record that is sent to the response center is created by callact or callforce. Netcall adds cluster server site configuration to the callout record before passing it to the callout manager (for normal RSF callouts) or directly to callout (for forced callouts). Netcall may be configured to send mail to a given E-Mail address whenever a remote callout request is made.

This utility program is not used from the command line or from GMIS. It is meant to be invoked by netactd as an action on behalf of a remote callout request.

Options

source_identifier Which monitored source is involved with this action.

description_file File containing callout record generated by callact.

message_identifier ID of the message that is over-threshold.

host_name Network name of the host that is making this request.

site_information Site identifier information from the cluster client.

Related Information:

The following commands/programs: callcfg, callact, callforce, netact, netactd, mkcall, lscall, rmcall, chcall, calld, callout, callbin.

27. rmcalls Command**Syntax:**

```
rmcalls ID [ID ID ...]
```

Description

The RSF callout manager controls the sequencing and timing of callouts to a response center. It manages a queue of callout requests. Requests are enqueued using the mkcalls command. Requests and parameters are viewed with the lscalls command. The queue is serviced by a daemon process (calld). Parameters relating to this queue may be set with the chcalls command. This command removes the callouts requested with the specified request ID(s). See the lscalls command for a definition of "request ID". Callouts that have already been started ("S" status) may not be removed.

This command is available from within GMIS. The fastpath is "brc_callman".

Options

ID Request ID of the callout request to be removed

Example

To remove callout request ID number 25

```
rmcalls 25
```

Files

/var/call/calls/call.ctrl A binary file which stores the callout manager queue and configuration parameters.

Related Information:

The following commands/programs: calld, callact, callforce, netact, netactd, netcall, mkcalls, lscalls, chcalls, calld, callout, callbin.

28. rmalls Command**Syntax:**

rmlses logged-session

Description

5 Removes the specified logged session. The list of currently logged sessions may be viewed using lsles.

This command is available from within GMIS. The fastpath is "call_mon".

10

Options

logged-session The logged session to remove

15

Related Information:

The following commands/programs: confperm, doremote, confmon, callscript, showscrip, showses, lsles, showlses.

20

29. rmmsg Command

25

Syntax:

rmmsg -n source_identifier -i message_identifier

Description

30

The rmmsg command is used to remove a monitored message from a monitored source. This is used to alert the RSF unit to no longer monitor the given message.

35

Options

-n source_identifier Specifies the identifier of the source for which the message belongs.

40

-i message_identifier Specifies the message id to be removed from the given source.

45

50

55

Example

To alert RSF to no longer monitor message id FFFFFFFF
for source "testsource":

```
rmmsg -n testsource -i FFFFFFFF
```

Related Information:

The following commands/programs: chrsf, chmsg, chmsrc,
rsfd, lsmsg, lsmsrc, mkmsg, mkmsrc, rmmsrc, netact,
netactd.

30. rmmsrc Command**Syntax:**

```
rmmsrc -n source_identifier
```

Description

The rmmsrc command is used to remove the specified
source from the list of message sources monitored by the
RSF unit. After this is done, the mkmsrc command is
used to restart monitoring of the source.

Options

-n source_identifier Specifies the identifier of the
source to be removed.

Example

To remove a source named "testsource":

```
rmmsrc -n testsource
```

Related Information:

The following commands/programs: chrsf, chmsg, chmsrc,
rsfd, lsmsg, lsmsrc, mkmsg, mkmsrc, rmmsg, netact,
netactd.

31. rsfd Command Daemon**Syntax:**

```
rsfd [ -t level [ -f trace_file ] ]
```

Description

This is the RSF daemon. It can be started with an optional trace level between 0-9 and also an optional tracing output file. The default is no tracing.

When rsfd program is started it performs a sanity check on the RSF configuration (see rsfstat). Any warnings or fatal errors are reported. If there are any fatal errors the daemon will not start.

Options

-t level level specifies the detail of tracing output.

-f trace_file trace_file specifies an output file for tracing output.

Related Information:

The following commands/programs: chrsf, chmsg, chmsrc, lsmsg, lsmsrc, mkmsg, mkmsrc, rmmsg, rmmsrc, netact, netactd.

32. rsfstat Command Program**Syntax:**

```
rsfstat [-v]
```

Description

The RSF unit includes up to three daemons: calld, netactd, and rsfd. This utility displays a table showing the status of each daemon. If the daemon is running then the status is "up". In this case, also shown are, how long the daemon has been running and what its process ID is. If the daemon is not running then the status is "down".

If a partial installation was performed then only the status of the installed daemons is shown.

The -v option performs a check of the RSF configuration and reports any fatal errors, or warnings. Note: you must be root or "remote" to use the -v option.

Options

-v Perform sanity check on RSF configuration.

Defaults

Examples

Typical output from rsfstat looks like the following:

Daemon	Status
rsfd	up (7-days, pid=10895)
calld	down
netactd	down

Related Information:

The following commands/programs: chrsf, chcall, rsfd, netactd, calld.

33. showlses Command

Syntax:

showlses logged-session

Description

This command is used to view a session log created when a remote user logs in to the system.

If Session Logging is enabled (see confmon), when a remote user calls in to a system a file is created which contains a log of all activities performed. There is one such log file for each time a remote service representative logs in to the system. These session files may be listed with the lsles command. The name of the session log is passed to showlses. The name of the log file represents the date and time at which the call-back occurred. For example:

BRC-121892144357

Indicates that a call-back occurred on December 18th 1992 at 2:43:57 PM.

While viewing a logged session the following keys may be useful:

```

q      Quits showlses
p      Pauses/resumes viewing
!      Speeds up viewing
space  Slows down viewing

```

This command is available from within GMIS. The fastpath is "call_mon".

Options

logged-session The name of the logged session to review. A list of logged sessions may be seen using lslses.

Related Information:

The following commands/programs: confperm, doremove, confmon, callscript, showscript, showses, lslses, rmises.

34. showscript Command Program

Syntax:

```

showscript (-s | -r) script-file
showscript -c script-file -p pid

```

Description

This command program is used along with the callscript command program to support the console logging and playback feature of the RSP call-back environment. The command reads files created using the -s option of callscript. These files contain scripted sessions with timing information so that they can be played back like a movie.

The terminal that session files are viewed on must be equivalent to the kind of terminal that they are recorded on. In order to help ensure this, session files created by callscript contain the \$TERM that was in effect when the script was created. This is checked against the \$TERM that is in effect when showscript is run. If they don't match then a warning message is printed.

Note: Many times terminal types that have different names may have definitions close enough to allow the

session files to be viewed (e.g. vt100 and xterm).

The two different syntax forms are used to support the two different ways that the RSF unit looks at session files. The first form (using -s) reviews a complete session file (see showlses). When the end of the file is reached showscript terminates. The second form (using -c and -p) shows the contents of a session script that is still being created (i.e., callscript is still running). When the end of the file is reached showscript will wait for more data to be added to the file (see showses). The process with the pid specified with the -p option is sent a SIGKILL signal when the 'k' "hot key" is hit.

There are special keys that can be used while viewing a session:

q	Quits showscript
p	Pauses/resumes viewing
!	Speeds up viewing
space	Slows down viewing
k	Terminates process with pid (used only with -c and -p)

Note: The 'k' key does not end the showscript session. Hit 'q' to stop viewing.

RSF users do not invoke this command directly or through GMIS. This command is called from the showses and showlses scripts which are available through GMIS.

Options

-s script-file	Plays back the specified script file
-r script-file	Strips timing information from the specified script file. The result is written to standard output

-c script-file Plays back the specified script file in a mode which follows the end of the file (like tail -f).

-p pid Specifies the process ID to which a SIGKILL is sent if the 'k' "hot-key" is hit.

Examples

To view a previously recorded session.

showscript -s script-file

To strip timing information from a recorded session

showscript -r script-file > output-file

Related Information:

The following commands/programs: confperm, doremote,
confmon, callscript, showscript, showses, lsises,
showlses, rmlses.

35. showses Command

Syntax:

showses

Description

If Session-Notification-Interactive style session monitoring is enabled, (see confmon) when a remote user calls in to a system a warning message is displayed on a terminal chosen by the local administrator. The warning message says ...

Remote maintenance session in progress
Type 'showses' to monitor

This command may then be used by the local administrator to view everything that the remote service representative is doing. If the local administrator hits the 'k' key, it will immediately log the remote user off the system.

If the remote maintenance representative has been working on the system for a while before this command is run, all of the activity prior to the execution of showses will be seen. It may take a while to catch up with the remote session. The '!' key may be used to speed up viewing. Other special keys are:

q Quits showses
p Pauses/resumes viewing
space Slows down viewing (until caught up)

This command is available from within GMIS. The fastpath is "call_mon".

Related Information:

The following commands/programs: confperm, doremote, confmon, callscript, showscript, showses, lsises, showlses, rmlses.

SECTION II DEFINITIONS/GLOSSARY OF TERMS

SOURCE ATTRIBUTE DATABASE:

A binary file managed by RSF unit 10-10 which records information about sources being monitored by RSF unit 10-10 including parameters that control how each source should be monitored.

MESSAGE TEMPLATES DATABASE:

A binary file managed by unit 10-10 which contains search criteria and status information for each message being monitored. There is an individual message templates database for each source being monitored.

STORED MESSAGE DATABASE:

A binary file managed by unit 10-10 which contains a recent history of messages being monitored which have appeared. There is an individual stored message database for each source being monitored.

KEEPMAX:

For each message in the message templates database, the keepmax parameter sets an upper limit on how many of this particular message will be backlogged in the stored message database.

SOURCE:

A "source" is any source of messages (such as a log file).

MESSAGE:

A "message" is a record that appears in a source.

THRESHOLD:

A "threshold" is a number of times that a particular message must be observed before that message is considered "over-threshold."

DURATION:

A "duration" is the amount of time allowed in which a particular message "counts" toward the threshold. Together, the threshold and the duration define the over-threshold status of a message. A message is considered overthreshold if the threshold is reached within the duration (e.g. 4 must appear within 5 minutes to be over-threshold).

ACTION:

An "action" is a program that is run in response to an overthreshold condition. Any program can be specified as an action.

SEARCHTIME:

For each source, this parameter controls how often unit 10-10 will scan the source for new messages.

CLEANTIME:

For each source, this parameter controls how often the associated stored message database is cleaned (old messages are removed).

STANDALONE:

A host system with modem connection.

CLUSTER CLIENT:

A host system with no modem connection which uses a cluster server system to make callouts.

CLUSTER SERVER SYSTEM:

A host system with modem connection which is shared with cluster client systems.

SECTION III **DESCRIPTION OF ROUTINES**
STORED IN RSF 10-104 LIBRARY

5 **1. Action Routines**

Routines used to maintain the log of actions taken
by the RSF unit.

10 Remove (delete) the action log
 Add an entry to the action log

2. Control Routines

15 Routines used to access the source attributes
 database (control file).

20 Open the control file
 Read the next sequential record from the
 control file
 Move read pointer to the start of the control
 file
 Add a new record to the end of the control
25 file
 Look up a control file record based on the
 source ID
 Change the contents of a specific control file
 record
30 Delete a specific record from the control file
 Close the control file

3. Config Routines

35 Routines used to access the callout configuration
 (call.conf file).

40 Set default callout configuration parameters
 Read the callout configuration from the
 call.conf file
 Write the callout configuration to the
 call.conf file

4. Display Msg. Routines

Routines used to format messages that have been received by the RSF unit.

Generic routine to print format a message regardless of type
 Routine to print format an ASCII message
 Routine to print format a system message

5. Keep File Routines

Routines used to access the stored message database (*.keep files)

Delete an entire keep file
 Create a new keep file
 Clean a keep file (removing logically deleted entries)
 Open a keep file
 Read the next sequential entry from the keep file
 Move read pointer to the start of the keep file
 Add a new entry to the end of the keep file
 Logically delete the last N kept messages with a specific ID
 Logically all kept messages with a specific ID
 Adjust durations for kept messages with a specific ID
 Logically delete expired messages with a specific ID
 Close the keep file

6. Support Routines

Miscellaneous routines used by various RSF modules.

Internal/User parameter format conversion routines.
 User parameter format checking routines
 Initialization file parsing routines
 User access restriction routines

7. Error Msg. Routines

Routines used to access the Host System Error Log file.

Read the next sequential record from the host error log file
Find the start of the next sequential record
Format a system error log file record into human readable form

8. Search Routines

Routines used to access the message template database (*.search files).

Delete an entire search file
Create a new search file
Determine if a search file is empty
Open a search file
Generic routine to search for a matching search file entry
Search for a matching ASCII record (use regular expressions)
Search for a matching system record (use message ID)
Read the next sequential record from the search file
Move read pointer to the start of the search file
Generic routine to add an entry to a search file
Add an ASCII search record to the end of a search file
Add a system search record to the end of a search file
Add a new record to the end of the search file
Sort all the records in the search file by message ID
Look up a record in the search file based on message ID
Change the contents of a specific search file record
Delete a specific record from a search file
Close a search file

9. Source Routines

Routines used to access RSF sources (log files).

Open a source
 Generic routine to read the next sequential
 record from source
 Read the next sequential record from an ASCII
 source
 Read the next sequential record from a system
 source
 Close a source

10. Verify Routines

Routines used to check to RSF configuration files
 for errors.

Routine to check the validity of a host name
 Routine to check the validity of a tty
 Routine to check the validity of remote's
 published password
 Routine to check the callout configuration
 Routine to check the source attributes
 database
 Routine to check daemon status
 Routine to check free space on disks
 Verify a specified subset of the above

11. Config. Diag. Routines

Routines used to configure the diagnostic callout
 parameters.

Routine to disable diagnostic callout
 Routine to enable diagnostic callout
 Routine to read diagnostic frequency
 Routine to write diagnostic frequency

12. PID Routines

Routines used to manage daemon PID files (*.pid
 files).

Create a PID file containing PID of caller
 Remove a PID file
 Check the status of a PID file
 Send a signal to a daemon (uses PID file to
 get PID)

SECTION IV

#1 - EXAMPLES OF STANDALONE CALLOUT RECORDS

Parameters required for logging back into host system are in bold type.

Date: Fri Apr 2 10:23:11 EST 1993

Site Configuration

calltype: modem
suptype: RCS2
sysid: UD9999

remote phone numbers:
18005552855

opphone: (665) 555-3423
opname: Jonathan S.
mail: root
sysphone: 6655552331
passwd: phoenix
tty: /dev/tty0
Terminal type that must be used for callback: vt100

Full Text of Message

ERROR LABEL: SDM_ERR1
ERROR ID: BAECC981

Date/Time: Fri Apr 2 10:23:08
Sequence Number: 397433
Machine Id: 000004375C3A
Node Id: hazel
Error Class: H
Error Type: PERM
Resource Name: serdasda0

Error Description
MICROCODE PROGRAM ERROR

Probable Causes
STORAGE CONTROLLER MICROCODE

Install Causes
MISMATCH BETWEEN HARDWARE AND MICROCODE
MISMATCH BETWEEN SOFTWARE AND MICROCODE

Recommended Actions

CHECK FOR CORRECT MICROCODE FIX

Failure Causes

LOADABLE STORAGE CONTROLLER MICROCODE

Recommended Actions

PERFORM PROBLEM DETERMINATION PROCEDURES

Detail Data

SENSE DATA

01FF 0000 0000 0000 0000 0000 0000 0000

System Information

OS Name: BOSX

OS Version: 3

OS Release: 2

Configuration Information

INSTALLED RESOURCE LIST WITH VPD

The following resources are installed on your machine.

sysplanar0	00-00	CPU Planar
------------	-------	------------

Part Number.....	043G1797
EC Level.....	00C74316
Processor Identification....	00000594
ROS Level and ID.....	IPLVER1.0
	LVL1.02,043G2189
Processor Component ID.....	0102006300000014
Device Specific.(Z0).....	012048
Device Specific.(Z1).....	021047
Device Specific.(Z2).....	031246
Device Specific.(Z3).....	041149
Device Specific.(Z4).....	CD234D
Device Specific.(Z5).....	ED234D
Device Specific.(Z6).....	0A114A
Device Specific.(Z7).....	2A114A
Device Specific.(Z8).....	4A114A
Device Specific.(Z9).....	6A114A
ROS Level and ID.....	OCS(07040A00)
ROS Level and ID.....	SEEDS(FOBABC01)

ioplanar0	00-00	I/O Planar
-----------	-------	------------

EC Level.....39

bus0	00-00	Microchannel Bus
sio0	00-00	Standard I/O Planar

Part Number..... 52G1265
 EC Level.....D25842
 Serial Number.....00000299
 FRU Number..... 52G1266
 Manufacturer.....IBM97N
 Displayable Message.....STANDARD I/O
 Device Driver Level.....00
 Diagnostic Level.....00
 ROS Level and ID.....0000
 Displayable Message..... STANDARD SCSI
 Device Driver Level.....00
 Diagnostic Level.....00
 Loadable Microcode Level....0044
 ROS Level and ID.....0044
 Read/Write Register Ptr.....0100

fda0	00-00-0D	Standard I/O Diskette Adapter
fd0	00-00-0D-00	Diskette Drive
ppa0	00-00-0P	Standard I/O Parallel Port Adapter
lp0	00-00-0P-00	Bull Compuprint 4/51
scsi0	00-00-0S	Standard SCSI I/O Controller
hdisk0	00-00-0S-00	1.37 GB SCSI Disk Drive

Device Specific.(Z0).....0000
 Manufacturer.....IBM
 Machine Type and Model.....ST41600N
 Serial Number.....00055744
 Device Specific.(Z1).....70899604

cd0	00-00-0S-10	CD-ROM Drive
-----	-------------	--------------

Device Specific.(Z0).....0580
 Manufacturer.....TOSHIBA
 Machine Type and Model.....CD-ROM DRIVE:XM
 ROS Level and ID.....3232

hdisk1	00-00-0S-20	1.37 GB SCSI Disk Drive
--------	-------------	-------------------------

Device Specific.(Z0).....0000
 Manufacturer.....IBM
 Machine Type and Model.....ST41600N
 Serial Number.....00073612
 Device Specific.(Z1).....70899604

rmt0	00-00-0S-50	2.3 GB 8mm Tape Drive
------	-------------	-----------------------

Device Specific.(Z0).....0180

Manufacturer.....EXABYTE
Machine Type and Model.....EXB-8200

5 sa0 00-00-S1 Standard I/O
 Serial Port 1
 tty0 00-00-S1-00 Asynchronous
 Terminal
10 sa1 00-00-S2 Standard I/O
 Serial Port 2
 tty1 00-00-S2-00 Asynchronous
 Terminal
 scsi1 00-01 SCSI I/O
 Controller

15 Device Driver Level.....00
 Diagnostic Level.....00
 Displayable Message.....SCSI
 EC Level.....C74317
20 FRU Number.....31G9729
 Manufacturer.....IBM97N
 Part Number.....43G1811
 Serial Number.....
 Loadable Microcode Level....0044
25 ROS Level and ID.....0050
 Read/Write Register Ptr.....0100

 hdisk2 00-01-00-00 1.37 GB SCSI Disk Drive

30 Device Specific.(Z0).....0000
 Manufacturer.....IBM
 Machine Type and Model.....ST41600N
 Serial Number.....00073493
 Device Specific.(Z1).....70899604

35 ent0 00-03 Ethernet High-
 Performance LAN
 Adapter

40 Network Address.....02608C2F9E82
 ROS Level and ID.....0015
 Displayable Message.....802.3/ETHERNET
 Part Number.....000G3369
 EC Level.....C73859
 Device Driver Level.....01
45 Diagnostic Level.....01
 FRU Number.....000G3368
 Serial Number.....00110116
 Manufacturer.....204491

50 x25s0 00-04 X.25 Adapter
 fddi0 00-05 FDDI Primary Card,
 Single Ring Fiber

5

10

15

20

25

30

35

40

45

```
Manufacturer.....IBM053
ROS Level and ID.....000D
Loadable Microcode Level....00
Device Driver Level.....01
Displayable Message.....SERIAL-ADAPTER
```

```
serdasdcl          00-11-02          Serial-Link Disk
                                Controller
```

```
Part Number.....42G9575
Serial Number.....00003738
Machine Type and Model.....9333-000
Manufacturer.....IBM
ROS Level and ID.....OC
```

```

hdisk6          00-11-02-01      857MB F Serial-
                                Link Disk Drive

```

```

Part Number.....95X2431
EC Level.....C79493
Serial Number.....B182136E
Machine Type and Model.....9333-100
Manufacturer.....IBM -0902
ROS Level and ID.....63
Device Specific.(Z1).....9103944
Device Specific.(Z2).....7102
Device Specific.(Z3).....70F9042
Device Specific.(Z4).....92087

```

```

hdisk7          00-11-02-03      857MB F Serial-
                                Link Disk Drive

```

```

Part Number.....95X2431
EC Level.....C79493
Serial Number.....B207056L
Machine Type and Model.....9333-100
Manufacturer.....IBM -0902
ROS Level and ID.....52
Device Specific.(Z1).....9104086
Device Specific.(Z2).....5866
Device Specific.(Z3).....70F9042
Device Specific.(Z4).....92093

```

```
serdasdc0          00-11-03          Serial-Link Disk
                                Controller
```

```
Part Number.....07G5194
Serial Number.....00002893
Machine Type and Model.....9333-000
Manufacturer.....IBM          -0053
ROS Level and ID.....OB
```

```
hdisk4          00-11-03-00          1.07GB F Serial-
```

Link Disk Drive

Part Number.....69F9821
 EC Level.....C79493
 Serial Number.....R012573V
 Machine Type and Model.....9333-110
 Manufacturer.....IBM -0902
 ROS Level and ID.....63
 Device Specific.(Z1).....8203386
 Device Specific.(Z2).....10959
 Device Specific.(Z3).....70F9042
 Device Specific.(Z4).....92199

ent1 00-14 Ethernet High-
 Performance LAN
 Adapter

Network Address.....02608C2F8A70
 ROS Level and ID.....0015
 Displayable Message.....802.3/ETHERNET
 Part Number.....000G3369
 EC Level.....C73859
 Device Driver Level.....01
 Diagnostic Level.....01
 FRU Number.....000G3368
 Serial Number.....00114965
 Manufacturer.....204491

mpqa0 00-15 4-Port Multi-
 protocol
 Communications
 Controller
 mpq0 00-15-00 Multiprotocol
 Adapter Port
 mpq1 00-15-01 Multiprotocol
 Adapter Port
 mpq2 00-15-02 Multiprotocol
 Adapter Port
 mpq3 00-15-03 Multiprotocol
 Adapter Port
 mem0 00-0B 64 MB Memory Card

Device Specific.(Z3).....07
 EC Level.....21
 Device Specific.(Z0).....00
 Device Specific.(Z1).....00
 Device Specific.(Z2).....00
 Size.....64

mem1 00-0C 64 MB Memory Card
 Device Specific.(Z3).....07
 EC Level.....21

Device Specific.(Z0).....00
 Device Specific.(Z1).....00
 Device Specific.(Z2).....00
 Size.....64

5

mem2

00-0D

64 MB Memory Card

Device Specific.(Z3).....07
 EC Level.....21
 Device Specific.(Z0).....00
 Device Specific.(Z1).....00
 Device Specific.(Z2).....00
 Size.....64

10

15

mem3

00-0F

64 MB Memory Card

Device Specific.(Z3).....07
 EC Level.....21
 Device Specific.(Z0).....00
 Device Specific.(Z1).....00
 Device Specific.(Z2).....00
 Size.....64

20

25

mem4

00-0G

64 MB Memory Card

Device Specific.(Z3).....07
 EC Level.....21
 Device Specific.(Z0).....00
 Device Specific.(Z1).....00
 Device Specific.(Z2).....00
 Size.....64

30

35

mem5

00-0H

64 MB Memory Card

Device Specific.(Z3).....07
 EC Level.....21
 Device Specific.(Z0).....00
 Device Specific.(Z1).....00
 Device Specific.(Z2).....00
 Size.....64

40

sysunit0

00-00

Bull DPX/20 System
Unit

45

50

55

SECTION IV - (Cont'd.)

#2 - EXAMPLES OF CLUSTER CLIENT CALLOUT RECORDS

Parameters required for logging back into host system are in bold type.

Cluster Server Configuration

calltype: modem
suptype: RCS2
sysid: UD9999

remote phone numbers:
18005552855

opphone: (665) 555-3423
opname: Jonathan S.
mail: root
sysphone: 6655552331
passwd: phoenix
tty: /dev/tty0
Terminal type that must be used for callback: vt100

Date: Fri Apr 2 09:40:00 EST 1993

Site Configuration

Cluster Node Name: fiver

calltype: network
suptype: RCS2
sysid: UD9998
opphone: (665) 555-3423
opname: Jonathan S.
mail: root
passwd: bennu
server: hazel
Terminal type that must be used for callback: vt100

Full Text of Message

ERROR LABEL: SRC
ERROR ID: E18E984F
Date/Time: Fri Apr 2 09:39:55
Sequence Number: 1788031
Machine Id: 000004375C00
Node Id: fiver
Error Class: S
Error Type: PERM

Resource Name: SRC

Error Description
SOFTWARE PROGRAM ERROR

Probable Causes
APPLICATION PROGRAM

Failure Causes
SOFTWARE PROGRAM

Recommended Actions
PERFORM PROBLEM RECOVERY PROCEDURES

Detail Data
SYMPTOM CODE
256
SOFTWARE ERROR CODE
-9035
ERROR CODE
0
DETECTING MODULE
'srchevn.c'@line: '162'
FAILING MODULE
infod

System Information

OS Name: BOSX
OS Version: 3
OS Release: 2

Configuration Information

INSTALLED RESOURCE LIST WITH VPD

The following resources are installed on your machine.

sysplanar0	00-00	CPU Planar
Part Number.....	043G1797	
EC Level.....	00C74316	
Processor Identification....	00000594	
ROS Level and ID.....	IPLVER1.0	
	LVL1.02,043G2189	
Processor Component ID.....	0102006300000014	
Device Specific.(Z0).....	012048	
Device Specific.(Z1).....	021047	
Device Specific.(Z2).....	031246	
Device Specific.(Z3).....	041149	
Device Specific.(Z4).....	CD234D	

```
Device Specific.(Z5).....ED234D
Device Specific.(Z6).....0A114A
Device Specific.(Z7).....2A114A
Device Specific.(Z8).....4A114A
Device Specific.(Z9).....6A114A
ROS Level and ID.....OCS(07040A00)
ROS Level and ID.....SEEDS(FOBABC01)
```

ioplanar0	00-00	I/O Planar
-----------	-------	------------

EC Level.....39

```
bus0          00-00      Microchannel Bus
sio0          00-00      Standard I/O Planar
```

```

Part Number..... 52G1265
EC Level.....D25842
Serial Number.....00000299
FRU Number..... 52G1266
Manufacturer.....IBM97N
Displayable Message.....STANDARD I/O
Device Driver Level.....00
Diagnostic Level.....00
ROS Level and ID.....0000
Displayable Message..... STANDARD SCSI
Device Driver Level.....00
Diagnostic Level.....00
Loadable Microcode Level....0044
ROS Level and ID.....0044
Read/Write Register Ptr....0100

```

```

fda0      00-00-0D      Standard I/O Diskette Adapter
fd0       00-00-0D-00    Diskette Drive
ppa0      00-00-0P      Standard I/O Parallel Port
                    Adapter
lp0       00-00-0P-00    Bull Compuprint 4/51
scsi0     00-00-0S      Standard SCSI I/O Controller
hdisk0    00-00-0S-00    1.37 GB SCSI Disk Drive

```

```
Device Specific.(Z0).....0000
Manufacturer.....IBM
Machine Type and Model.....ST41600N
Serial Number.....00055744
Device Specific.(Z1).....70899604
```

cd0 00-00-0S-10 CD-ROM Drive

```
Device Specific.(Z0).....0580
Manufacturer.....TOSHIBA
Machine Type and Model.....CD-ROM DRIVE:XM
ROS Level and ID.....3232
```

```
hdisk1          00-00-0S-20          1.37 GB SCSI Disk Drive
```



```

5      Device Specific.(Z0).....0000
      Manufacturer.....IBM
      Machine Type and Model.....ST41600N
      Serial Number.....00073612
      Device Specific.(Z1).....70899604

rmt0          00-00-0S-50          2.3 GB 8mm Tape Drive

10     Device Specific.(Z0).....0180
      Manufacturer.....EXABYTE
      Machine Type and Model.....EXB-8200

sa0           00-00-S1           Standard I/O Serial Port 1
tty0          00-00-S1-00        Asynchronous Terminal
15     sa1           00-00-S2           Standard I/O Serial Port 2
      tty1          00-00-S2-00        Asynchronous Terminal
      scsi1         00-01           SCSI I/O Controller

20     Device Driver Level.....00
      Diagnostic Level.....00
      Displayable Message.....SCSI
      EC Level.....C74317
      FRU Number.....31G9729
      Manufacturer.....IBM97N
25     Part Number.....43G1811
      Serial Number.....
      Loadable Microcode Level....0044
      ROS Level and ID.....0050
      Read/Write Register Ptr.....0100

30     hdisk2       00-01-00-00       1.37 GB SCSI Disk Drive

      Device Specific.(Z0).....0000
      Manufacturer.....IBM
35     Machine Type and Model.....ST41600N
      Serial Number.....00073493
      Device Specific.(Z1).....70899604

ento         00-03              Ethernet High-
40                                     Performance LAN
                                      Adapter

      Network Address.....02608C2F9E82
      ROS Level and ID.....0015
      Displayable Message.....802.3/ETHERNET
45     Part Number.....000G3369
      EC Level.....C73859
      Device Driver Level.....01
      Diagnostic Level.....01
      FRU Number.....000G3368
50     Serial Number.....00110116
      Manufacturer.....204491

```

55

x25s0	00-04	X.25 Adapter
fddio	00-05	FDDI Primary Card, Single Ring Fiber

Network Address.....10005AB8054F
 Displayable Message..... FDDI RING B
 EC Level.....C73876
 FRU Number..... 81F9003
 Manufacturer.....VEN0857049
 Part Number..... 31G9393
 Serial Number.....001114
 ROS Level and ID.....0000
 Loadable Microcode Level....01

fddi1	00-07	FDDI Primary Card, Dual Ring Fiber
-------	-------	---------------------------------------

Network Address.....10005AB8054E
 Displayable Message..... FDDI RING B
 EC Level.....C73876
 FRU Number..... 81F9003
 Manufacturer.....VEN0857049
 Part Number..... 31G9393
 Serial Number.....001069
 ROS Level and ID.....0000
 Loadable Microcode Level....01

fddix0	00-06	FDDI Extender Card
sa2	00-08	16-Port Asynchronous Adapter EIA-422A

Displayable Message.....16PORT RS422
 EC Level.....C26396
 FRU Number.....030F9297
 Manufacturer.....ven0857049
 Part Number.....071F0976
 Serial Number.....001329

tty2	00-08-01-00	Asynchronous Terminal
fpa0	00-00	Floating Point Processor
slc0	00-00	Serial Optical Link Chip
slc1	00-00	Serial Optical Link Chip
ioplanar1	00-10	I/O Planar

EC Level.....FFFFFFFF

bus1	00-10	Microchannel Bus
serdasda0	00-11	Serial-Link Disk Adapter

Part Number.....045G2774
 Serial Number.....00009908


```

hdisk4          00-11-03-00      1.07GB F Serial-
                                   Link Disk Drive

5      Part Number.....69F9821
      EC Level.....C79493
      Serial Number.....R012573V
      Machine Type and Model.....9333-110
      Manufacturer.....IBM      -0902
      ROS Level and ID.....63
10     Device Specific.(Z1)..... 8203386
      Device Specific.(Z2).....10959
      Device Specific.(Z3).....70F9042
      Device Specific.(Z4).....92199

15     ent1          00-14      Ethernet High-
                                   Performance LAN
                                   Adapter

      Network Address.....02608C2F8A70
      ROS Level and ID.....0015
20     Displayable Message.....802.3/ETHERNET
      Part Number.....000G3369
      EC Level.....C73859
      Device Driver Level.....01
      Diagnostic Level.....01
25     FRU Number.....000G3368
      Serial Number.....00114965
      Manufacturer.....204491

      mpqa0          00-15      4-Port Multi-
                                   protocol
                                   Communications
                                   Controller
30     mpq0          00-15-00      Multiprotocol
                                   Adapter Port
      mpq1          00-15-01      Multiprotocol
                                   Adapter Port
35     mpq2          00-15-02      Multiprotocol
                                   Adapter Port
      mpq3          00-15-03      Multiprotocol
                                   Adapter Port
40     mem0          00-0B      64 MB Memory Card

      Device Specific.(Z3).....07
      EC Level.....21
      Device Specific.(Z0).....00
      Device Specific.(Z1).....00
45     Device Specific.(Z2).....00
      Size.....64

      mem1          00-0C      64 MB Memory Card

50     Device Specific.(Z3).....07

```

	EC Level.....	21
	Device Specific.(Z0).....	00
	Device Specific.(Z1).....	00
5	Device Specific.(Z2).....	00
	Size.....	64
	mem2	00-0D
		64 MB Memory Card
10	Device Specific.(Z3).....	07
	EC Level.....	21
	Device Specific.(Z0).....	00
	Device Specific.(Z1).....	00
15	Device Specific.(Z2).....	00
	Size.....	64
	mem3	00-0F
		64 MB Memory Card
20	Device Specific.(Z3).....	07
	EC Level.....	21
	Device Specific.(Z0).....	00
	Device Specific.(Z1).....	00
	Device Specific.(Z2).....	00
25	Size.....	64
	mem4	00-0G
		64 MB Memory Card
30	Device Specific.(Z3).....	07
	EC Level.....	21
	Device Specific.(Z0).....	00
	Device Specific.(Z1).....	00
	Device Specific.(Z2).....	00
35	Size.....	64
	mem5	00-0H
		64 MB Memory Card
40	Device Specific.(Z3).....	07
	EC Level.....	21
	Device Specific.(Z0).....	00
	Device Specific.(Z1).....	00
	Device Specific.(Z2).....	00
45	Size.....	64
	sysunit0	00-00
		Bull DPX/20 System Unit

SECTION IV - Cont'd.

#3 - EXAMPLE OF E-MAIL FOR A CALLOUT

Successful callout to response center: Mon Mar 15
14:57:19 EST 1993

The reason for the callout is as follows:

ERROR LABEL: LION_BUFFERO
ERROR ID: 50CA5315

Date/Time: Thu Mar 11 14:15:08
Sequence Number: 95740
Machine Id: 000006706300
Node Id: onion
Error Class: S
Error Type: TEMP
Resource Name: tty3/0

Error Description
Buffer overrun: 64 port concentrator

Failure Causes
EXCESSIVE LOAD ON PROCESSOR

Recommended Actions
Reduce system load
Reduce serial port baud rate

Notes:

If an E-mail address is configured, E-mail such as the above example will be sent to the specified address whenever a callout occurs.

If it is desired to send E-mail notification to several people at once, then an E-mail alias is used.

It will be apparent to those skilled in the art that many changes may be made to the preferred embodiment of the present invention. For example, while a UNIX based host computer system was shown as utilizing the present invention to provide remote support, the present invention may be used on other system platforms, in conjunction with other types of operating systems and graphical interfaces and other system configurations. Also, the invention may be used to monitor other types of host system sources.

While in accordance with the provisions and statutes there has been illustrated and described the best form of the invention, certain changes may be made without departing from the spirit of the invention as set forth in the appended claims and that in some cases, certain features of the invention may be used to advantage without a corresponding use of other features.

Claims

1. A method of organizing and operating a proactive and reactive remote services facility (RSF) unit installable within a host system which is operatively connected to communicate with a remote response

center dedicated to performing remote support services for said host system involving diagnosis of host system problems reported to said center, said method comprising the steps of:

(a) constructing a number of independently operable software components, each component being constructed for performing one of a predetermined number of different basic functions required for performing said proactive and reactive support for said host system;

(b) including in each of said components, configuration control means for preconfiguring each component by establishing predetermined parameters defining how said each component is to perform said one of said number of basic functions in carrying out remote support; and,

(c) integrating said number of software components together in a predetermined manner so that said components collectively perform said proactive and reactive remote support according to said predetermined parameters preconfigured in step (b).

2. The method of claim 1 wherein said host system includes a host computer, an UNIX based operating system for controlling the operation of said host computer, a generic menu interface system (GMIS) unit for communicating with said operating system using menu initiated dialog sequences and a display terminal unit operatively coupled to said host computer and to said GMIS unit for enabling a user to enter commands directly or through said GMIS unit for execution by said RSF unit, said method further comprising the steps of:

(d) operatively coupling each of said number of software components to said GMIS unit; and,

(e) including within each of said number of components, a number of modules which operatively couple to said GMIS unit, said number of modules being responsive to a different predetermined command set containing a small number of commands customized for configuring said each of said components according to step (b).

3. The method of claim 2 wherein said computer system includes a number of source error log files used by said host computer for logging errors encountered while running applications on said host computer and wherein said remotely located response center performs support services for said host system by calling back into said host system in response to a first component of said number of components having detected an overthreshold condition which caused a callout action to be made by said RSF unit for further diagnosis and correction of a system problem reported by said host system, said first component including said number of source error log files and a control attribute file and wherein said step (b) of said method further includes the steps of:

(f) configuring each of said number of source error log files to be monitored by causing storage of a source record entry in said control file for each of said number of source log files to be monitored, said record entry containing a unique user specified name for said log file, a path name to said log file, information identifying the type of log file, information identifying how often to scan for new messages and information designating what notification action to invoke if a message is detected by said first component as being overthreshold; and;

(g) initiating said notification action specified by said source record entry to said response center upon detecting an occurrence of an overthreshold condition within said source.

4. The method of claim 1 wherein said number of components of said RSF unit are included within a predetermined number of subpackages, said predetermined number of subpackages including a problem detection and reaction subpackage, a system action subpackage, a callback subpackage and a cluster subpackage and wherein said method further includes the step of:

selectively loading predetermined ones of said predetermined number of subpackages as a function of how said host system has been configured to operate.

5. The method of claim 2 wherein said GMIS unit utilizes a hierarchical organization of menu screens; said organization including an initial problem determination submenu containing a number of selection items relating to specific components of said number of components, each selection item leading to a number of submenus which in turn lead to dialogs for each command of said small number of commands enabling configuration of said number of said components.

6. A proactive and reactive remote services facility (RSF) unit installable within a host system which is operatively connected to communicate with a remote response center dedicated to performing remote support services for said host system involving diagnosis of host system problems reported to said center, said RSF unit comprising:

a number of independently operable software components, each component being constructed for performing one of a predetermined number of different basic functions required for performing said proactive and reactive support for said host system;

each of said components including configuration control means for preconfiguring said each component by establishing predetermined parameters defining how said each component is to perform said one of said number of basic functions in carrying out remote support; and,

means for integrating said number of software components together in a predetermined manner so that said components collectively perform said proactive and reactive remote support according to said predetermined parameters.

7. The RSF unit of claim 6 wherein said host system includes a host computer, an UNIX based operating system for controlling the operation of said host computer, a generic menu interface system (GMIS) unit for communicating with said operating system using menu initiated dialog sequences and a display terminal unit operatively coupled to said host computer and to said GMIS unit for enabling a user to enter commands directly or through said GMIS unit for execution by said RSF unit, said RSF unit further comprising:

means operatively coupling each of said number of software components to said GMIS unit; and,

each of said number of components further including a number of modules which operatively couple to said GMIS unit, said number of modules being responsive to a different predetermined command set containing a small number of commands customized for configuring said each of said components.

8. The RSF unit of claim 7 wherein said host computer further includes utility and application programming means for logging errors encountered while running on said host computer and wherein said remotely located response center performs support services for said host system by calling back into said host system in response to a first component of said number of components having detected an overthreshold condition which caused a callout action to be made by said RSF unit for further diagnosis and correction of a system problem reported by said host system, said first component further including:

a number of source error log files used by said programming means for logging said errors and a control attribute file;

means for configuring each of said number of source error log files to be monitored, said means for configuring causing storage of a source record entry in said control file for each of said number of source log files to be monitored, said record entry containing a unique user specified name for said log file, a path name to said log file, information identifying the type of log file, information identifying how often to scan for new messages and information designating what notification action to invoke if a message is detected by said first component as being overthreshold; and;

means for initiating said notification action specified by said source record entry to said response center upon detecting an occurrence of an overthreshold condition within said source.

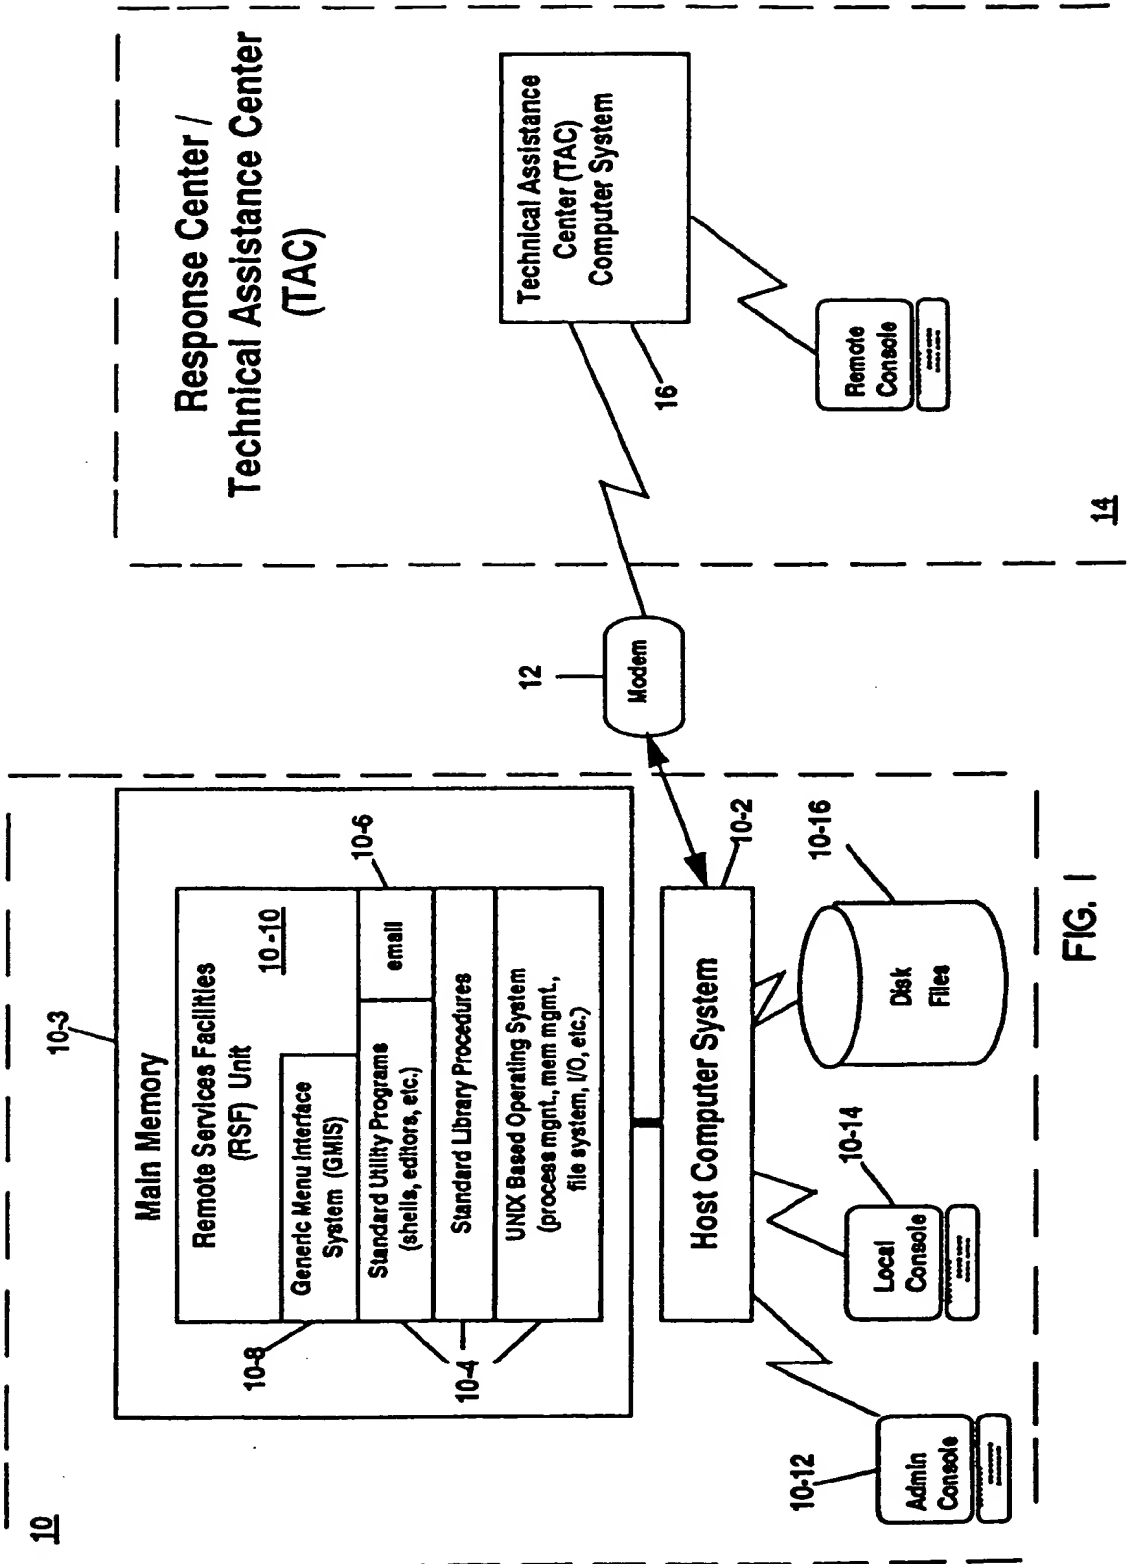


FIG. 1

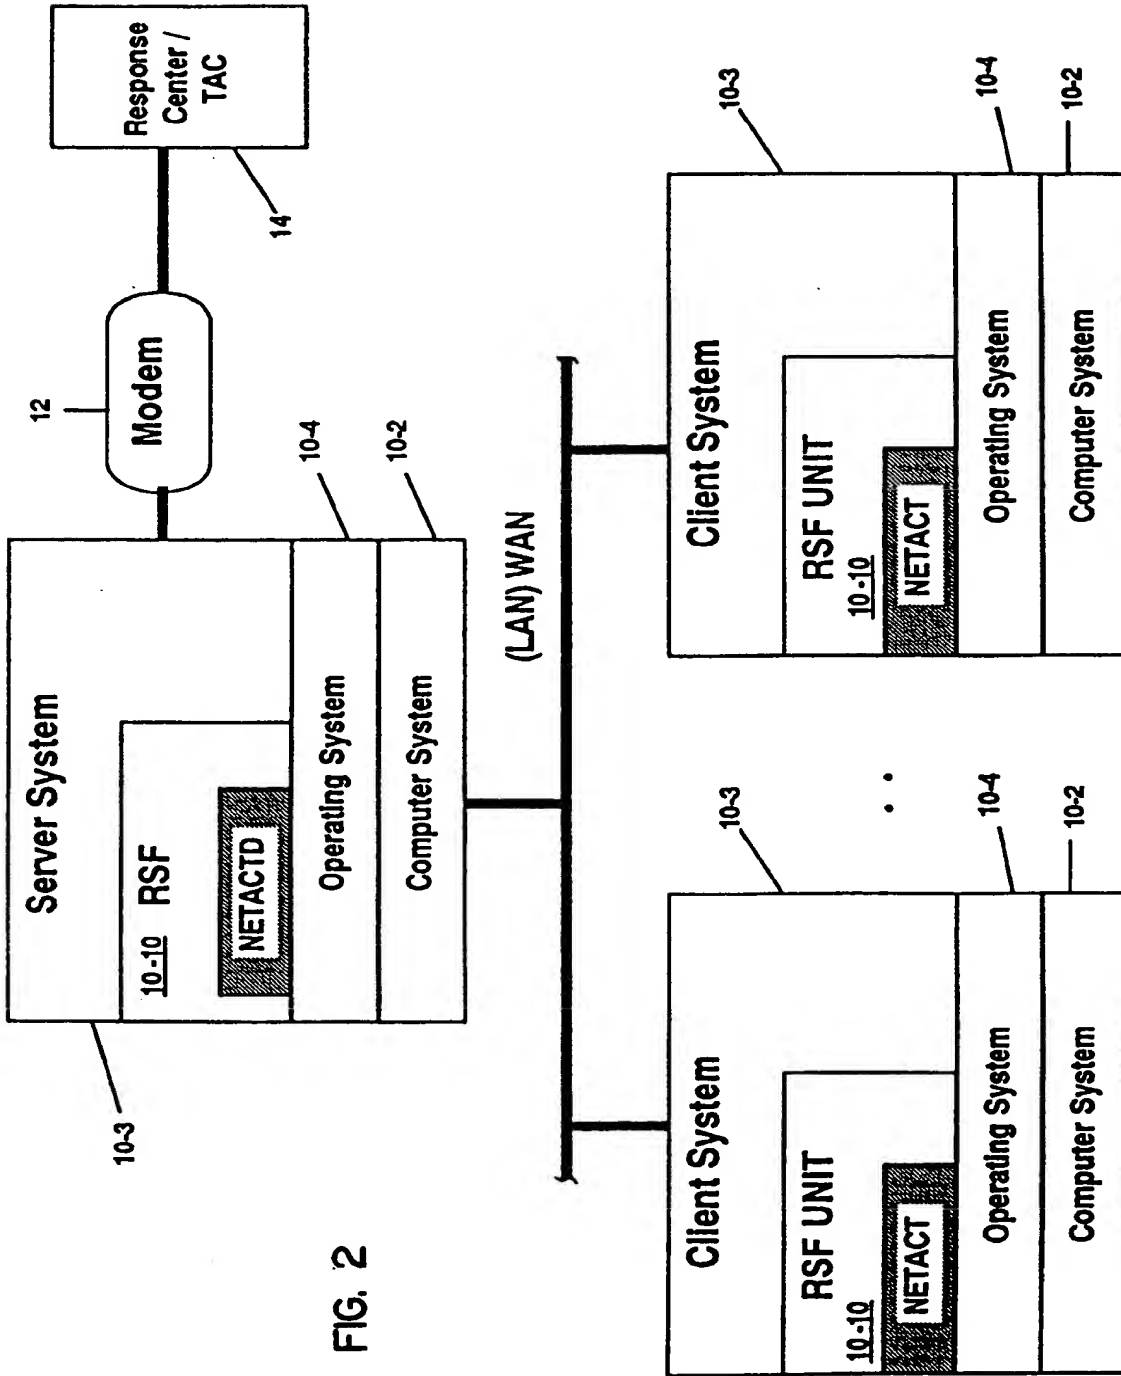


FIG. 2

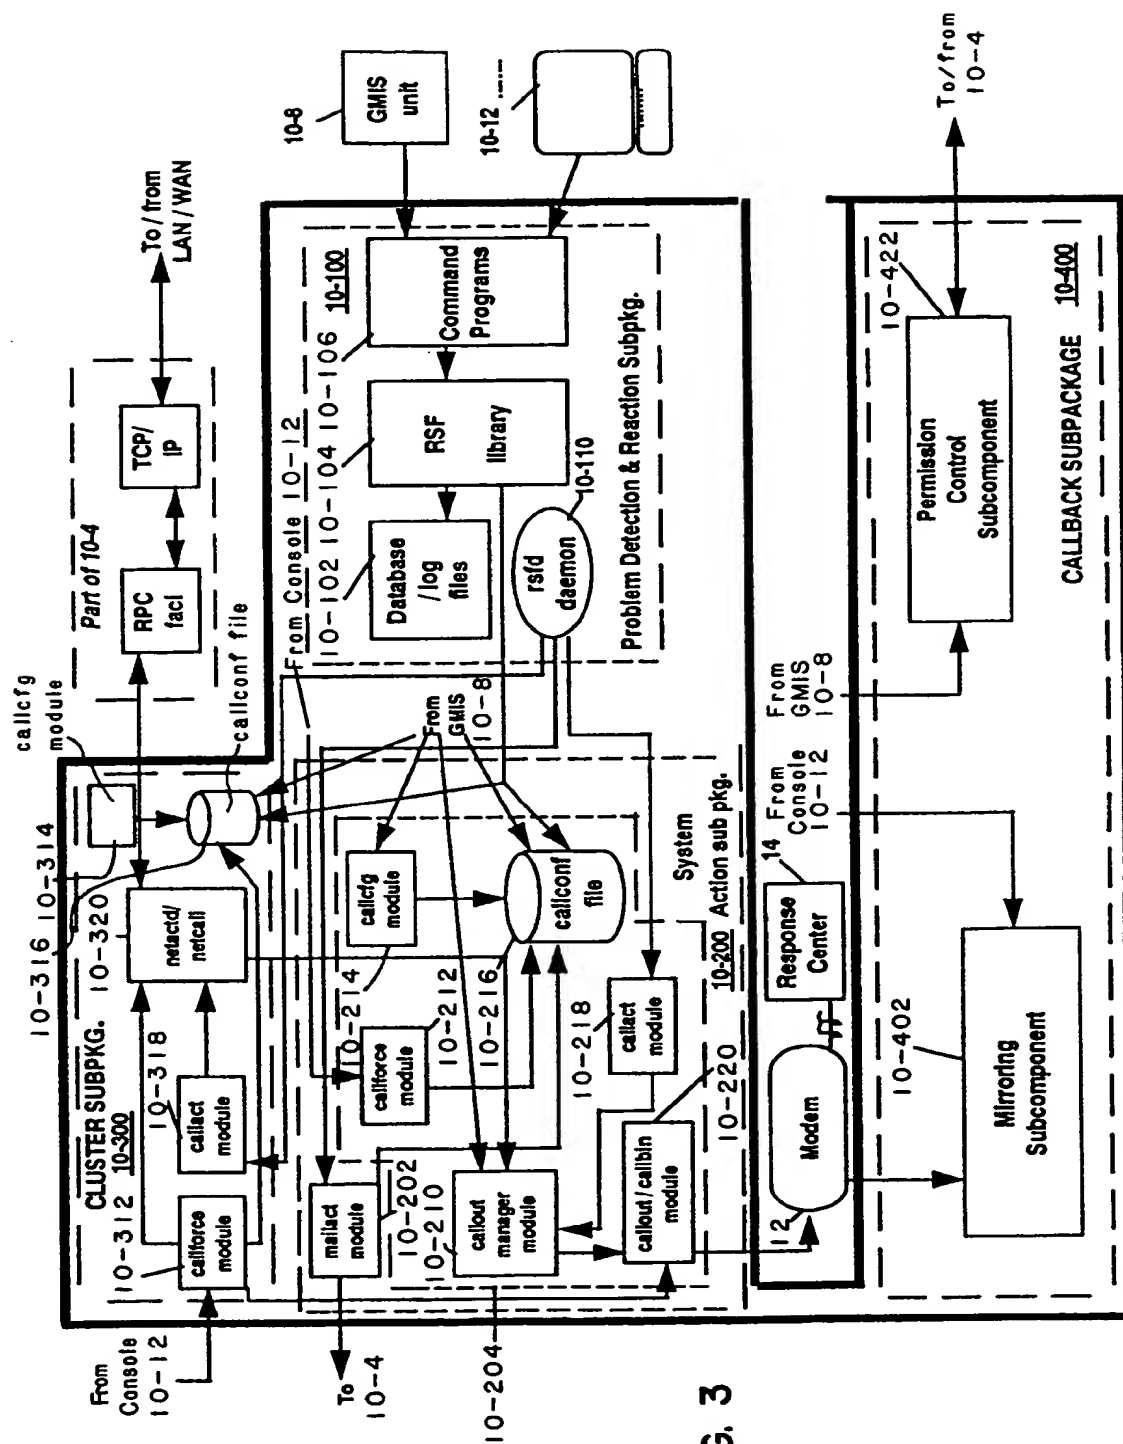


FIG. 3

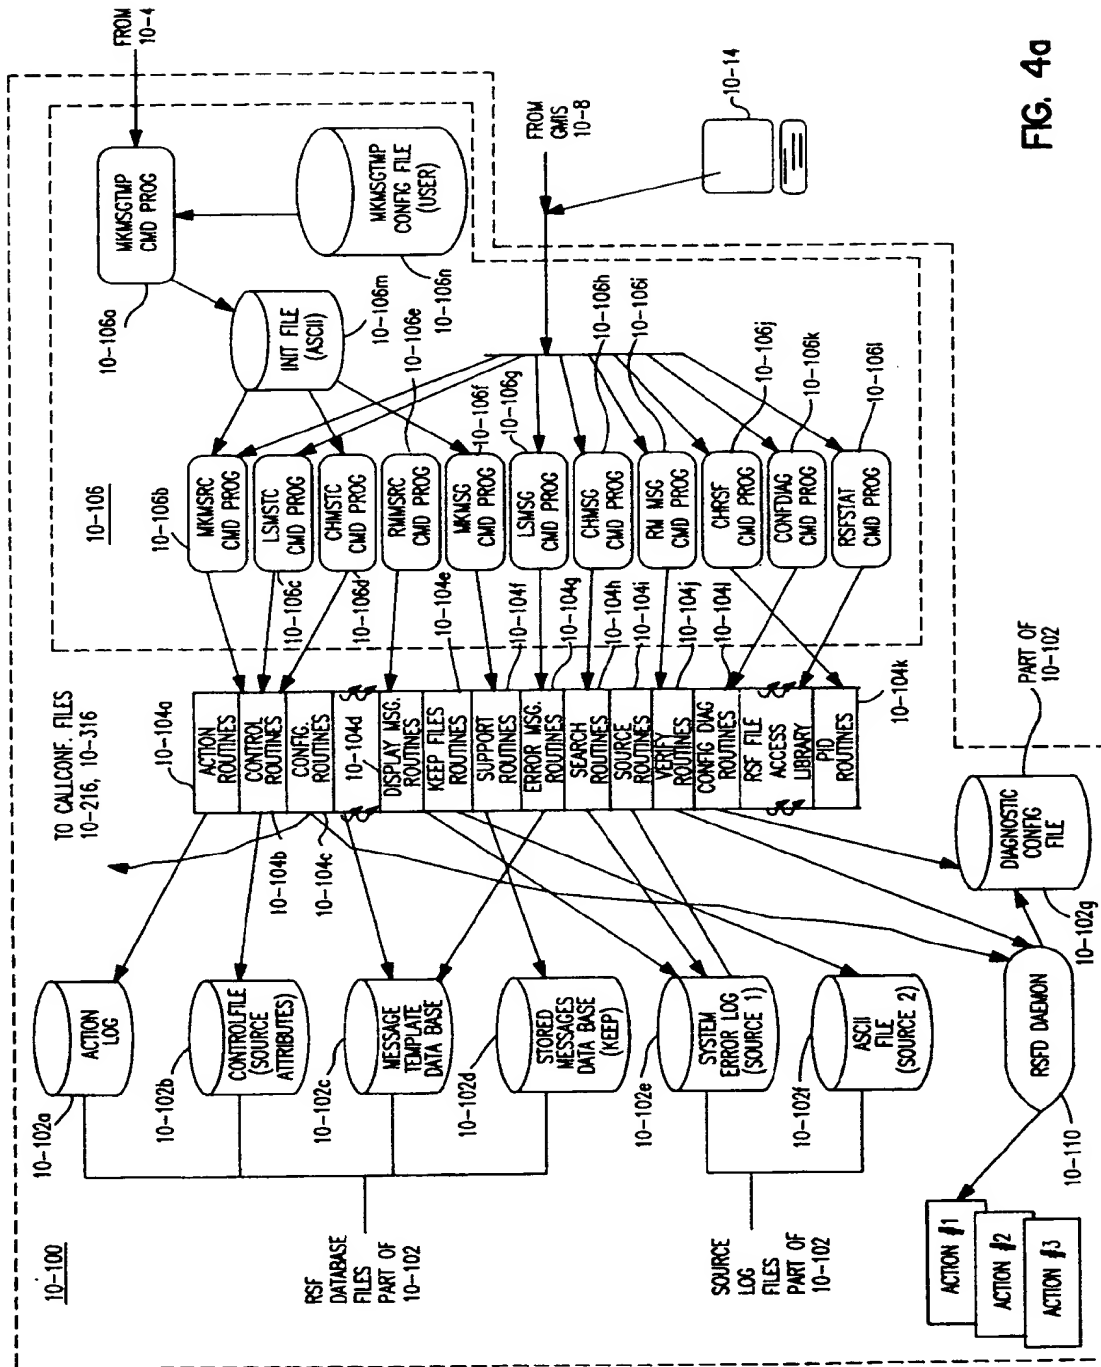


FIG. 4a

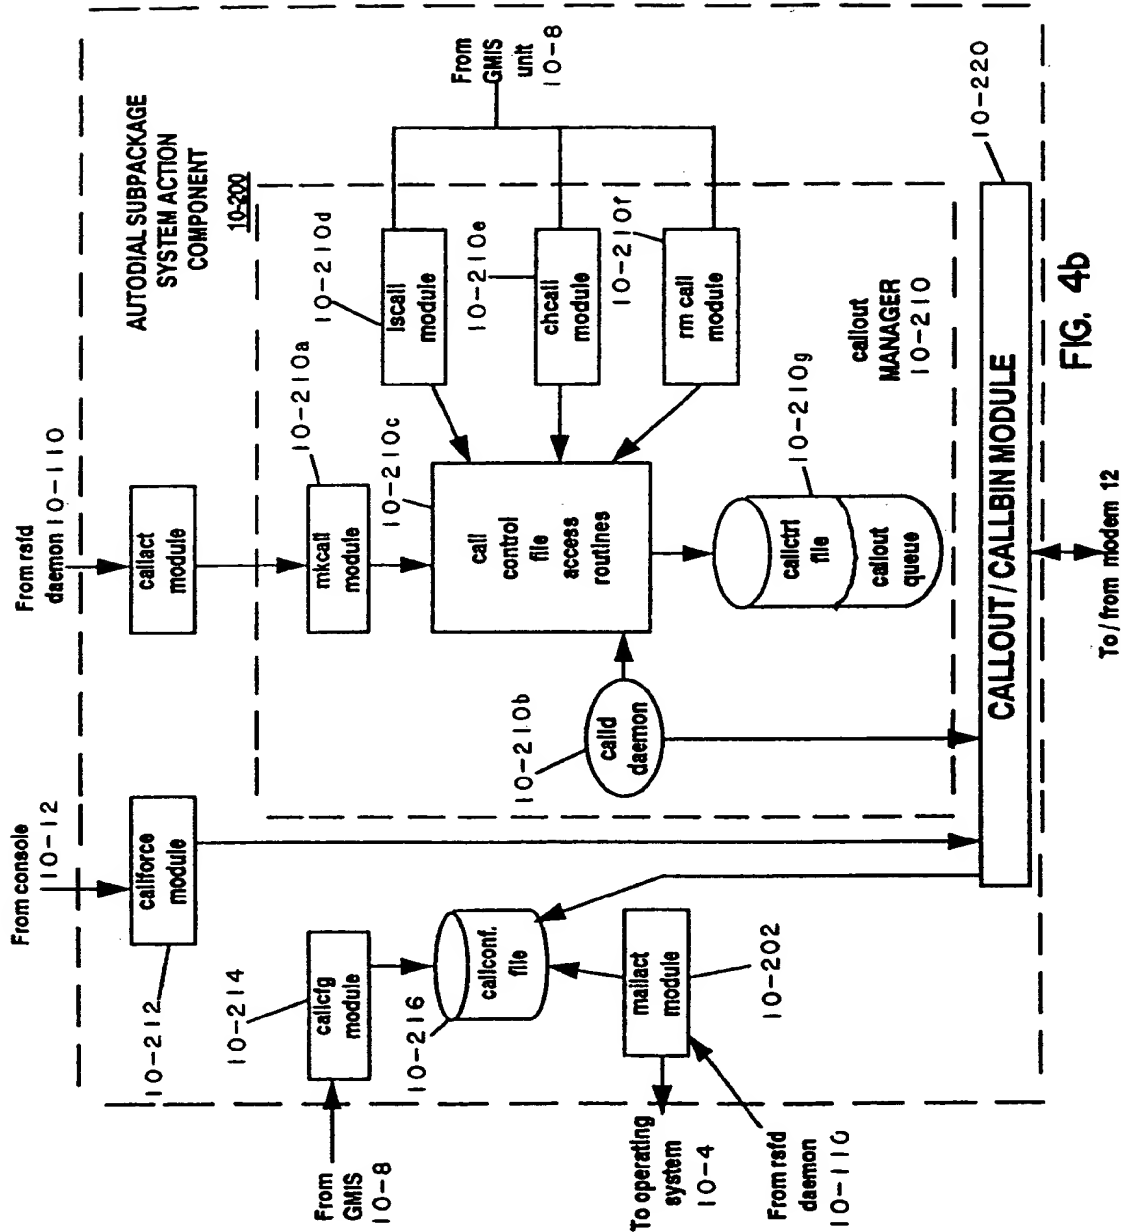


FIG. 4b

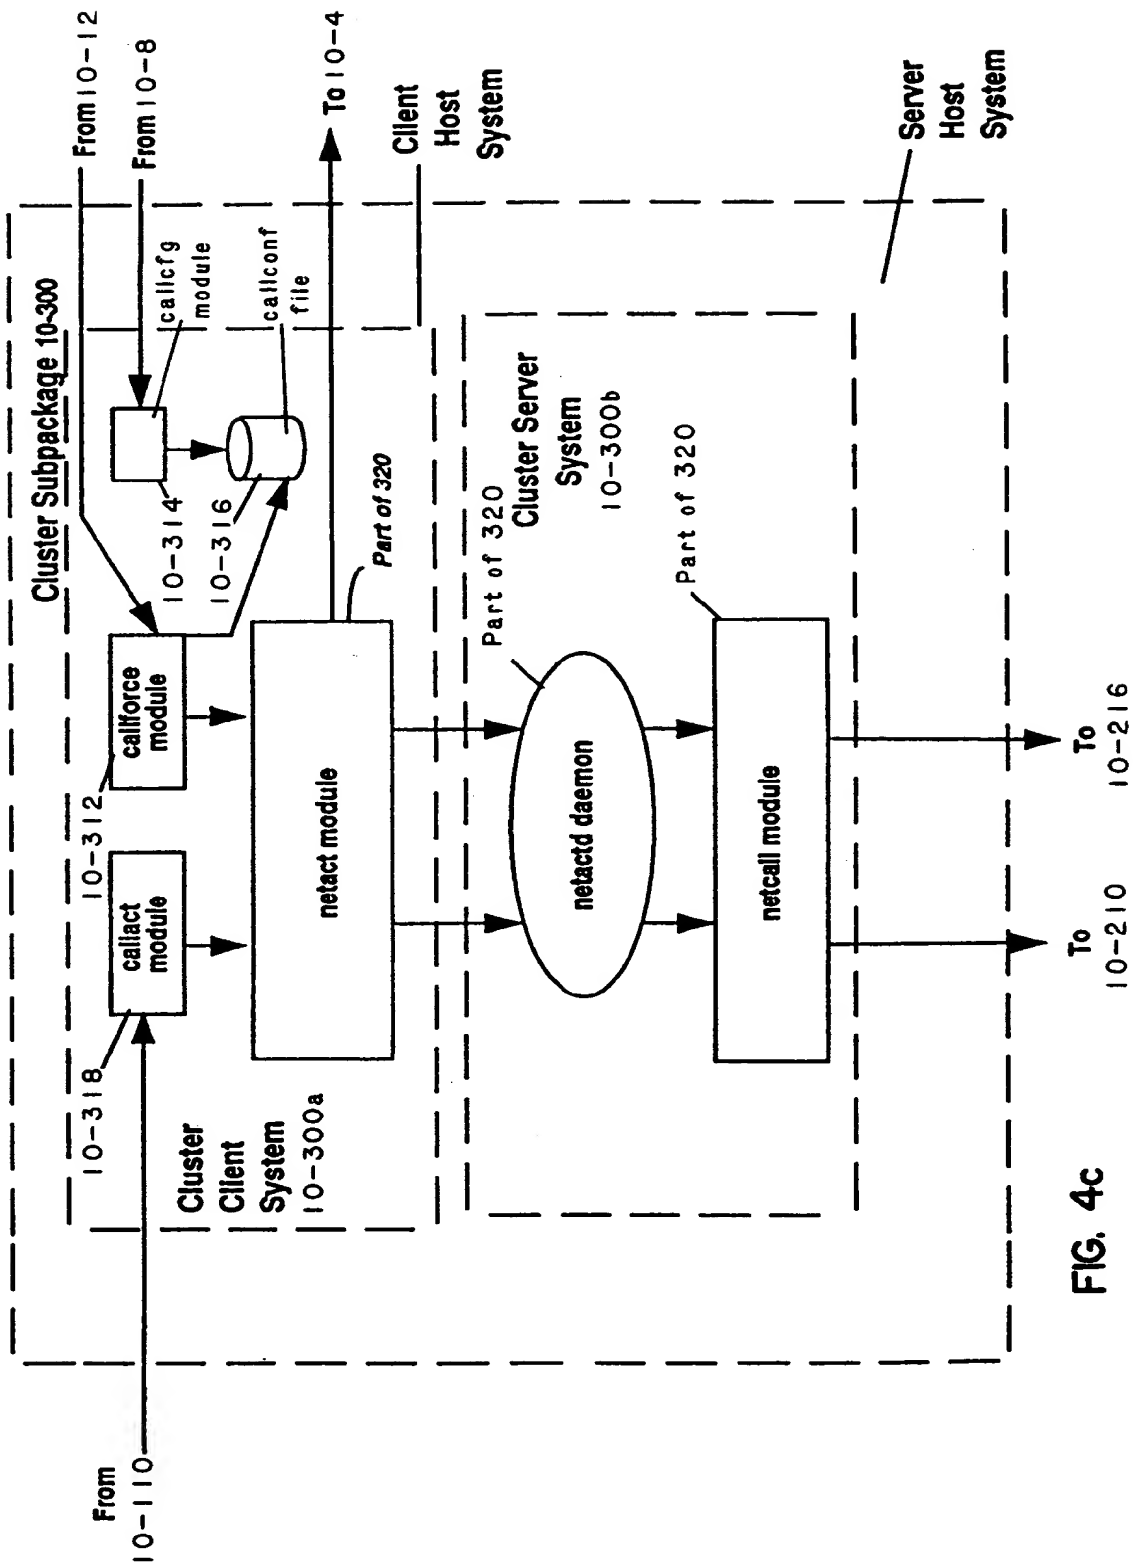


FIG. 4c

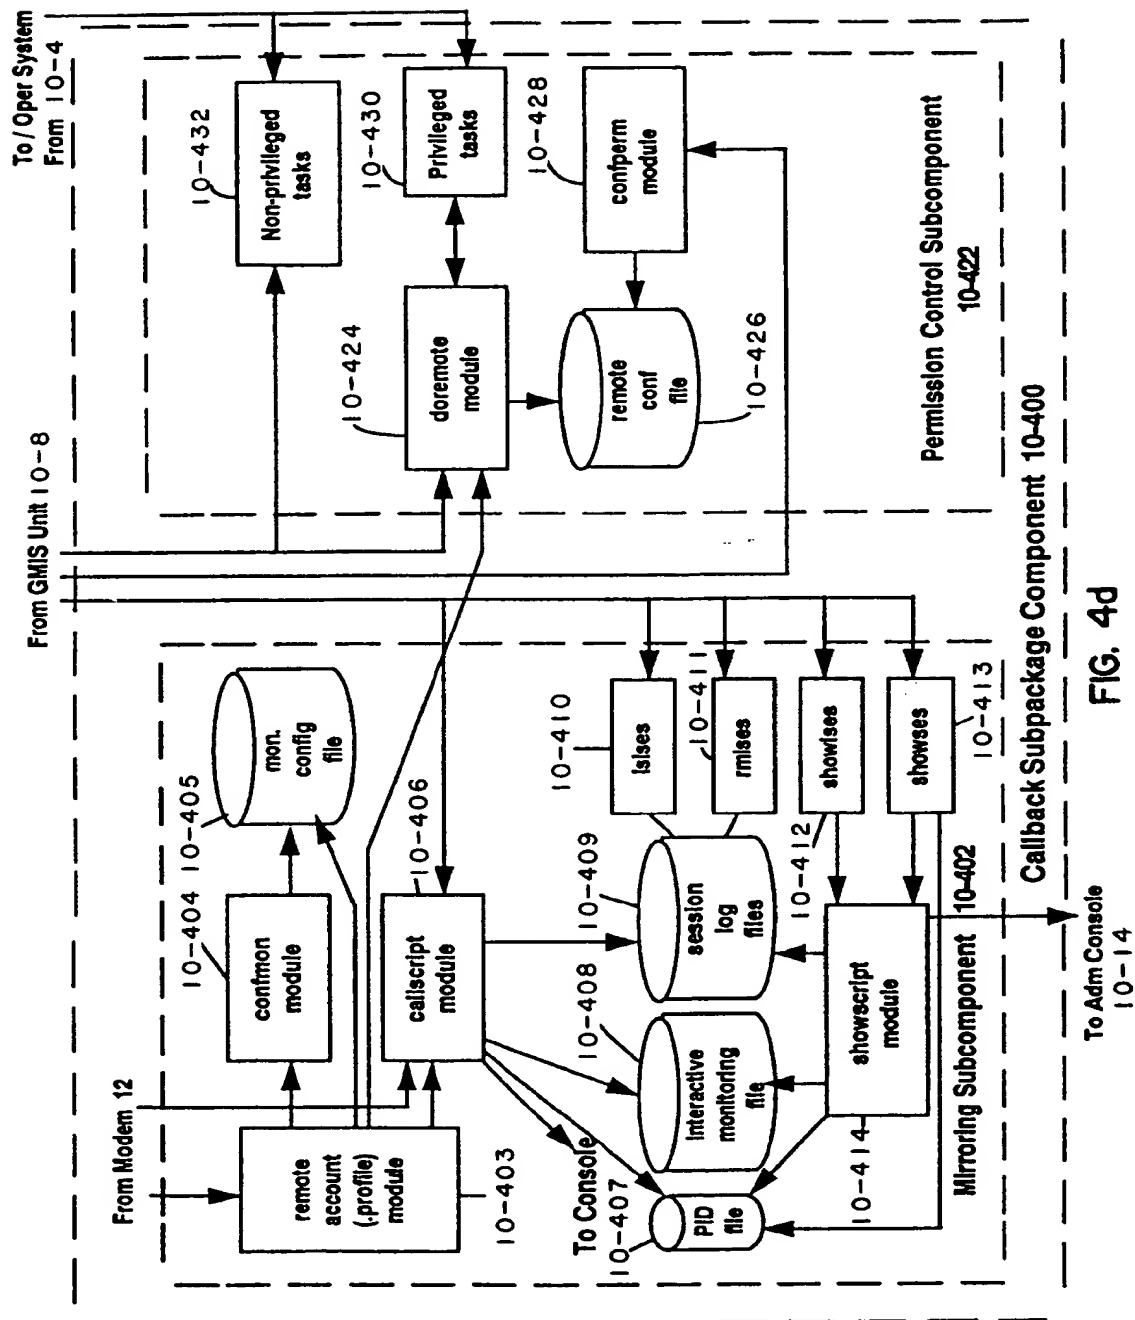


FIG. 4d

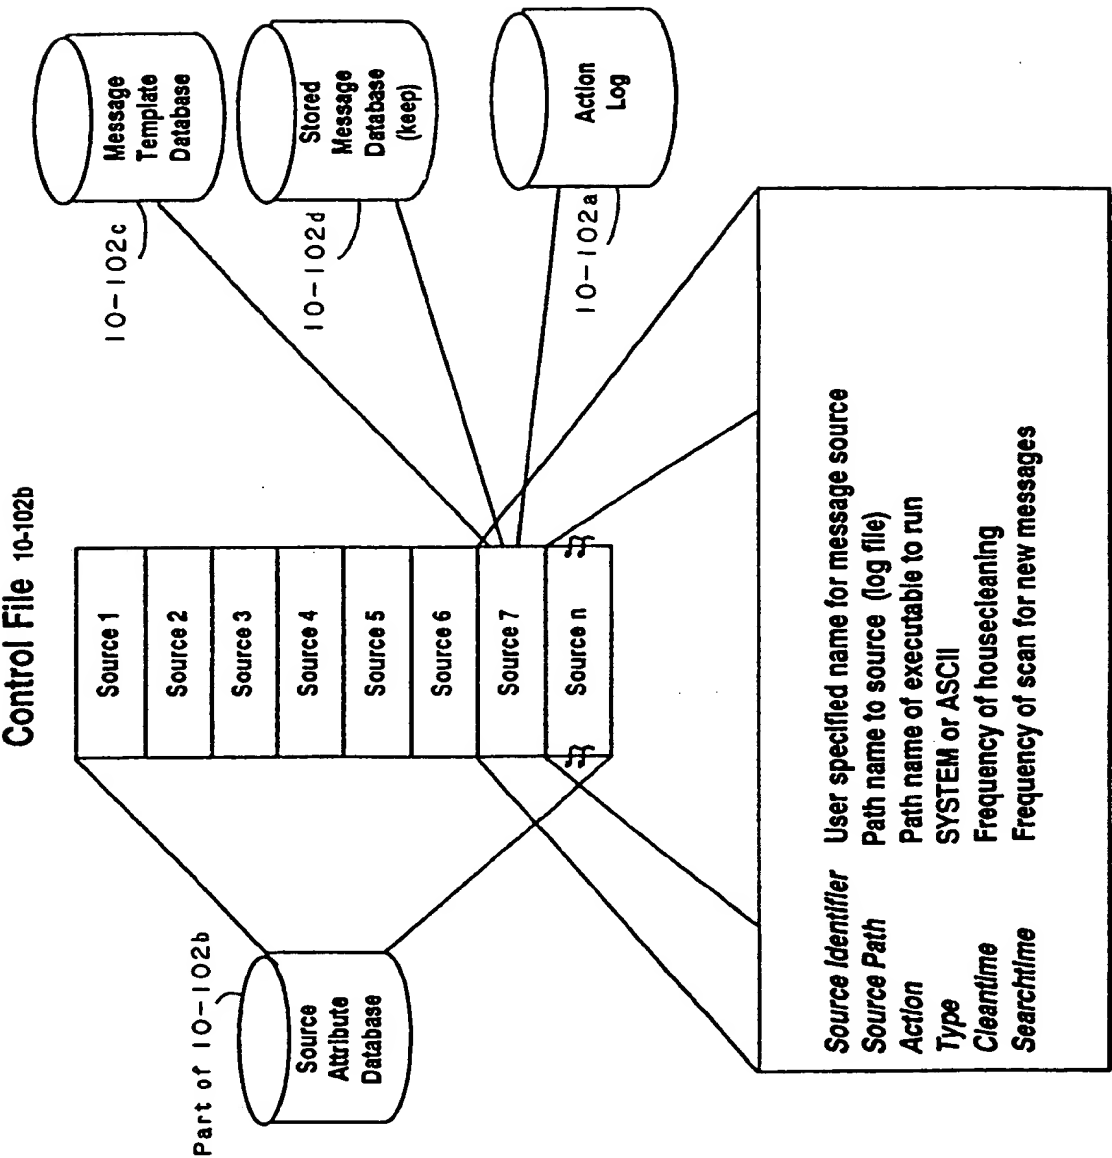


FIG. 5a

Source Message Template Database 10-102c

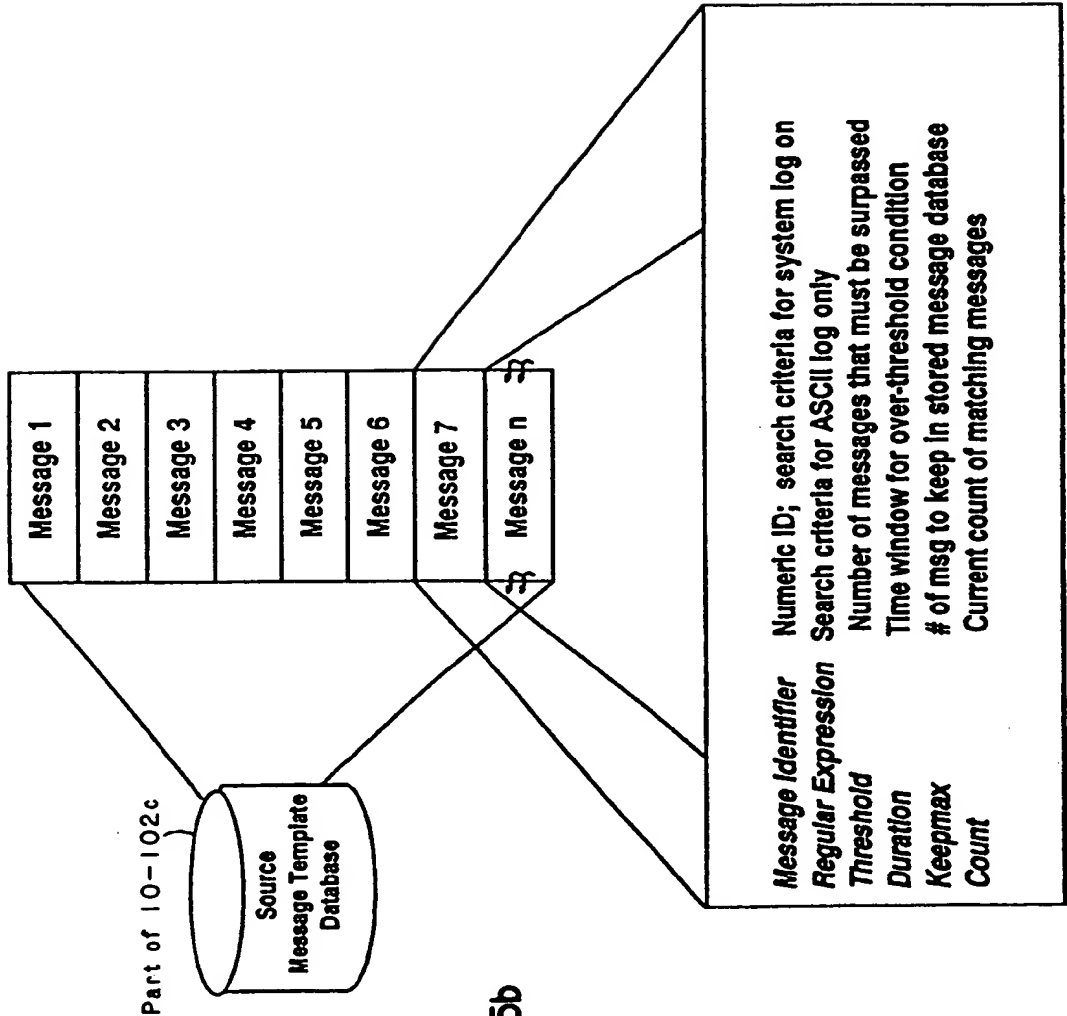


FIG. 5b

Record of actions for source "system"

 Date: Thu Apr 1 14:26:34 1993
 ACTION: /usr/bin/callact
 RESULT: UNSUCCESSFUL (1)
 OUTPUT:
 Performing Callout: Thu Apr 1 14:26:30 EST 1993
 Error: Invalid message identifier
 Specified ID is not a hexadecimal number: hazel
 Date: Thu Apr 1 14:56:05 1993
 ACTION: /usr/bin/mailact
 RESULT: SUCCESSFUL
 OUTPUT:
 Date: Fri Apr 2 12:53:26 1993
 ACTION: /usr/bin/callact
 RESULT: SUCCESSFUL
 OUTPUT:
 Performing Callout: Fri Apr 2 12:53:19 EST 1993
 Successfully queued callout
 Date: Fri Apr 2 12:53:26 1993
 ACTION: /usr/bin/mailact
 RESULT: SUCCESSFUL
 OUTPUT:

Record of actions on behalf of cluster nodes

 Date: Thu Apr 1 15:36:13 1993
 ACTION: /usr/bin/netcall
 RESULT: SUCCESSFUL
 OUTPUT:
 Callout on behalf of cluster node fiver
 Successfully sent message to BRC
 Customer Service Request Number: 20823928
 Date: Thu Apr 1 15:39:58 1993
 ACTION: /usr/bin/netcall
 RESULT: SUCCESSFUL
 OUTPUT:
 Callout on behalf of cluster node thayli
 Successfully sent message to BRC
 Customer Service Request Number: 20823929
 Date: Thu Apr 1 15:47:17 1993
 ACTION: /usr/bin/netcall
 RESULT: SUCCESSFUL
 OUTPUT:
 Callout on behalf of cluster node hyzenthlay
 Successfully sent message to BRC
 Customer Service Request Number: 20823930

FIG. 5c

Source Message Database
Part of 10-102d

Keep file

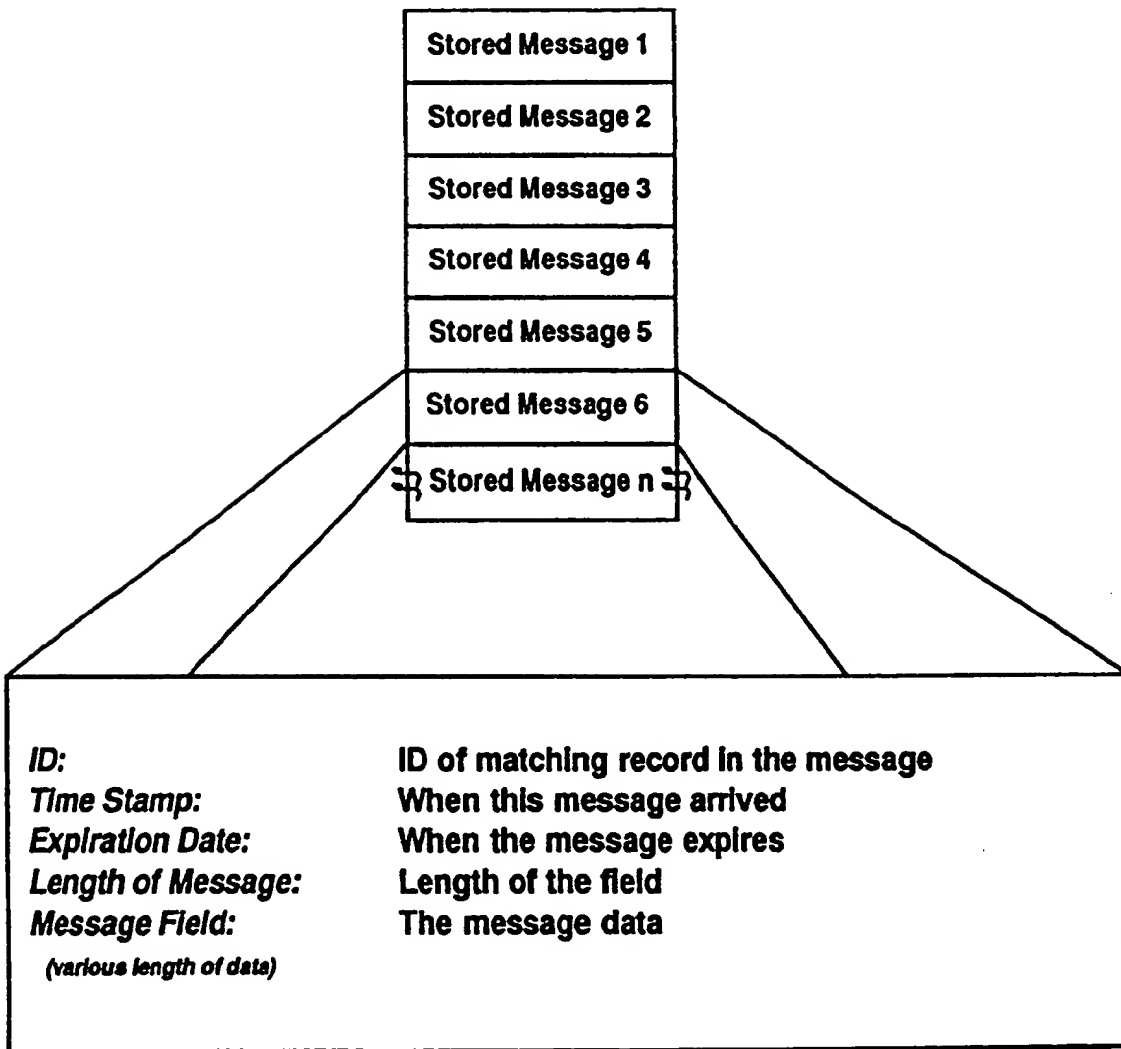


FIG. 5d

ID	LABEL	TYPE	CLASS	ERROR DESCRIPTION
00530EA6	DMA_ERR	UNKN	H	UNDETERMINED ERROR
0065D888	LAN0030	Temp	S	SOFTWARE PROGRAM ERROR
1063B942	LU0_ConfOp	PERM	S	CONFIGURATION OR CUSTOMIZATION ERROR
019125F9	LAN801E	Temp	S	SOFTWARE PROGRAM ERROR
01F2D769	X25_ALERT2	PERM	H	X-25 RESTART REQUEST BY X.25 ADAPTER
02288DD6	LAN805C	Perm	S	SOFTWARE PROGRAM ERROR
0260B082	SDL800E	PERM	S	SOFTWARE PROGRAM ERROR
026D4F56	SDL801D	PERM	S	SOFTWARE PROGRAM ERROR
0299F00B	FDDI_NOMBU	TEMP	S	RESOURCE UNAVAILABLE ERROR
0375DFC2	X25_ALERT9	TEMP	H	X-9FRAME TYPE W RECEIVED
038F2580	SCSI_ERR7	UNKN	H	UNDETERMINED ERROR
038F3117	MPQP_DSRDR	TEMP	H	COMMUNICATION PROTOCOL ERROR
03ACD152	NB20	PERM	S	SOFTWARE PROGRAM ERROR
429B097	LAN0853	Perm	S	SOFTWARE PROGRAM ERROR
1C8C0	VCA_INITZ	TEMP	S	Host independent initialization failed
66	SCSI_ERR1	PERM	H	ADAPTER ERROR
	SDL0014	TEMP	S	SOFTWARE PROGRAM ERROR
	MEM2	PERM	H	Memory failure
	CFG_BU	PERM	S	Configuration failed:ad bus type


SYSTEM LOG FILE

Jun 23 08:54:51 TP_init: Can't allocate memory for first IOPB
 Jun 23 13:02:42 Feedback from MVU-MS does not indicate movement
 Jun 23 13:02:46 Controller retries attempted before command completed
 Jun 23 13:02:46 Can't allocate message buffer
 Jun 23 13:02:51 Illegal (odd) count specified in S/G list
 Jun 23 13:03:51 Video signal missing from TP module 2
 Jun 23 13:02:55 Cannot start motor (4:2): fail, sense key is 0x2231
 Jun 23 13:02:55 Cannot activate MVU 4 of TP module 2
 Jun 23 13:03:57 Audio signal missing from TP module 2
 Jun 23 13:03:59 Status reg 0x02, Bank 0x0003, Syndrome 0xFFFF, err on TP 2
 Jun 23 13:05:00 Can't flush/unmap unit structure
 Jun 23 13:05:00 Address not mapped properly
 Jun 23 13:05:01 Can't dump more than 512 MB physical memory


ASCII LOG FILE

FIG. 5e


৬৫

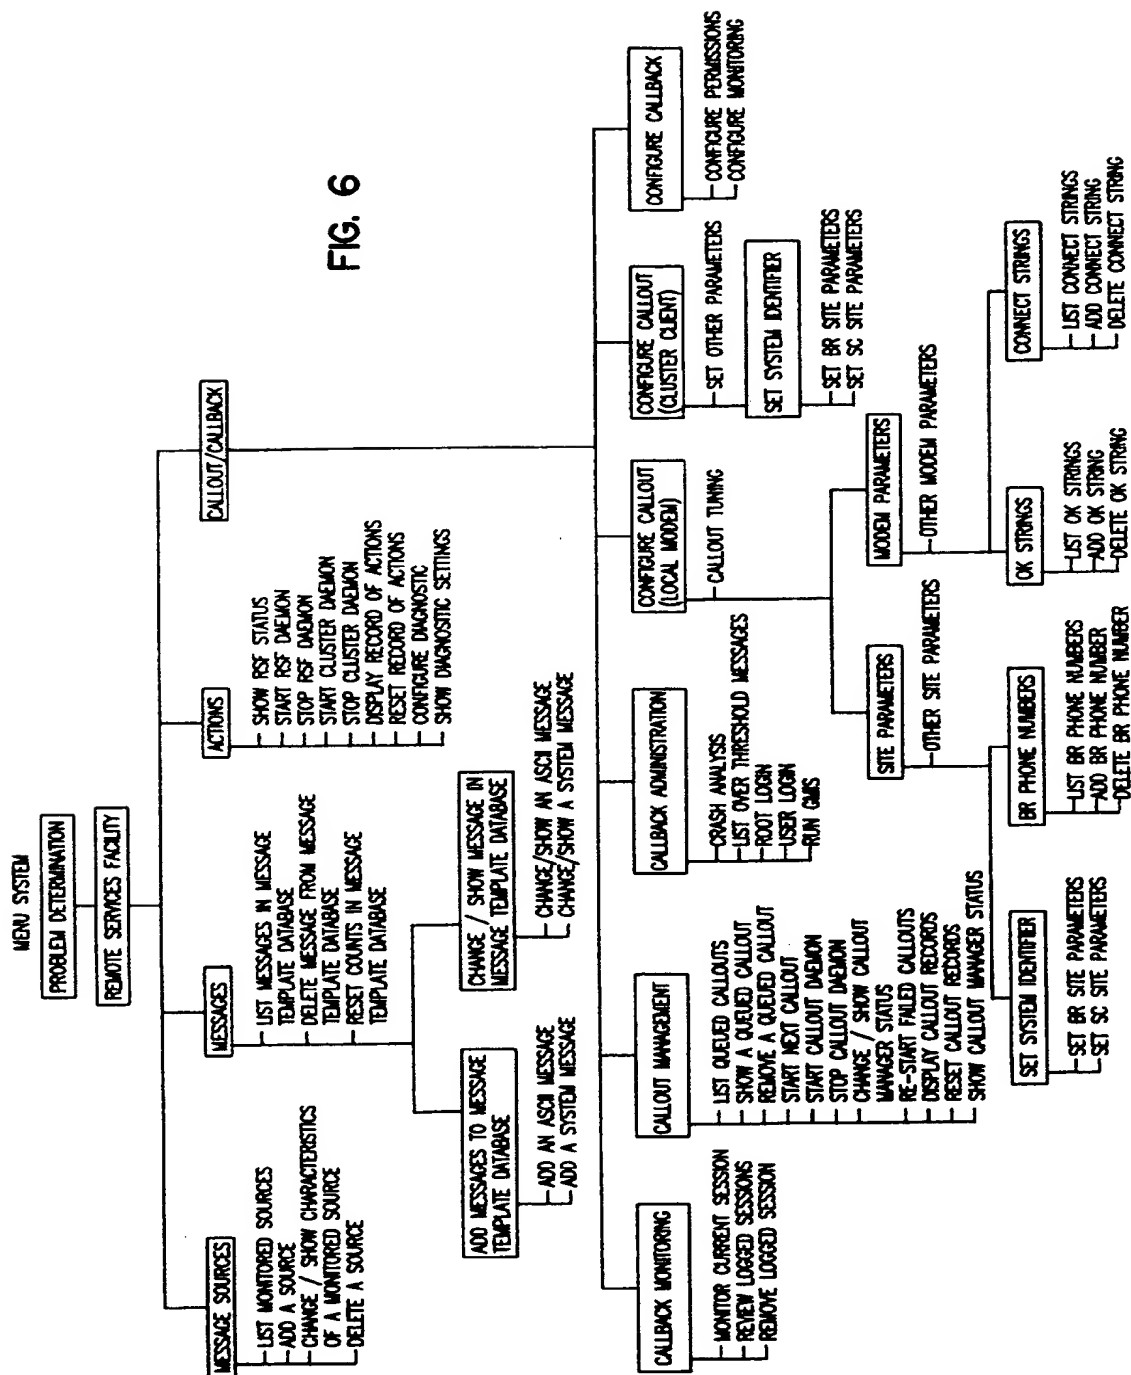


000: SAMPLE SEQUENCE OF RSF CONFIGURATION STEPS

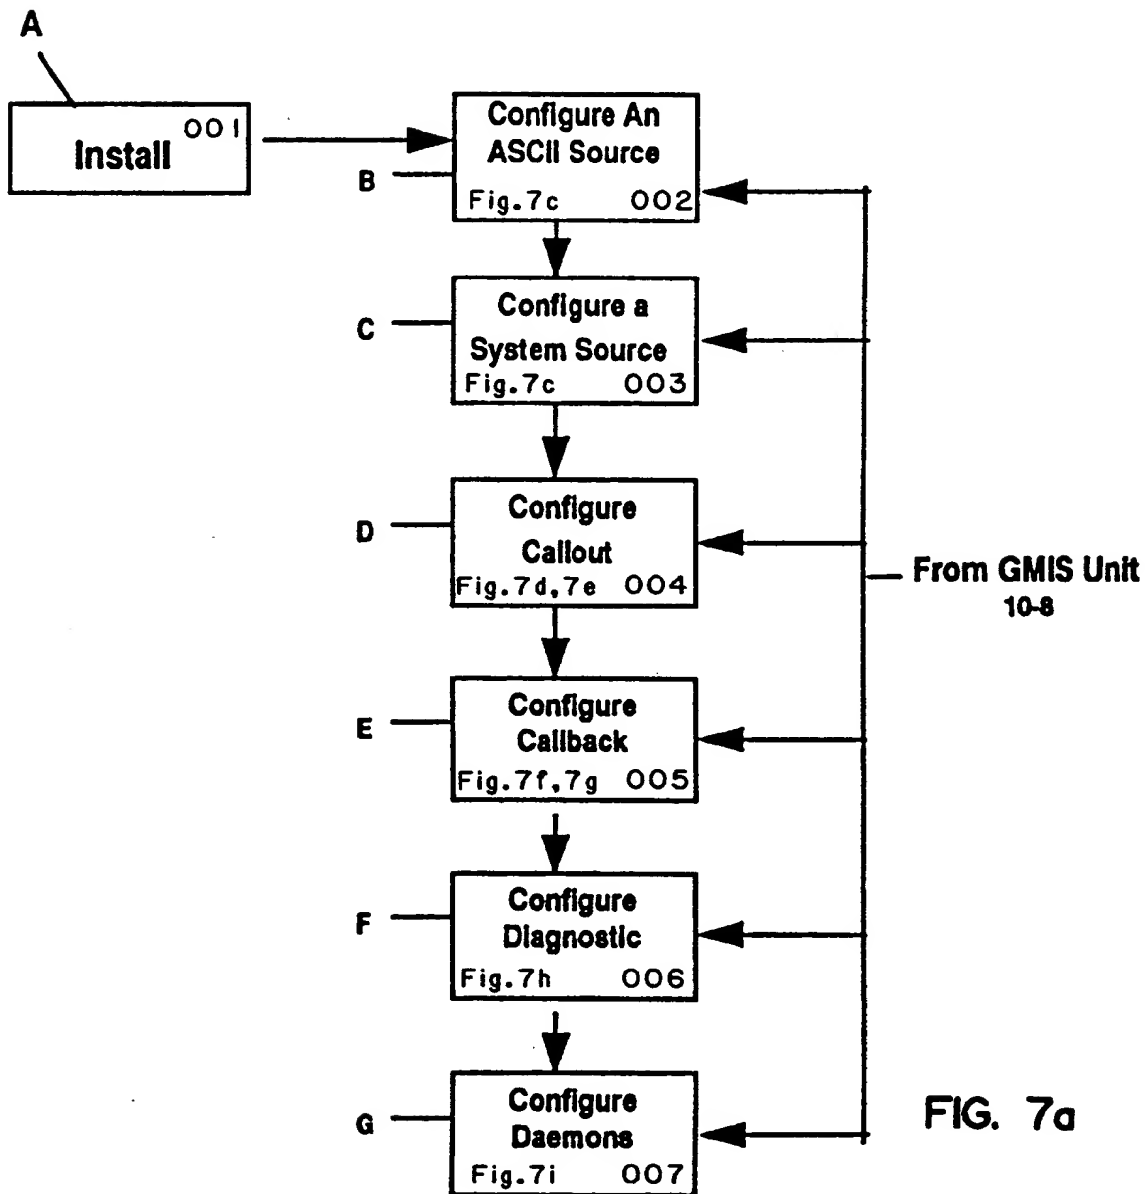

001: INSTALL (Detail of CONFIG. during Install)

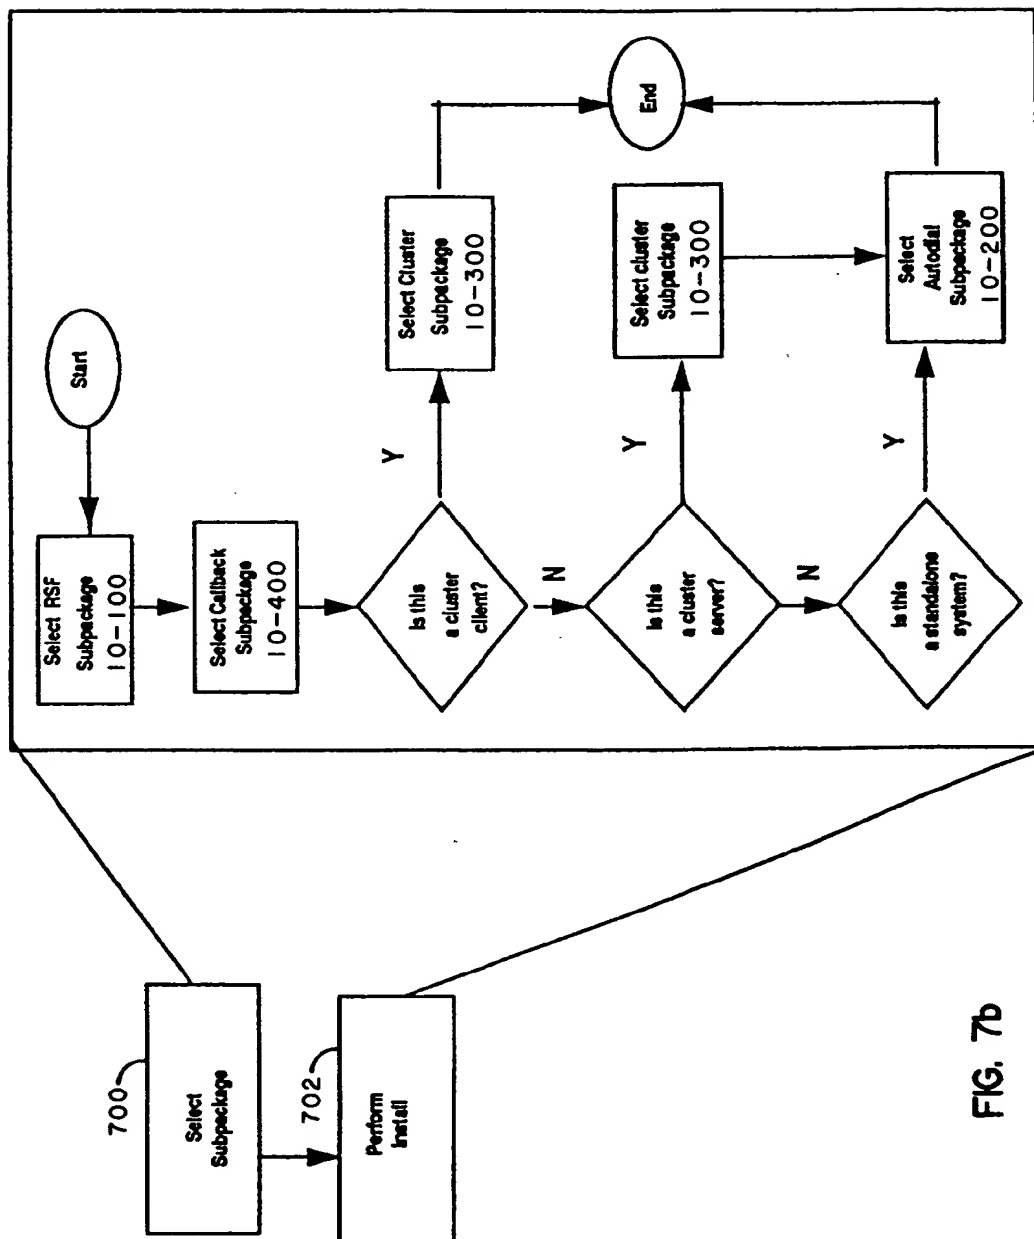

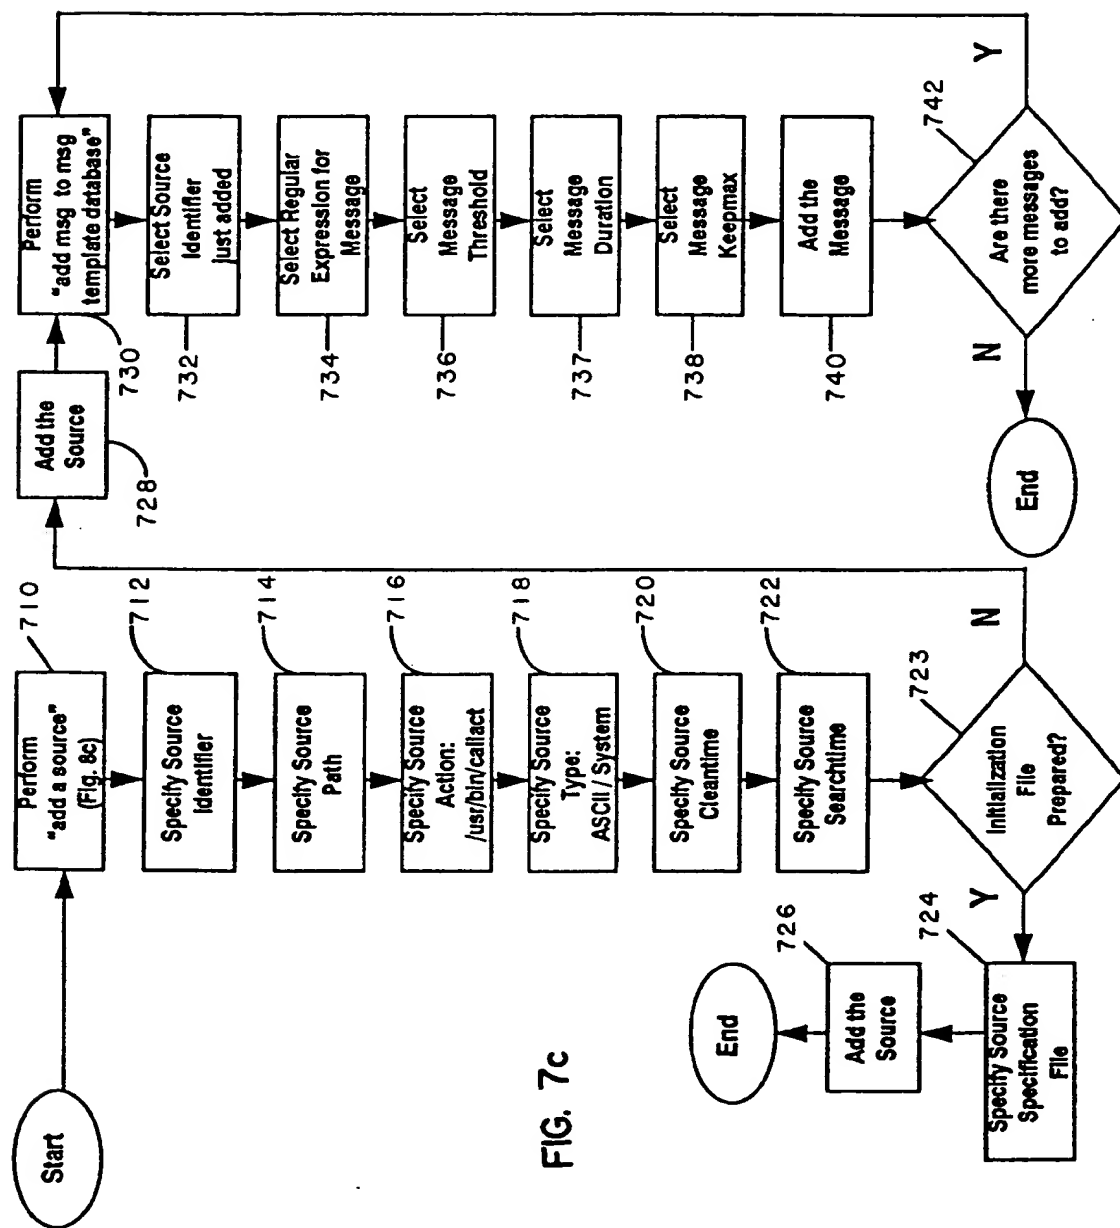

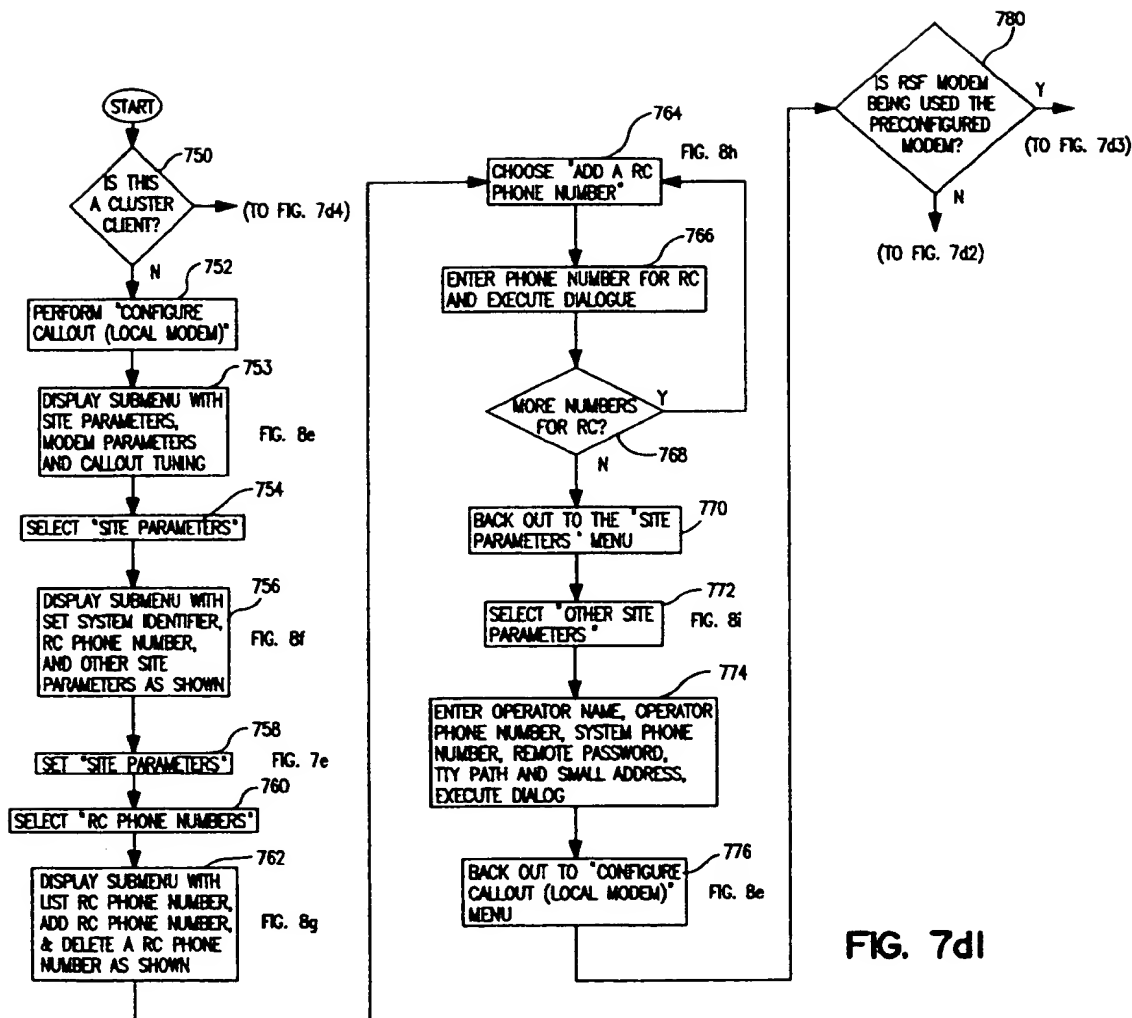


FIG. 7dI

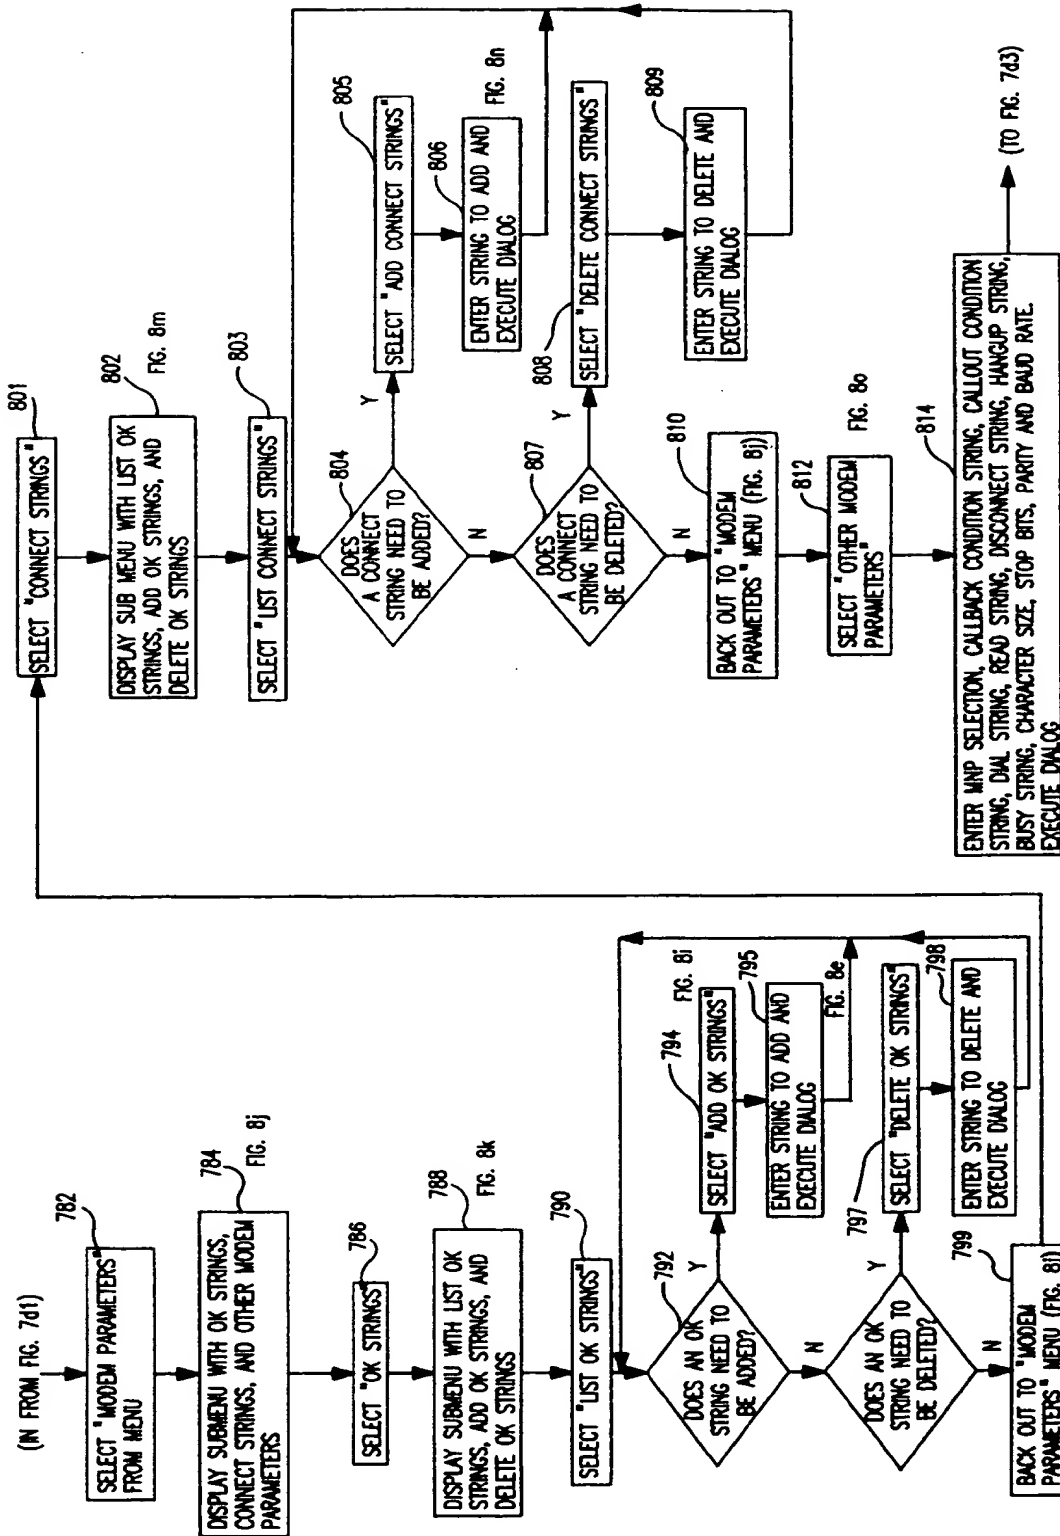


FIG. 7d2

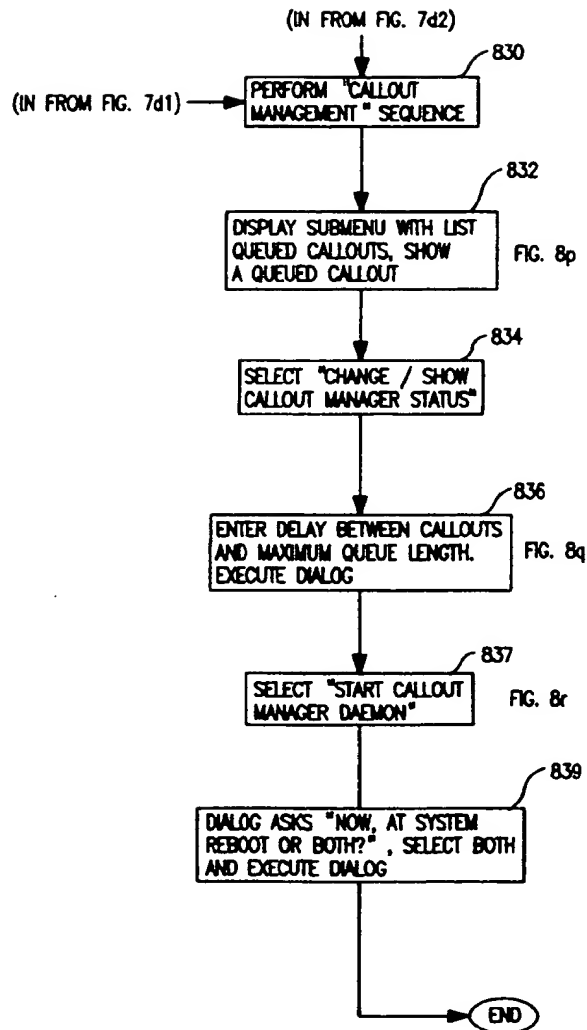


FIG. 7d3

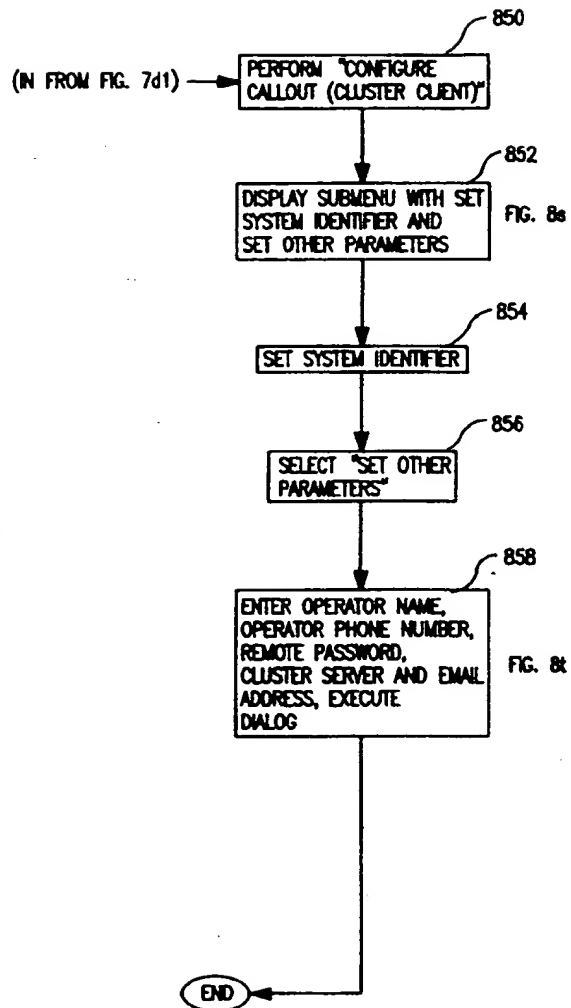


FIG. 7d4

008: SET THE SYSTEM IDENTIFIER (detail)

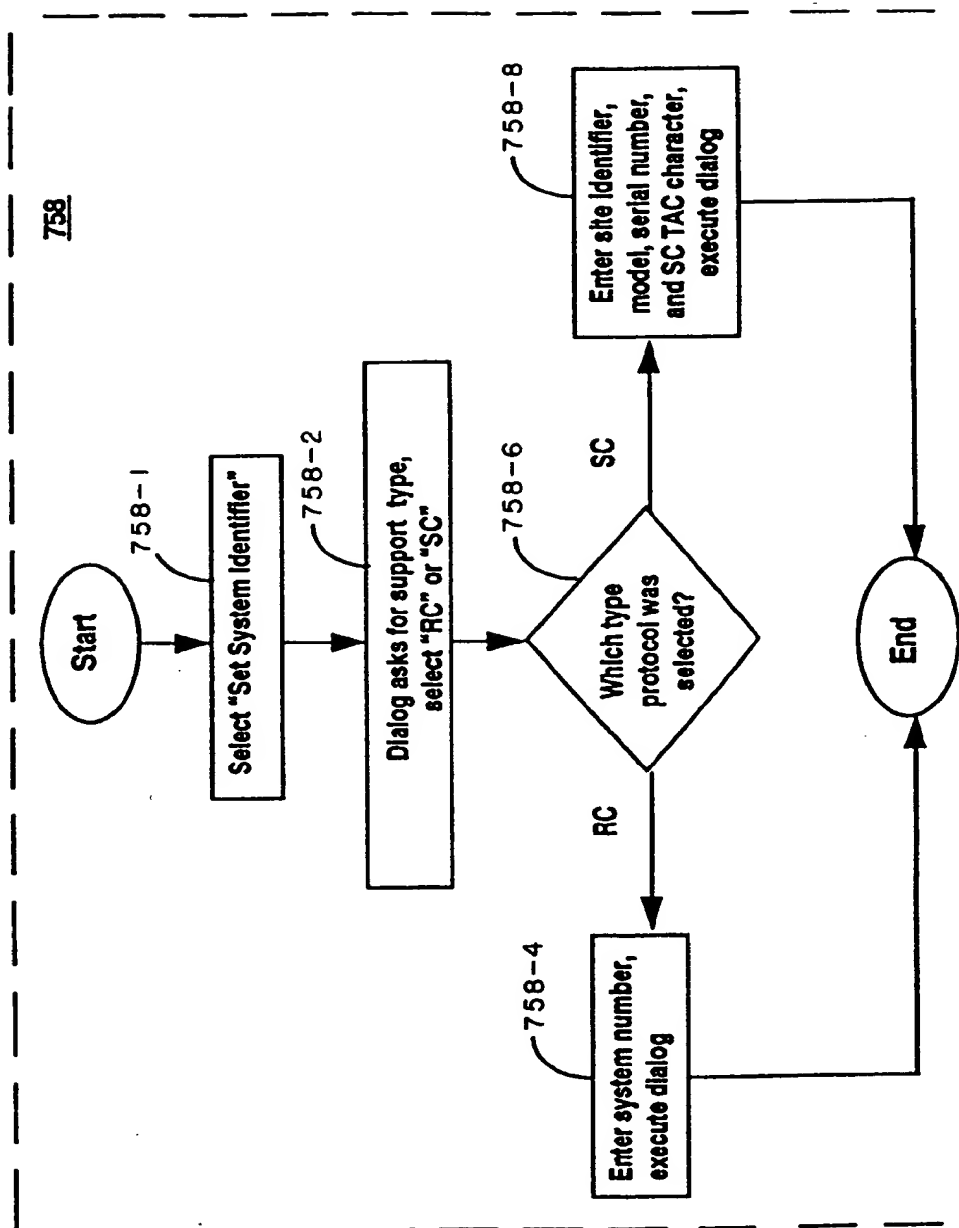


FIG. 7e

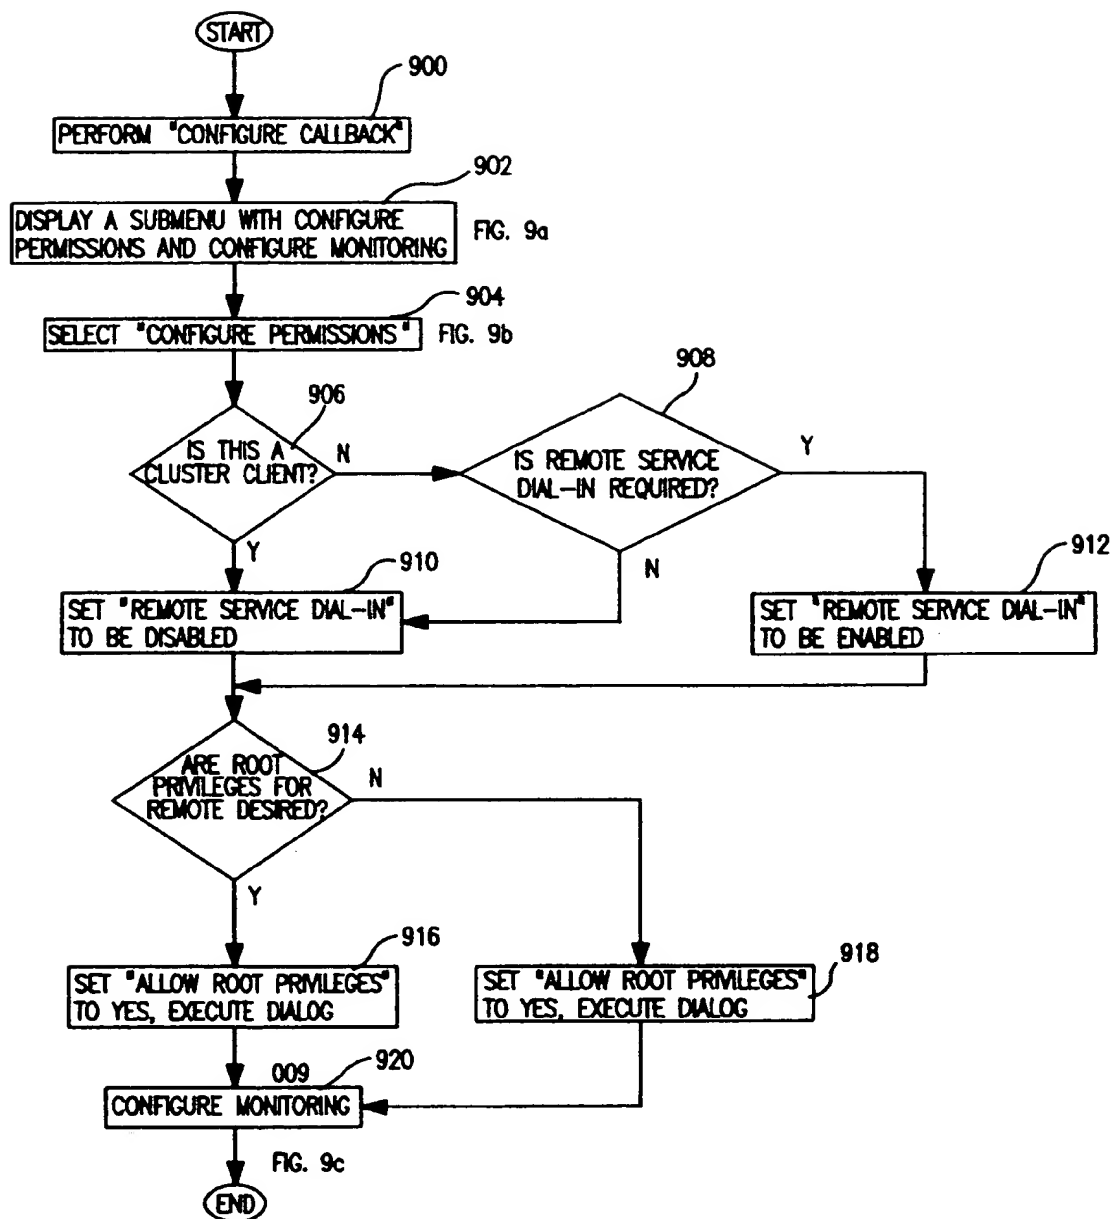


FIG. 7f

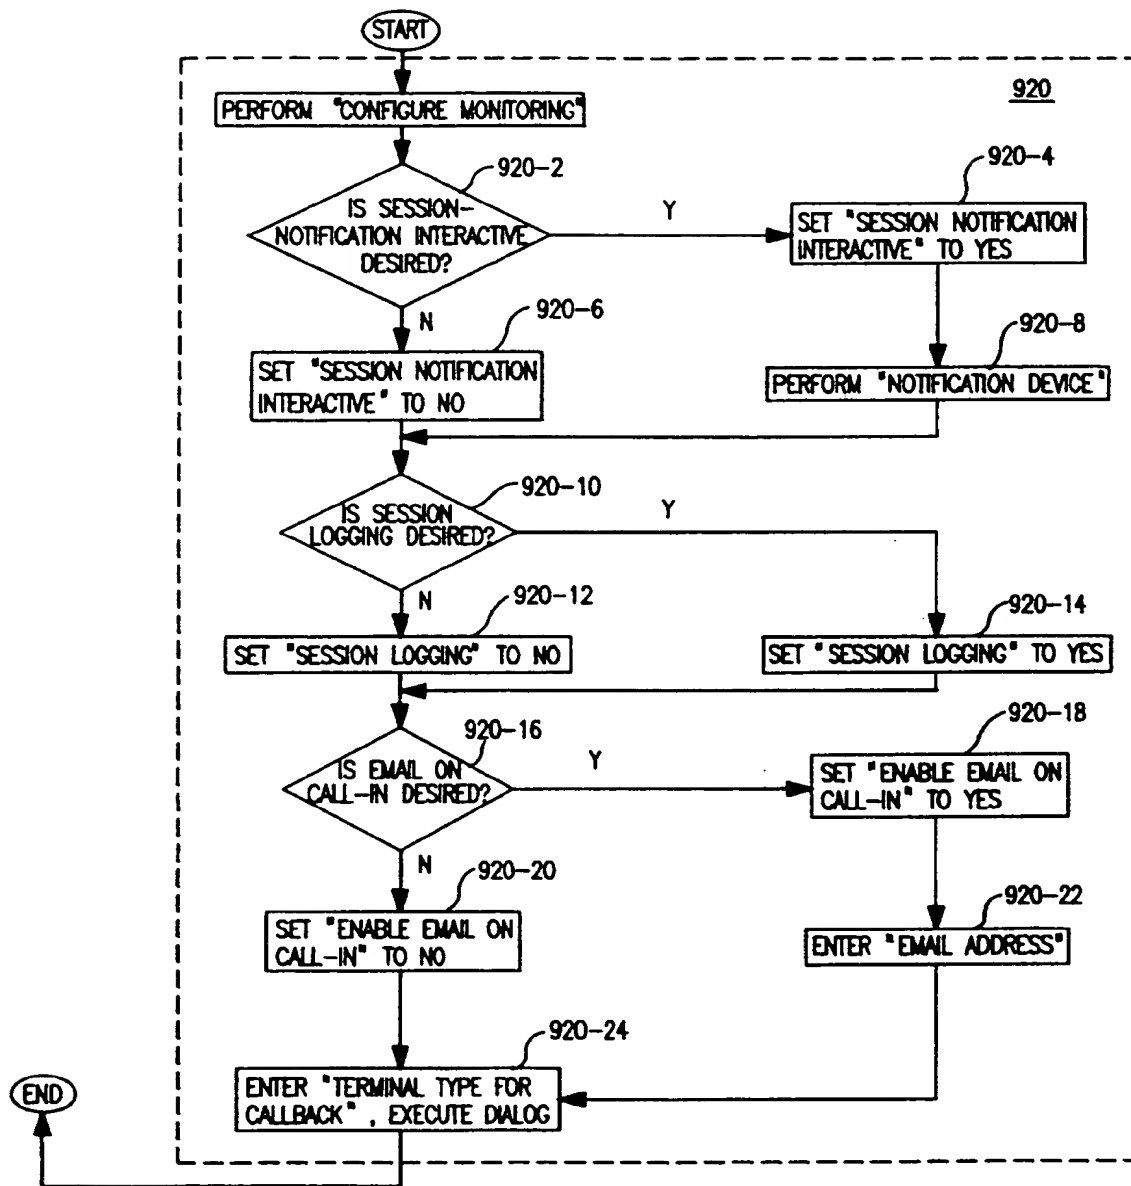


FIG. 7g

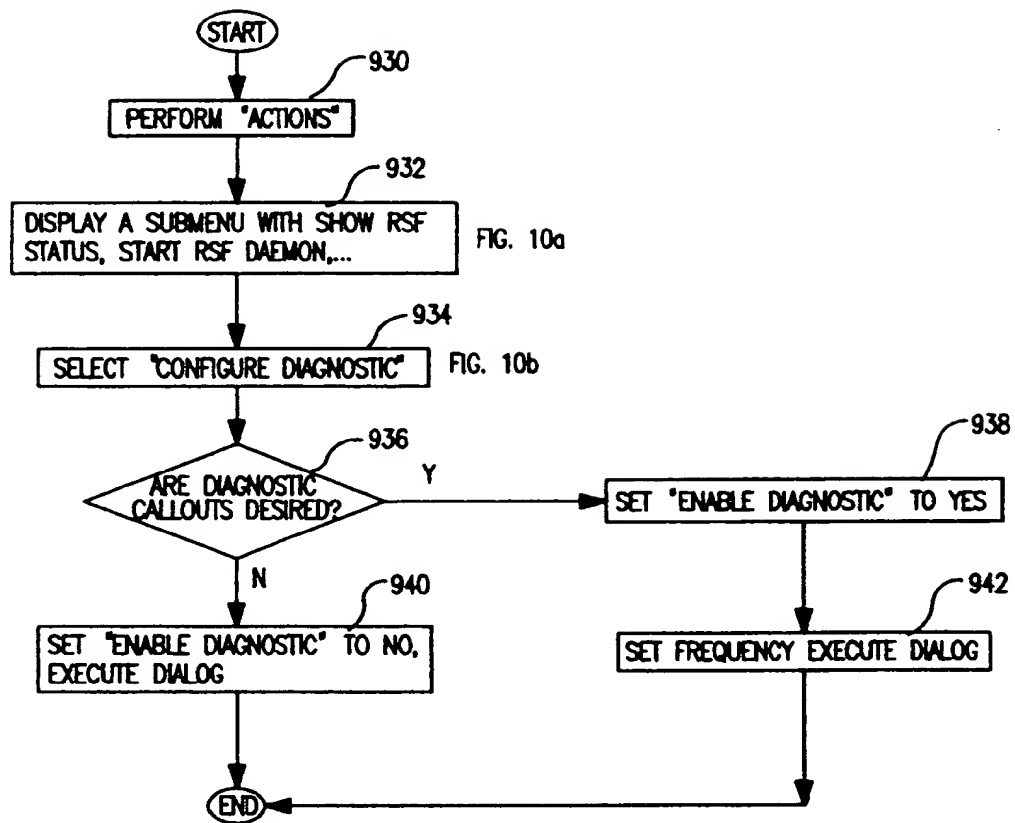


FIG. 7h

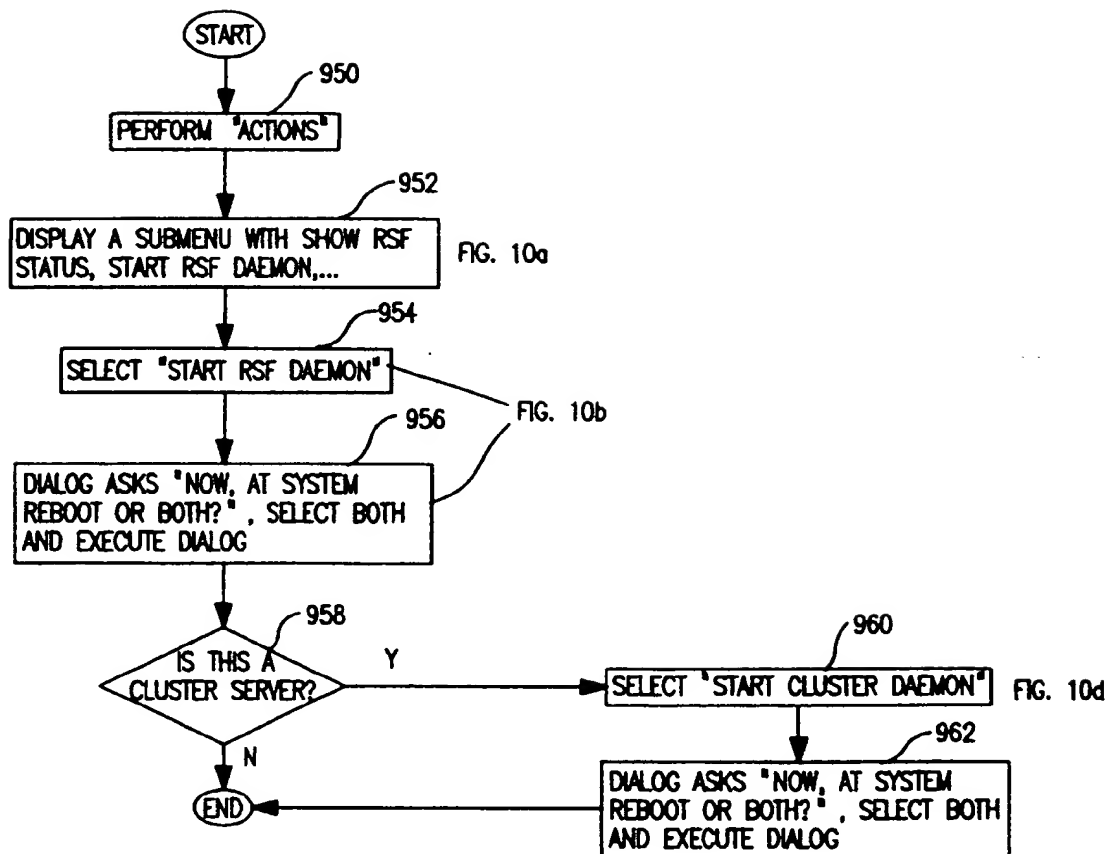


FIG. 71

Install Software With Updates															
Type or select values in entry fields. Press Enter AFTER making all desired changes.															
* INPUT device / directory for software	[Entry Fields]														
* SOFTWARE to install	/dev/fd0														
Automatically install PREREQUISITE software?	[All]		+												
COMMIT software?	no		+												
SAVE replaced files?	no		+												
VERIFY software?	yes		+												
EXTEND file systems if space needed?	no		+												
REMOVE input file after installation?	yes		+												
	no		+												
<table border="0"> <tr> <td>F1=Help</td> <td>F2=Refresh</td> <td>F3=Cancel</td> <td>F4=List</td> </tr> <tr> <td>Esc+5=Undo</td> <td>Esc+6=Command</td> <td>Esc+7=Edit</td> <td>Esc+8=Image</td> </tr> <tr> <td>Esc+9=Shell</td> <td>Esc+0=Exit</td> <td>Enter=Do</td> <td></td> </tr> </table>				F1=Help	F2=Refresh	F3=Cancel	F4=List	Esc+5=Undo	Esc+6=Command	Esc+7=Edit	Esc+8=Image	Esc+9=Shell	Esc+0=Exit	Enter=Do	
F1=Help	F2=Refresh	F3=Cancel	F4=List												
Esc+5=Undo	Esc+6=Command	Esc+7=Edit	Esc+8=Image												
Esc+9=Shell	Esc+0=Exit	Enter=Do													

FIG. 8a

Install Software With Updates																			
Ty																			
Pr																			
SOFTWARE to install																			
Move cursor to desired item and press F7.																			
* ONE OR MORE items can be selected.																			
* Press Enter AFTER making all selections.																			
[TOP]																			
#	Option Name	Level	I/U O Content																
#	=====	=====	=====																
	rsf.all																		
#	Description: Will include ALL the images for rsf.																		
#																			
	rsf.rsfbj	00.17.0000.0000																	
#	RSF (Remote Services Facilities) Software, Remote Se I N usr,root																		
#																			
[MORE...21]																			
<table border="0"> <tr> <td>F1=Help</td> <td>F2=Refresh</td> <td>F3=Cancel</td> <td></td> </tr> <tr> <td>Esc+7=Select</td> <td>Esc+8=Image</td> <td>Esc+0=Exit</td> <td></td> </tr> <tr> <td>Es</td> <td>Enter=Do</td> <td></td> <td></td> </tr> <tr> <td>Es</td> <td></td> <td></td> <td></td> </tr> </table>				F1=Help	F2=Refresh	F3=Cancel		Esc+7=Select	Esc+8=Image	Esc+0=Exit		Es	Enter=Do			Es			
F1=Help	F2=Refresh	F3=Cancel																	
Esc+7=Select	Esc+8=Image	Esc+0=Exit																	
Es	Enter=Do																		
Es																			

FIG. 8b

Add a Source													
Type or select values in entry fields. Press Enter AFTER making all desired changes.													
* Source Identifier	[Entry Fields]												
* Source Path	[]												
* Action	[]												
Type	[ASCII]												
Cleantime	[1-day]												
Searchtime	[5-hours]												
Initialization File	[]												
<table border="0"> <tr> <td>F1=Help</td> <td>F2=Refresh</td> <td>F3=Cancel</td> <td>F4=List</td> </tr> <tr> <td>Esc+5=Undo</td> <td>Esc+6=Command</td> <td>Esc+7=Edit</td> <td>Esc+8=Image</td> </tr> <tr> <td>Esc+9=Shell</td> <td>Esc+0=Exit</td> <td>Enter=Do</td> <td></td> </tr> </table>		F1=Help	F2=Refresh	F3=Cancel	F4=List	Esc+5=Undo	Esc+6=Command	Esc+7=Edit	Esc+8=Image	Esc+9=Shell	Esc+0=Exit	Enter=Do	
F1=Help	F2=Refresh	F3=Cancel	F4=List										
Esc+5=Undo	Esc+6=Command	Esc+7=Edit	Esc+8=Image										
Esc+9=Shell	Esc+0=Exit	Enter=Do											

FIG. 8c

Add a SYSTEM Message

Type or select values in entry fields.
Press Enter AFTER making all desired changes.

Source Identifier

Message Identifier

Threshold

Duration

Keepmax

Initialization File

[Entry Fields]

system

{0}

{5}

{1-day}

{20}

{}

+X

+B

+

#

/

F1=Help

Esc+5=Undo

Esc+9=Shell

F2=Refresh

Esc+6=Command

Esc+0=Exit

F3=Cancel

Esc+7=Edit

Enter=Do

F4=List

Esc+8=Image

FIG. 8d

Configure Callout (Local Modem)

Move cursor to desired item and press Enter.

Site Parameters

Modem Parameters

Callout Tuning

F1=Help

Esc+9=Shell

F2=Refresh

Esc+0=Exit

F3=Cancel

Enter=Do

Esc+8=Image

FIG. 8e

Site Parameters

Move cursor to desired item and press Enter.

Set System Identifier

BRC Phone Numbers

Other Site Parameters

F1=Help

Esc+9=Shell

F2=Refresh

Esc+0=Exit

F3=Cancel

Enter=Do

Esc+8=Image

FIG. 8f

BRC Phone Numbers

Move cursor to desired item and press Enter.

List BRC Phone Numbers
 Add a BRC Phone Number
 Delete a BRC Phone Number

F1=Help F2=Refresh F3=Cancel Esc+8=Image
 Esc+9=Shell Esc+0=Exit Enter=Do

FIG. 8g

Add a BRC Phone Number

Type or select values in entry fields.
 Press Enter AFTER making all desired changes.

BRC Phone Number [Entry Fields]

F1=Help F2=Refresh F3=Cancel F4=List
 Esc+5=Undo Esc+6=Command Esc+7=Edit Esc+8=Image
 Esc+9=Shell Esc+0=Exit Enter=Do

FIG. 8h

Set Other Parameters

Type or select values in entry fields.
 Press Enter AFTER making all desired changes.

Operator Name [Entry Fields]
 Operator Phone Number [John H. Jones]
 System Phone Number [(508) 555-3325]
 Remote Password [5085558275]
 TTY Path [phoenix]
 E-mail Address [/dev/tty1]
 [root]

F1=Help F2=Refresh F3=Cancel F4=List
 Esc+5=Undo Esc+6=Command Esc+7=Edit Esc+8=Image
 Esc+9=Shell Esc+0=Exit Enter=Do

FIG. 8i

Modem Parameters

Move cursor to desired item and press Enter.

OK Strings
 Connect Strings
 Other Modem Parameters

F1=Help F2=Refresh F3=Cancel Esc+8=Image
 Esc+9=Shell Esc+0=Exit Enter=Do

FIG. 8j

OK Strings

Move cursor to desired item and press Enter.

List OK Strings
 Add OK String
 Delete OK String

F1=Help F2=Refresh F3=Cancel Esc+8=Image
 Esc+9=Shell Esc+0=Exit Enter=Do

FIG. 8k

Add OK String

Type or select values in entry fields.
 Press Enter AFTER making all desired changes.

OK String [Entry Fields]

F1=Help F2=Refresh F3=Cancel F4=List
 Esc+5=Undo Esc+6=Command Esc+7=Edit Esc+8=Image
 Esc+9=Shell Esc+0=Exit Enter=Do

FIG. 8l

Connect Strings

Move cursor to desired item and press Enter.

List Connect Strings
 Add Connect String
 Delete Connect String

F1=Help F2=Refresh F3=Cancel Esc+8=Image
 Esc+9=Shell Esc+0=Exit Enter=Do

FIG. 8m

Add Connect String

Type or select values in entry fields.
 Press Enter AFTER making all desired changes.

Connect String [Entry Fields]
 [0]

F1=Help F2=Refresh F3=Cancel F4=List
 Esc+5=Undo Esc+6=Command Esc+7=Edit Esc+8=Image
 Esc+9=Shell Esc+0=Exit Enter=Do

FIG. 8n

Other Modem Parameters

Type or select values in entry fields.
 Press Enter AFTER making all desired changes.

MMP Selection [Entry Fields]
 Callback Condition String [Do]
 Callout Condition String [AT&FE002S0=1&D0*F1&W]
 Dial String [AT&FX5V0E0&C0]
 Redo String [ATDT]
 Disconnect String [A/]
 Hangup String [+++]
 Busy String [ATH0]
 Character Size (bits) [7]
 Stop Bits [8] +8
 Parity [1] +8
 Baud Rate [none] +
 [38400] +8

F1=Help F2=Refresh F3=Cancel F4=List
 Esc+5=Undo Esc+6=Command Esc+7=Edit Esc+8=Image
 Esc+9=Shell Esc+0=Exit Enter=Do

FIG. 8o

Callout Management			
Move cursor to desired item and press Enter.			
List Queued Callouts			
Show a Queued Callout			
Remove a Queued Callout			
Show Callout Manager Status			
Change / Show Callout Manager Status			
Start Next Callout			
Re-start Failed Callouts			
Display Callout Records			
Reset Callout Records			
Start Callout Management Daemon			
Stop Callout Management Daemon			
F			
F1=Help Esc+9=Shell	F2=Refresh Esc+0=Exit	F3=Cancel Enter=Do	Esc+8=Image

FIG. 8p

Change / Show Callout Manager Status			
Type or select values in entry fields. Press Enter AFTER making all desired changes.			
Delay Between Callouts		[Entry Fields]	
Maximum Queue Length		[30-mins]	
		[20]	
F			
F1=Help Esc+5=Undo Esc+9=Shell	F2=Refresh Esc+6=Command Esc+0=Exit	F3=Cancel Esc+7=Edit Enter=Do	F4=List Esc+8=Image

FIG. 8q

Start Callout Management Daemon			
Type or select values in entry fields. Press Enter AFTER making all desired changes.			
Change Daemon Now, At System Reboot, or Both?		[Entry Fields]	
		[Now]	
+			
F			
F1=Help Esc+5=Undo Esc+9=Shell	F2=Refresh Esc+6=Command Esc+0=Exit	F3=Cancel Esc+7=Edit Enter=Do	F4=List Esc+8=Image

FIG. 8r

Configure Callout (Cluster Client)

Move cursor to desired item and press Enter.

Set System Identifier
Set Other Parameters

F

F1=Help F2=Refresh F3=Cancel Esc+8=Image
Esc+9=Shell Esc+0=Exit Enter=Do

FIG. 8s

Set Other Parameters

Type or select values in entry fields.
Press Enter AFTER making all desired changes.

Operator Name Operator Phone Number Remote Password Cluster Server E-mail Address	{Entry Fields} {John M. Jones} {(508) 555-3325} {phoenix} {hazel} {root}
--	---

F1=Help F2=Refresh F3=Cancel F4=List
Esc+5=Undo Esc+6=Command Esc+7=Edit Esc+8=Image
Esc+9=Shell Esc+0=Exit Enter=Do

FIG. 8t

Configure Callback

Move cursor to desired item and press Enter.

Configure Permissions
Configure Monitoring

F1=Help F2=Refresh F3=Cancel Esc+8=Image
Esc+9=Shell Esc+0=Exit Enter=Do

FIG. 9a

Configure Permissions

Type or select values in entry fields.
Press Enter AFTER making all desired changes.

Remote Service Dial-In [Entry Fields]
Allow Root Privileges Disabled +
YES YES +

F1=Help F2=Refresh F3=Cancel F4=List
Esc+5=Undo Esc+6=Command Esc+7=Edit Esc+8=Image
Esc+9=Shell Esc+0=Exit Enter=Do

FIG. 9b

Configure Monitoring

Type or select values in entry fields.
Press Enter AFTER making all desired changes.

Session Notification Interactive [Entry Fields]
Notification Device {} +
Session Logging [/dev/console] +/
Enable E-mail on Call-in {} +
E-mail Address {} +
Terminal Type for Callback [root] +
 [vt100]

F1=Help F2=Refresh F3=Cancel F4=List
Esc+5=Undo Esc+6=Command Esc+7=Edit Esc+8=Image
Esc+9=Shell Esc+0=Exit Enter=Do

FIG. 9c

Actions			
Move cursor to desired item and press Enter.			
Show RSF Status			
Start RSF Daemon			
Stop RSF Daemon			
Start Cluster Daemon			
Stop Cluster Daemon			
Display Record of Actions			
Reset Record of Actions			
Configure Diagnostic			
Show Diagnostic Settings			
F1=Help Esc+9=Shell	F2=Refresh Esc+0=Exit	F3=Cancel Enter=Do	Esc+8=Image

FIG. 10a

Configure Diagnostic			
Type or select values in entry fields. Press Enter AFTER making all desired changes.			
Enable Diagnostic?	[Entry Fields]		
Frequency	[Yes]		+
	[MONTHLY]		+
F1=Help Esc+5=Undo Esc+9=Shell	F2=Refresh Esc+6=Command Esc+0=Exit	F3=Cancel Esc+7=Edit Enter=Do	F4=List Esc+8=Image

FIG. 10b

Start RSF Daemon			
Type or select values in entry fields. Press Enter AFTER making all desired changes.			
Change RSF Action Now, at System Reboot, or Both?	[Entry Fields]		
	[Now]		+
F1=Help Esc+5=Undo Esc+9=Shell	F2=Refresh Esc+6=Command Esc+0=Exit	F3=Cancel Esc+7=Edit Enter=Do	F4=List Esc+8=Image

FIG. 10c

Start Cluster Daemon

Type or select values in entry fields.
Press Enter AFTER making all desired changes.

Change RSF Action Now, at System Reboot, or Both?

[Entry Fields]

[Now] +

F1=Help
Esc+5=Undo
Esc+9=Shell

F2=Refresh
Esc+6=Command
Esc+0=Exit

F3=Cancel
Esc+7=Edit
Enter=Do

F4=List
Esc+8=Image

FIG. 10d

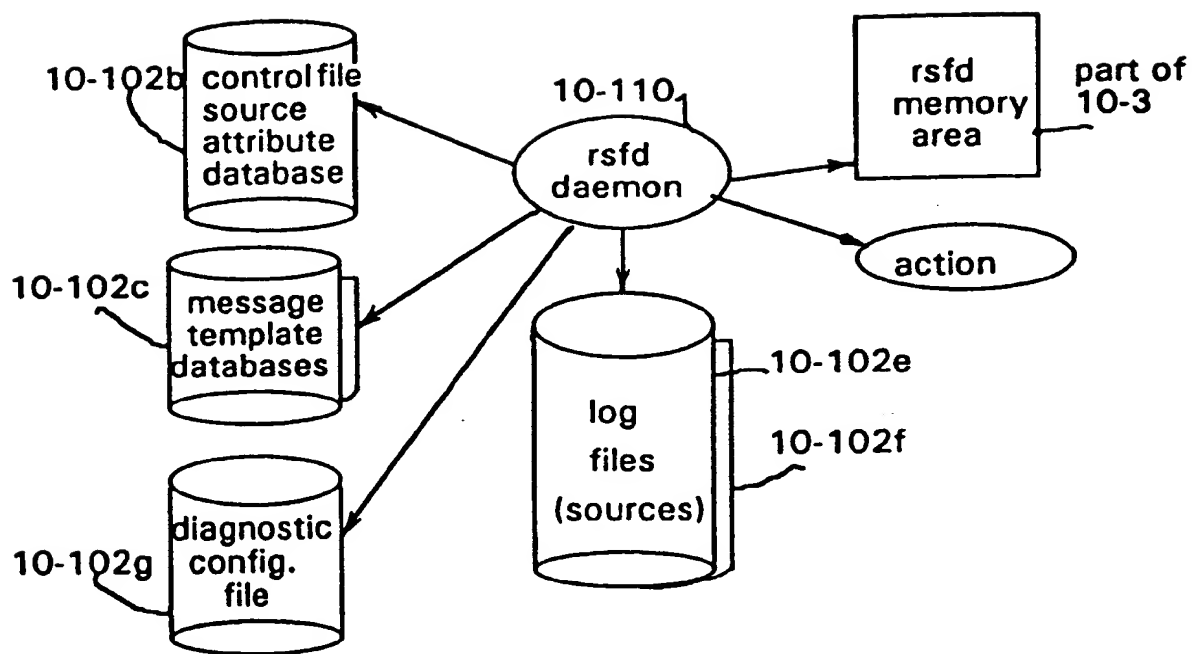


FIG. 11a

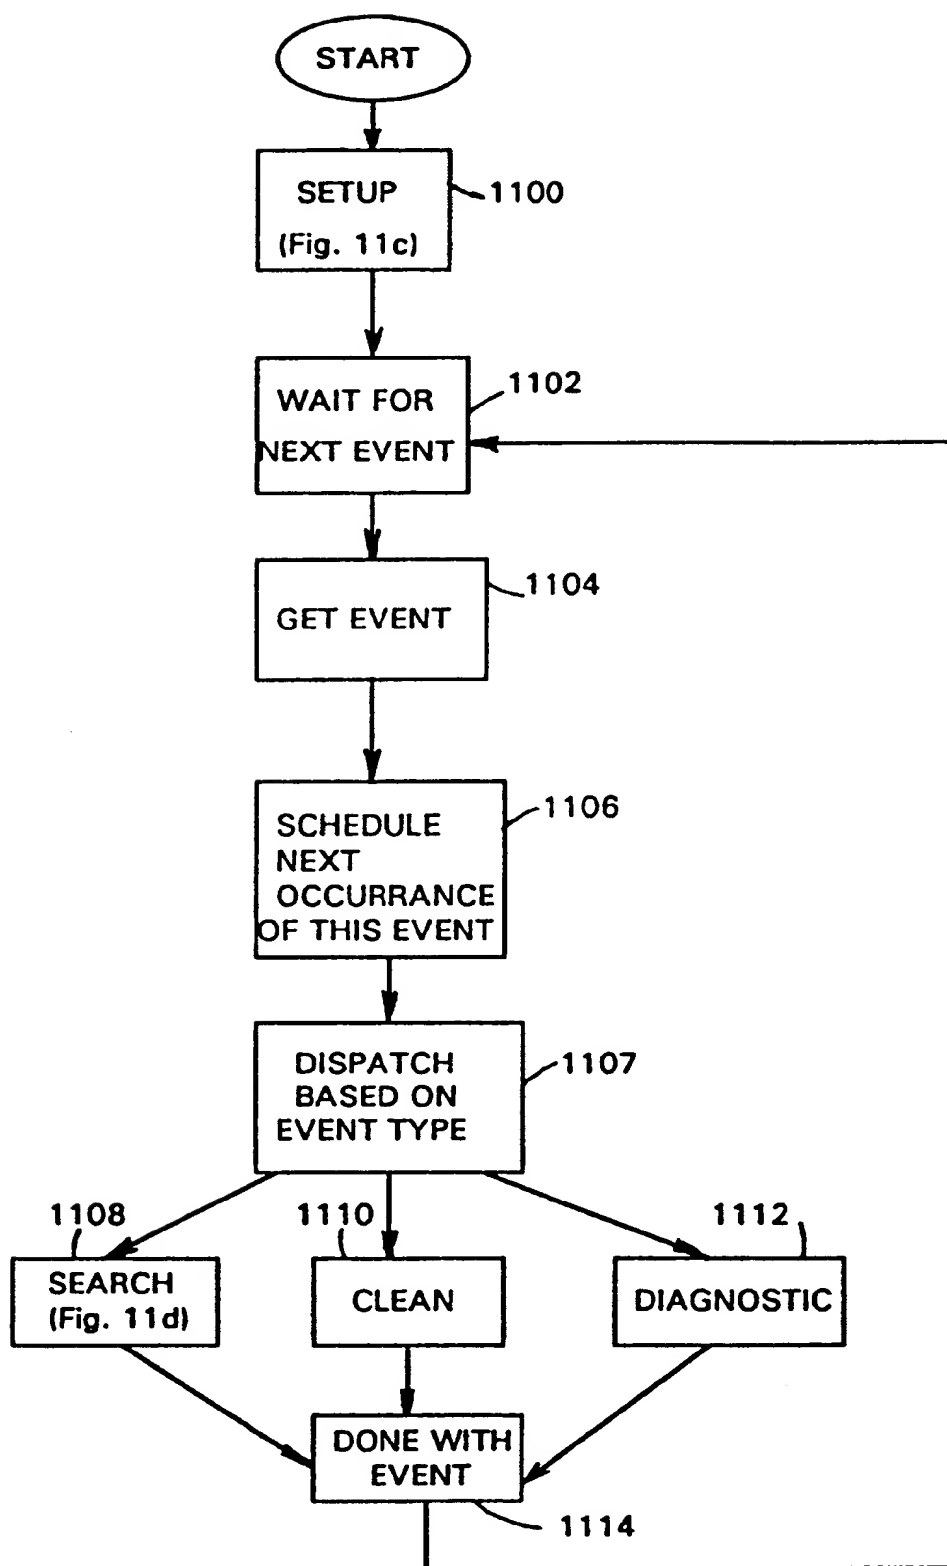


FIG. 11b

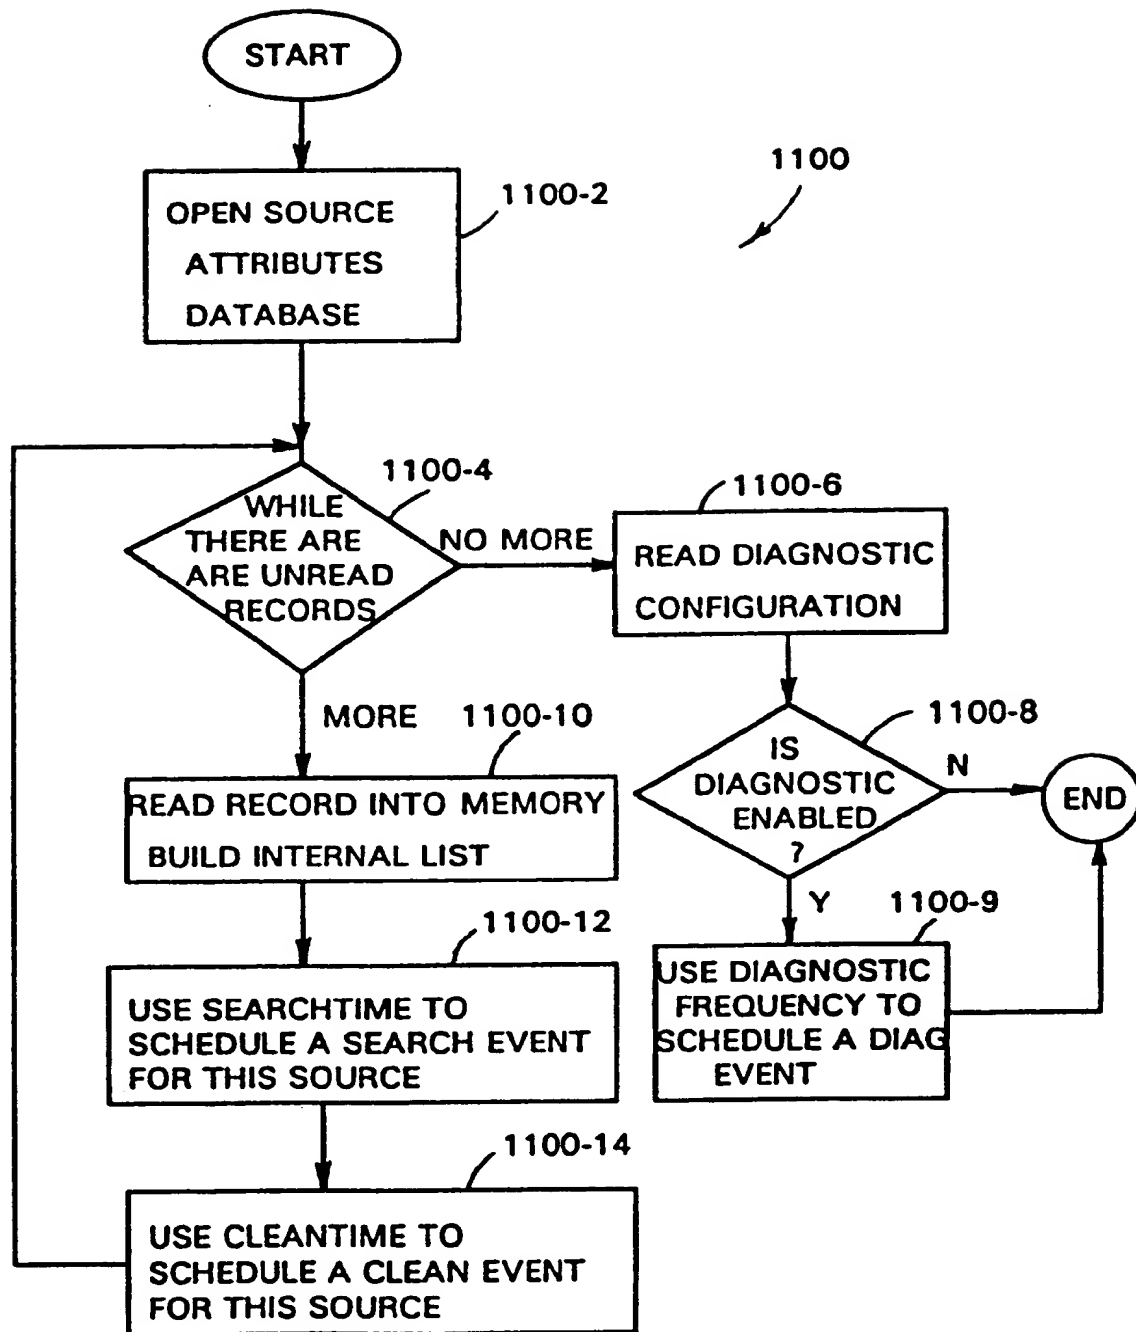


FIG. 11c

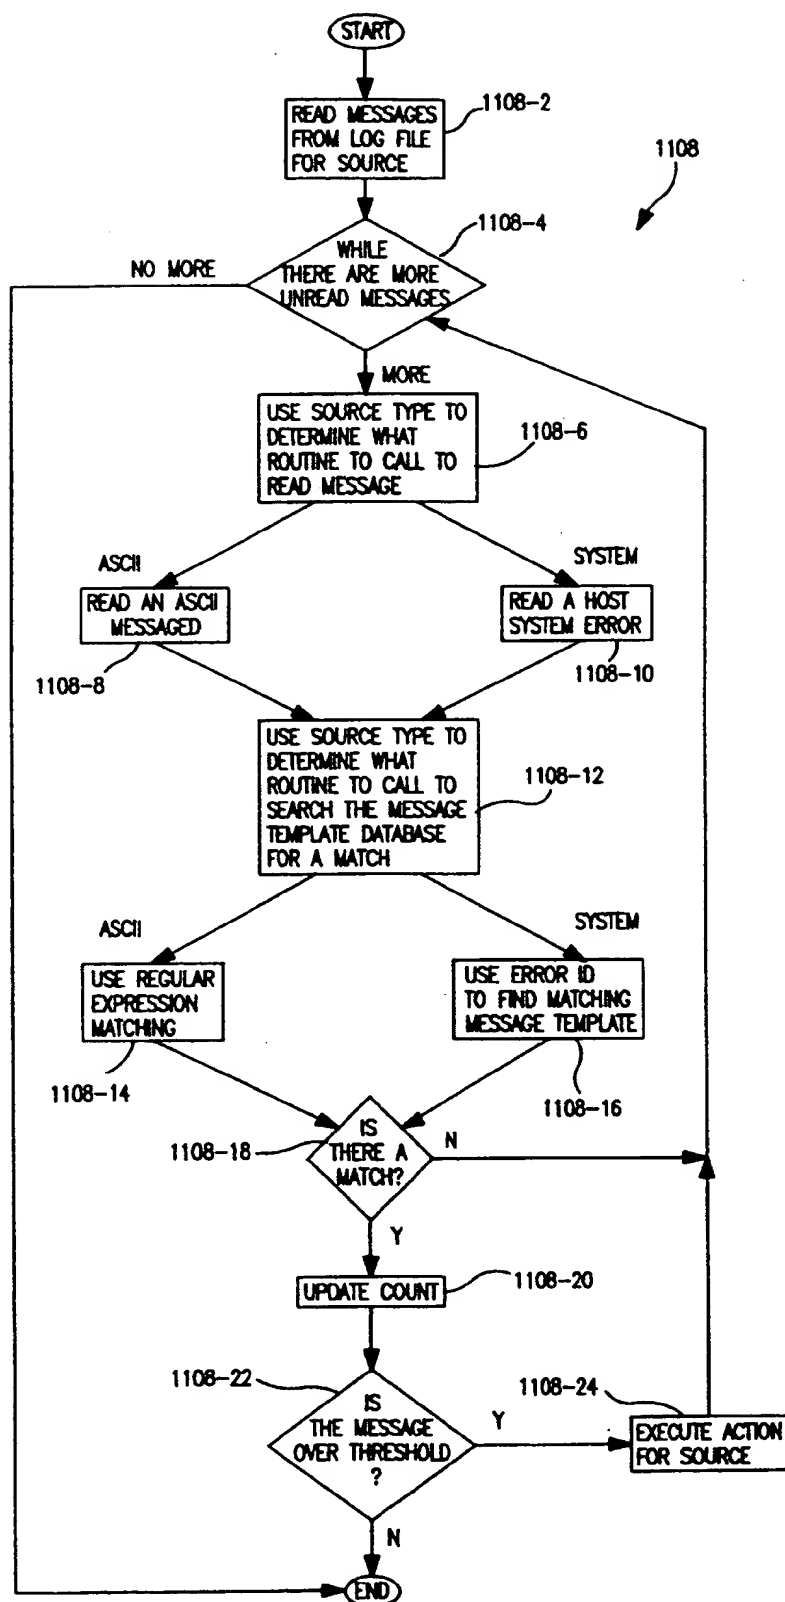


FIG. 1Id

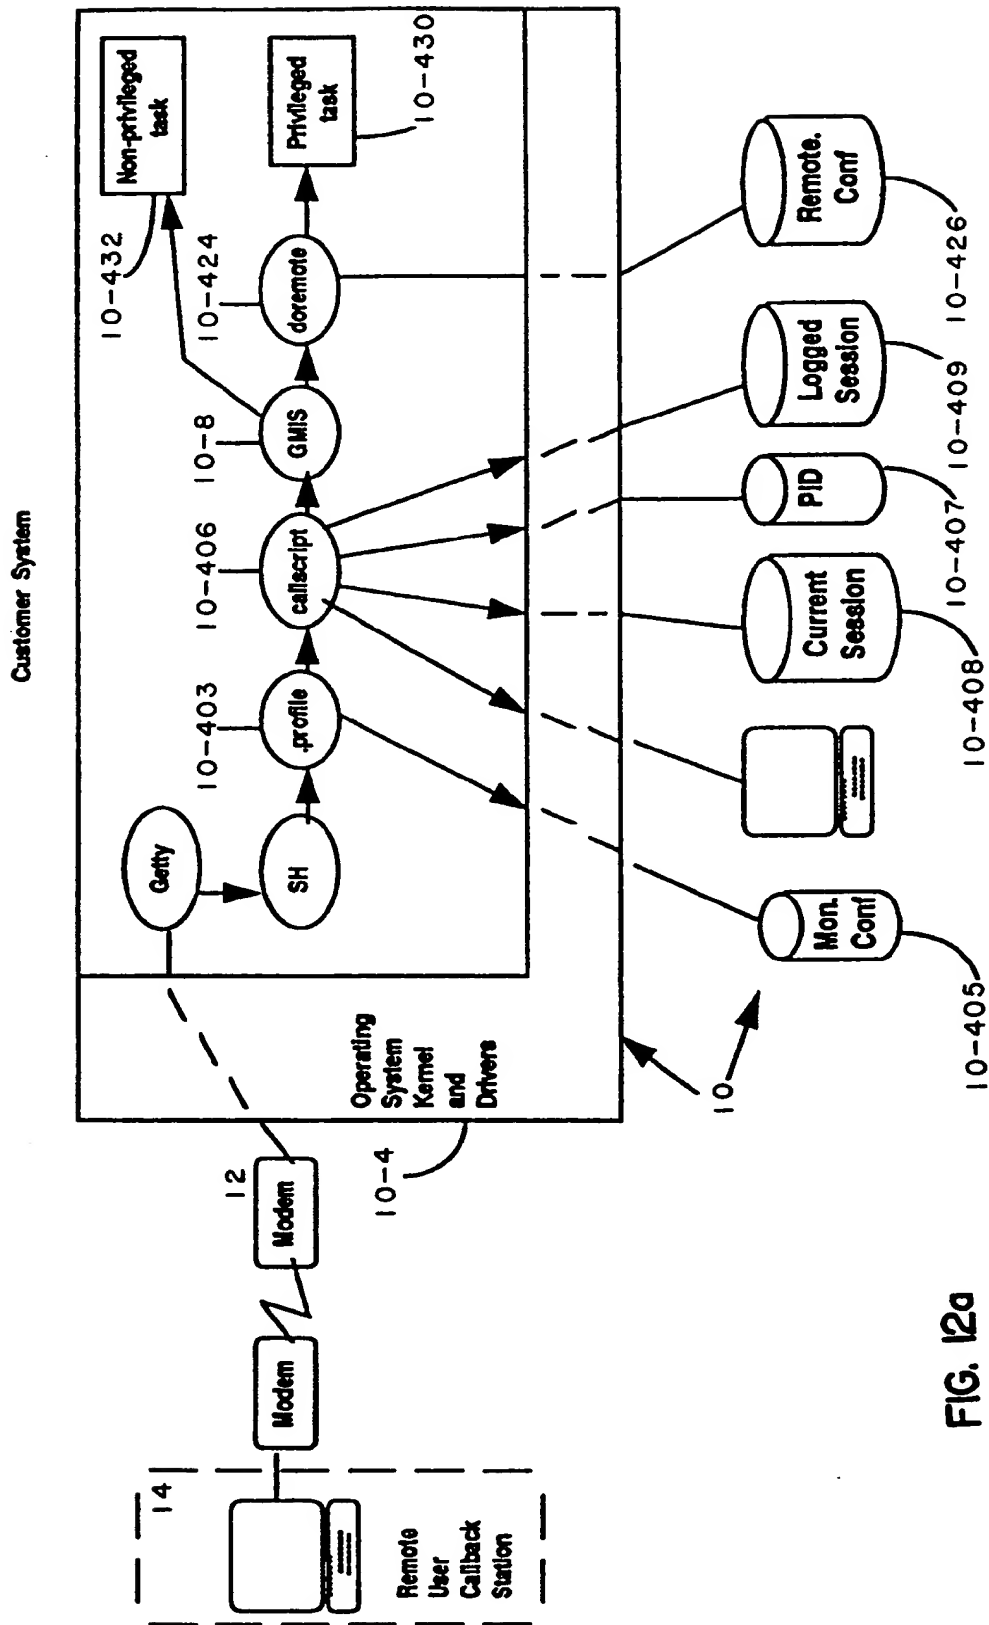
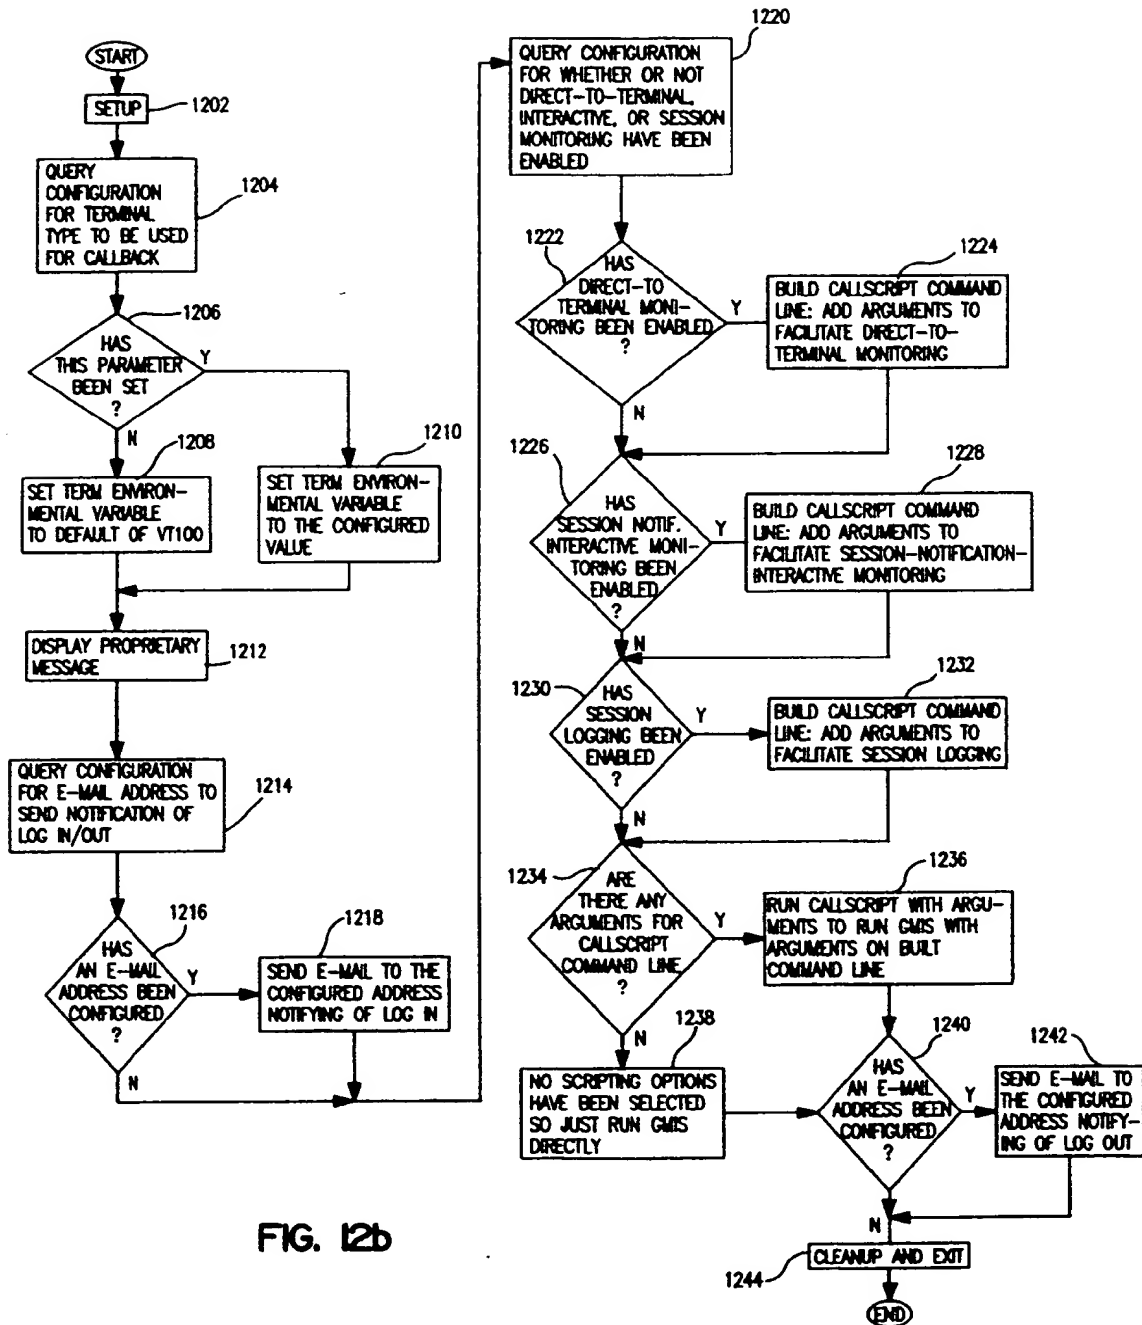


FIG. 12a



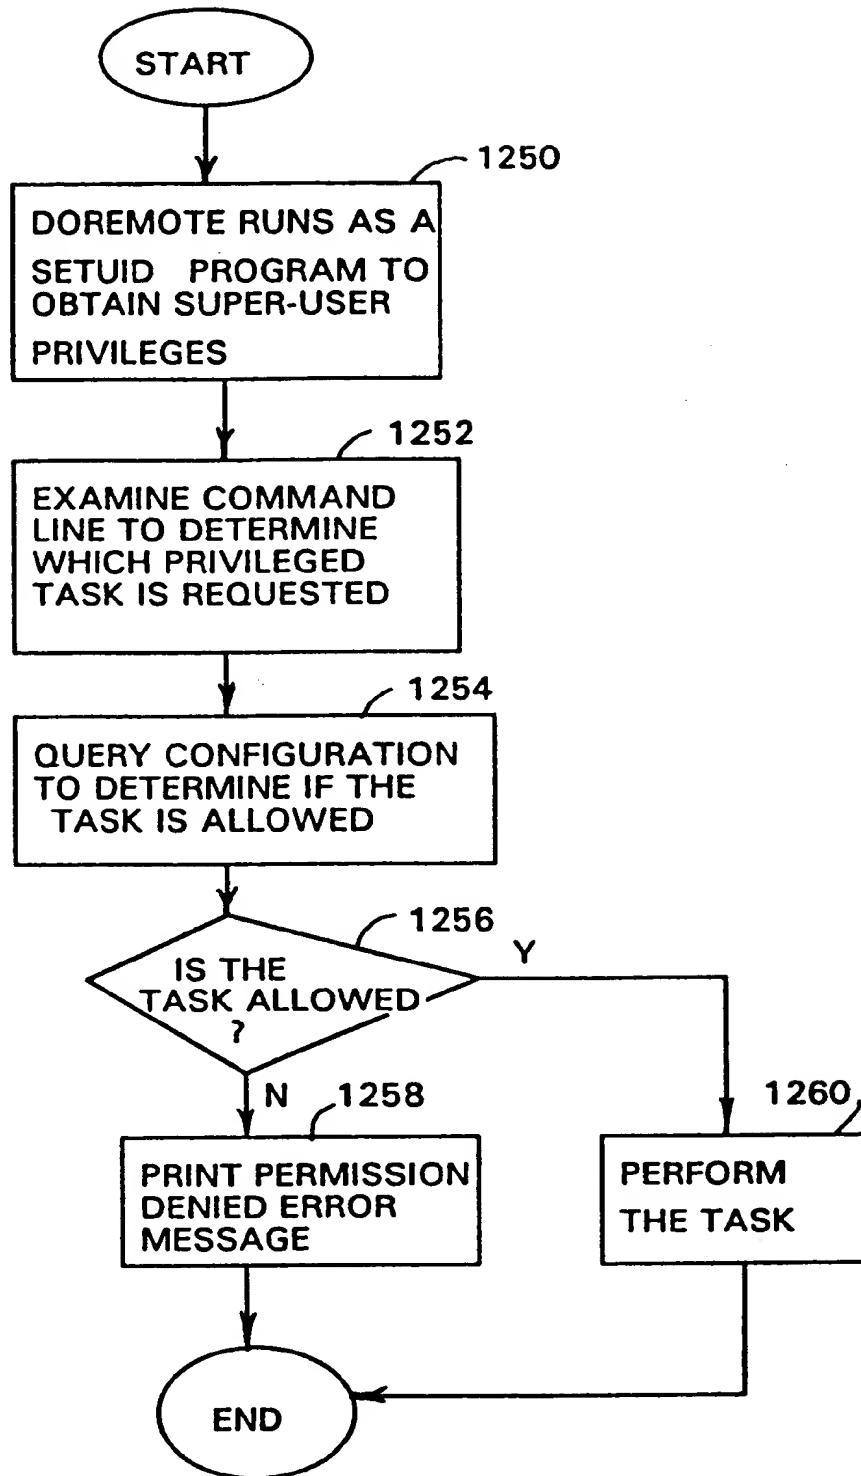


FIG. 12c

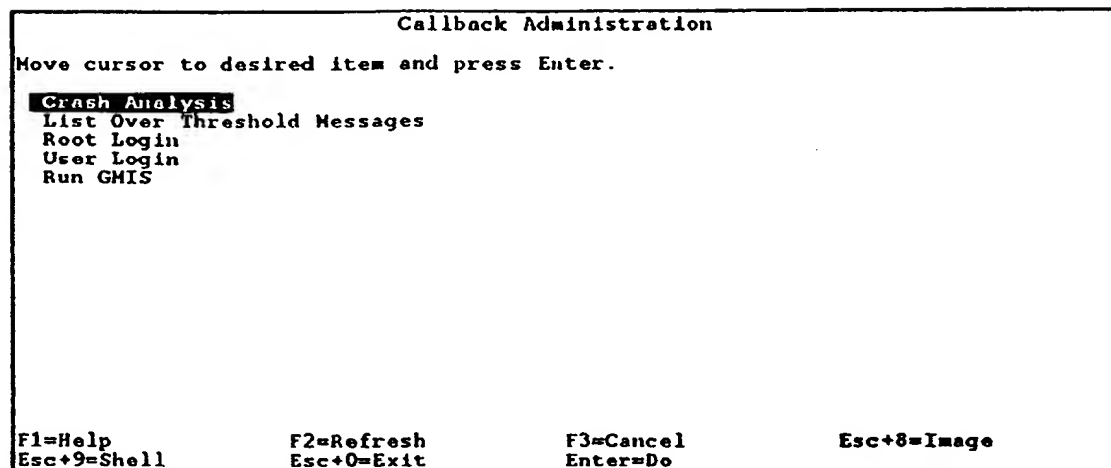


FIG. 12d

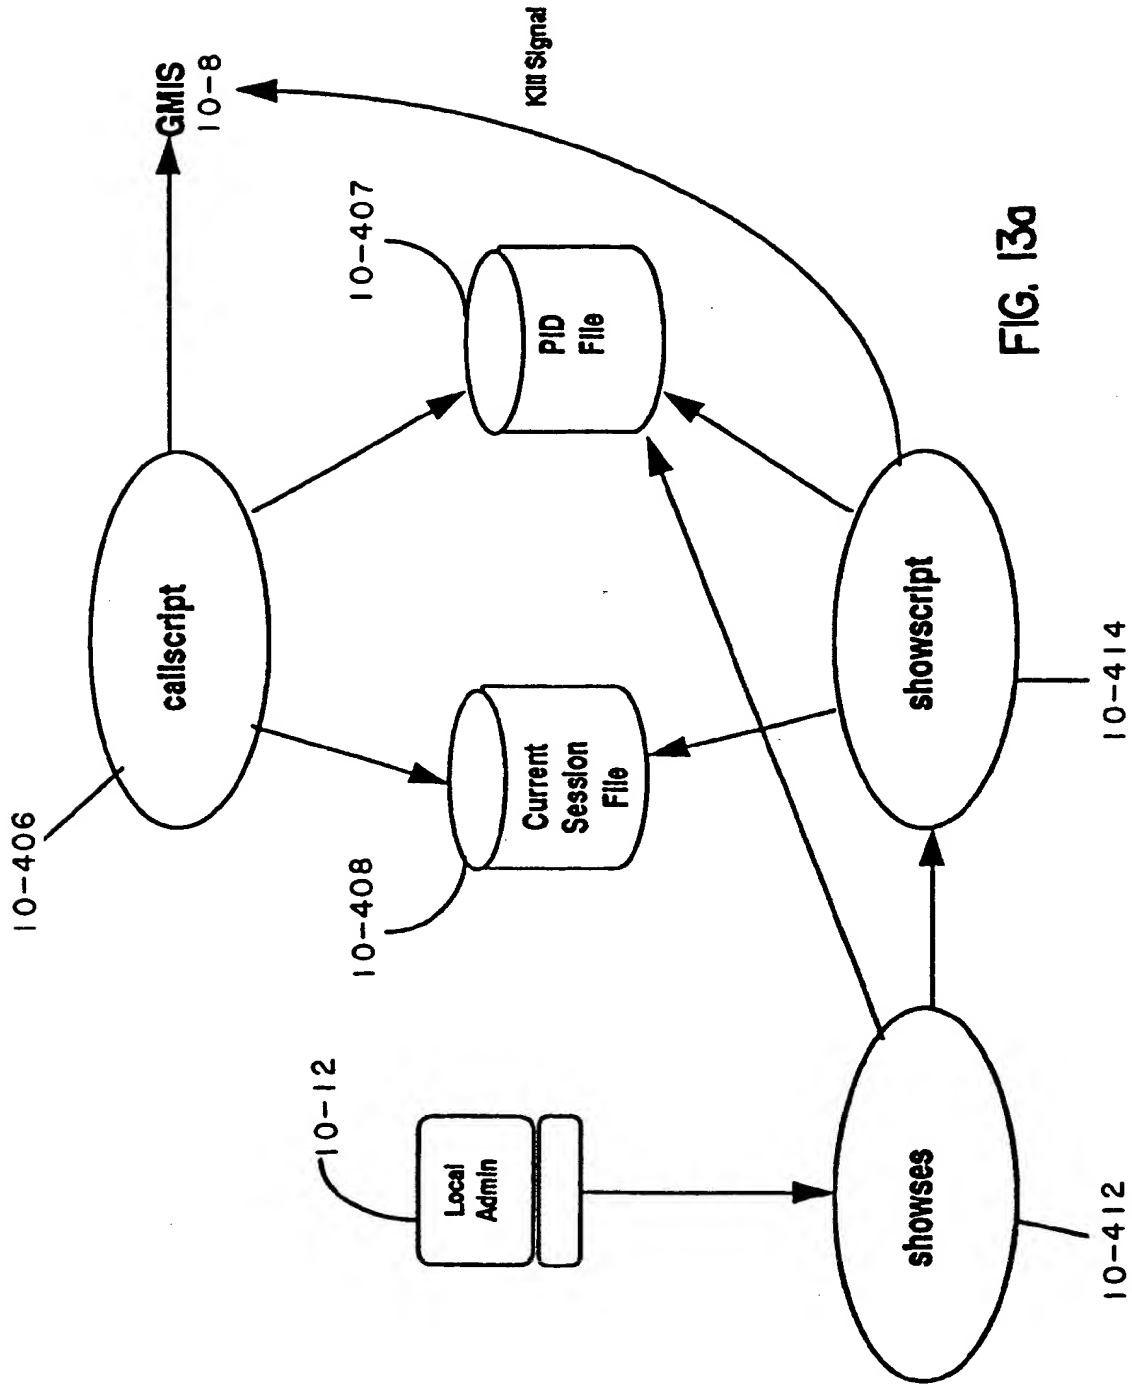


FIG. 13a

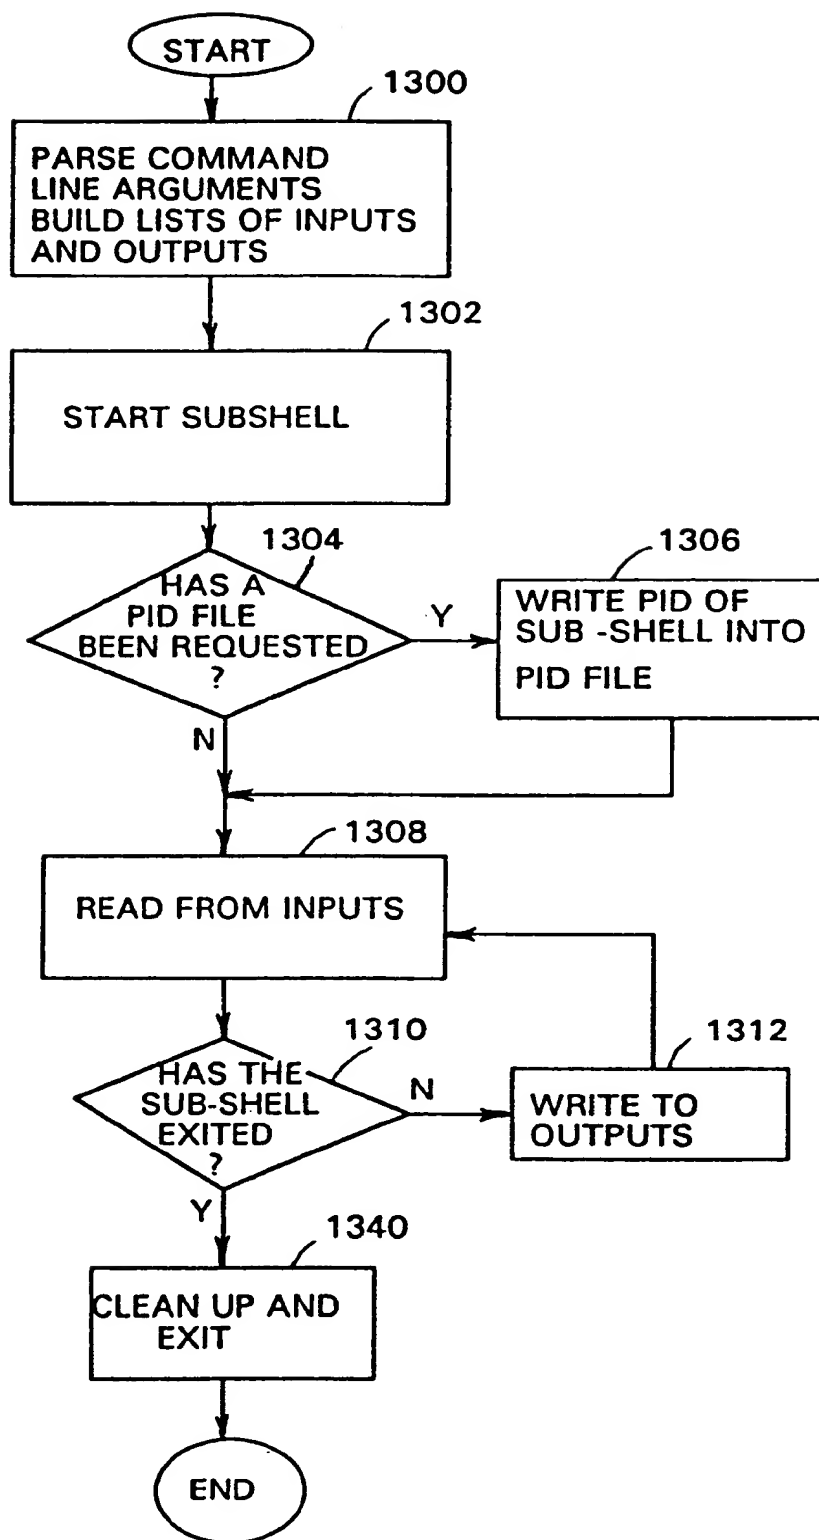


FIG. 13b

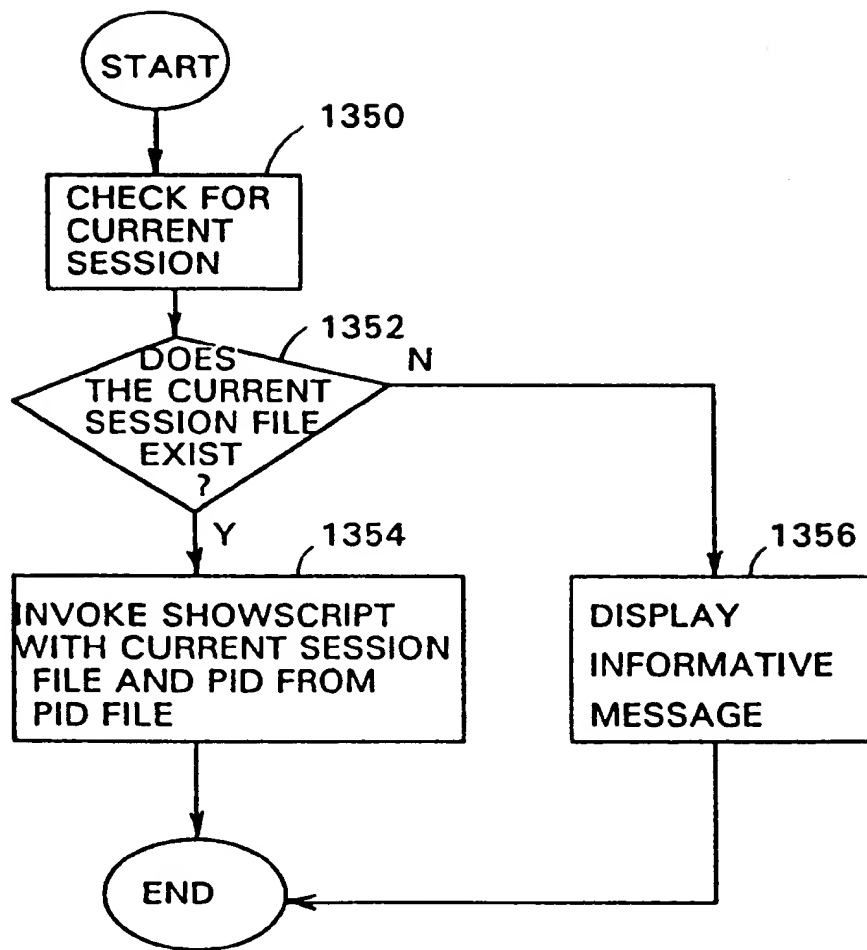


FIG. 13c

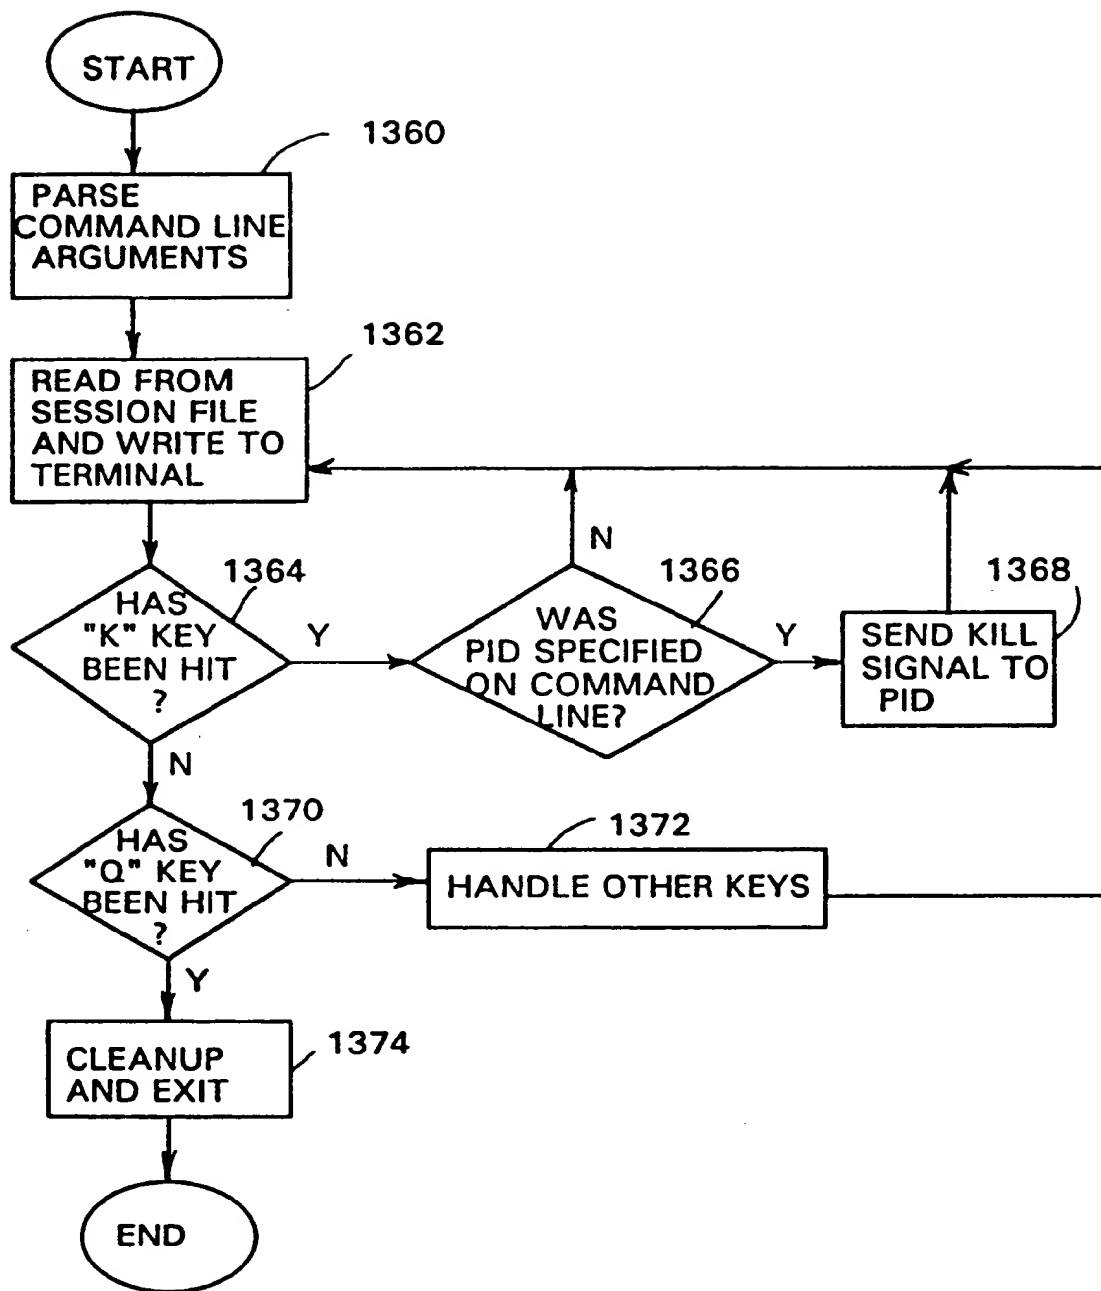


FIG. 13d



European Patent
Office

EUROPEAN SEARCH REPORT

Application Number
EP 94 10 9380

DOCUMENTS CONSIDERED TO BE RELEVANT			
Category	Citation of document with indication, where appropriate, of relevant passages	Relevant to claim	CLASSIFICATION OF THE APPLICATION (Int.Cl.6)
X	NTIS TECH NOTES, November 1990, SPRINGFIELD, VA US page 932 OWENS R.C ET AL. 'Remote maintenance monitoring'	1,6	G06F11/22
Y	---	2,3,5,7	
Y	PROCEEDINGS OF THE NATIONAL COMMUNICATIONS FORUM, vol.42, no.2, 30 September 1988, OAK BROOK, ILLINOIS US pages 1060 - 1066 ALDRIDGE R.C. 'Enhancing field productivity; A field access strategy' * page 1062, paragraph IV *	2,3,5,7	
A	IBM TECHNICAL DISCLOSURE BULLETIN., vol.36, no.1, January 1993, NEW YORK US pages 164 - 169, XP333812 'IBM System/390 I/O call reporting process'	1-7	
			TECHNICAL FIELDS SEARCHED (Int.Cl.6)
			G06F H04L
The present search report has been drawn up for all claims			
Place of search		Date of completion of the search	Examiner
THE HAGUE		12 October 1994	Sarasua Garcia, L
CATEGORY OF CITED DOCUMENTS			
X : particularly relevant if taken alone Y : particularly relevant if combined with another document of the same category A : technological background O : non-written disclosure P : intermediate document		T : theory or principle underlying the invention E : earlier patent document, but published on, or after the filing date D : document cited in the application L : document cited for other reasons ----- & : member of the same patent family, corresponding document	

EPO FORM 1503 (01.91) (P04C01)

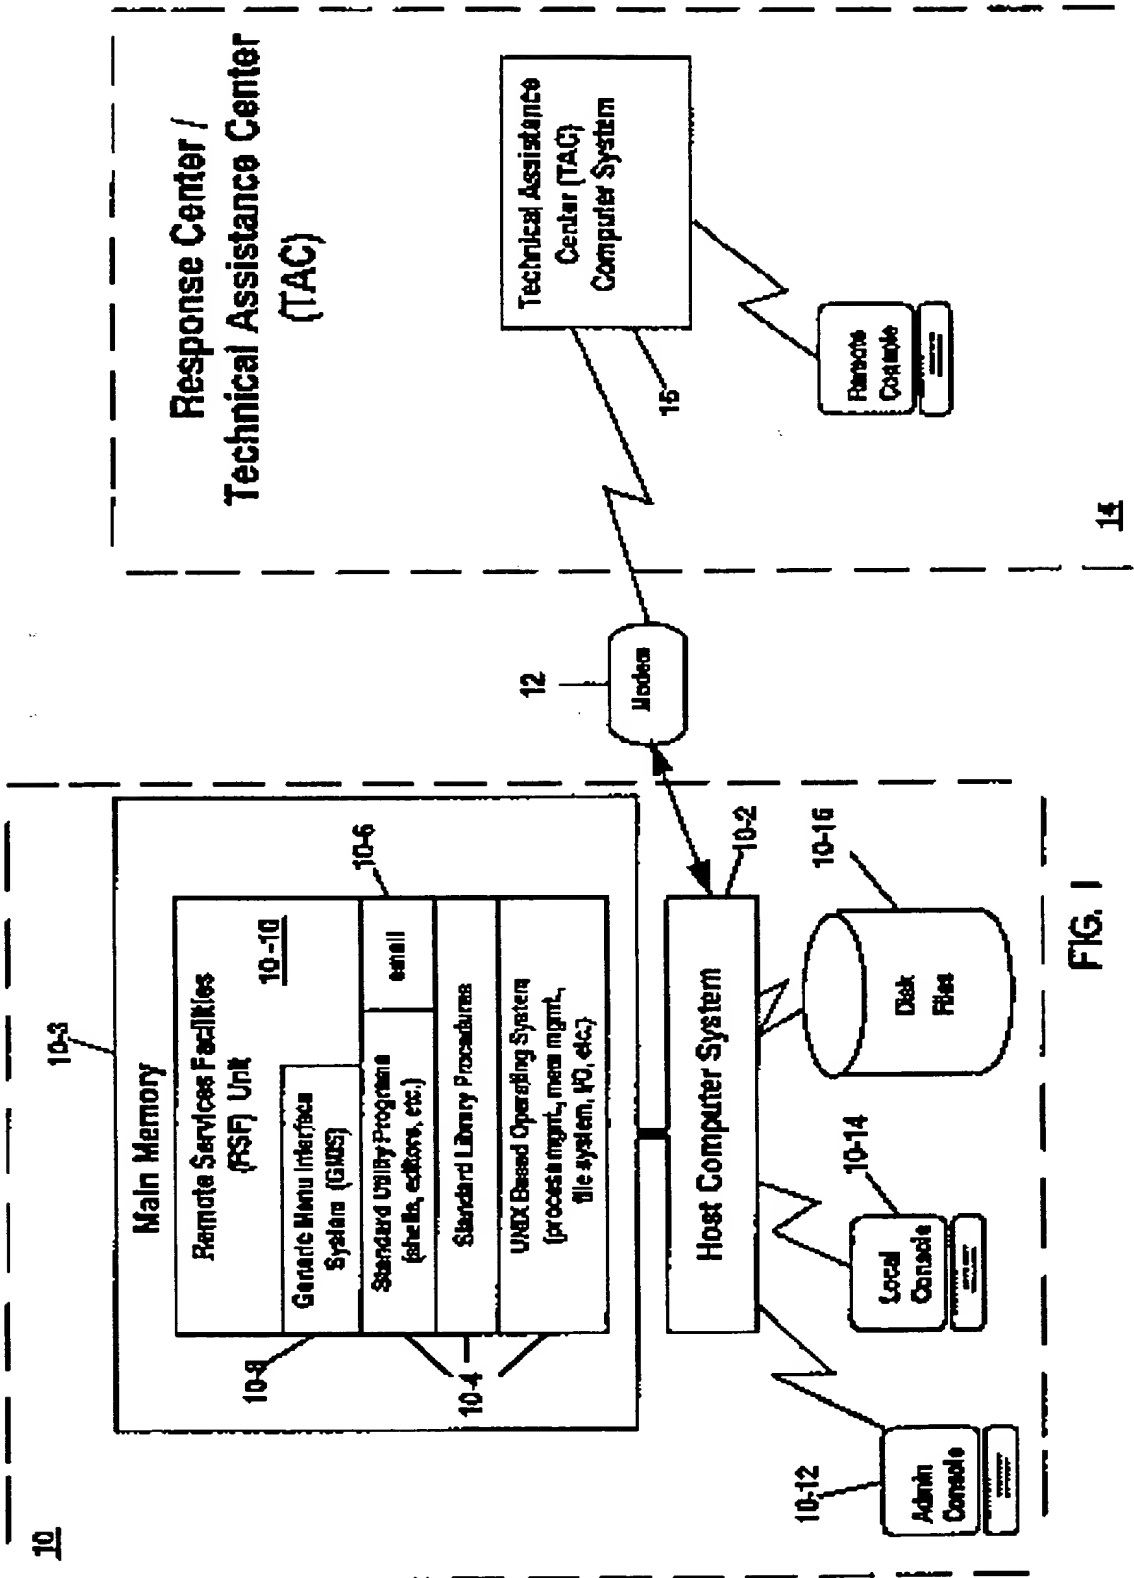


FIG. 1

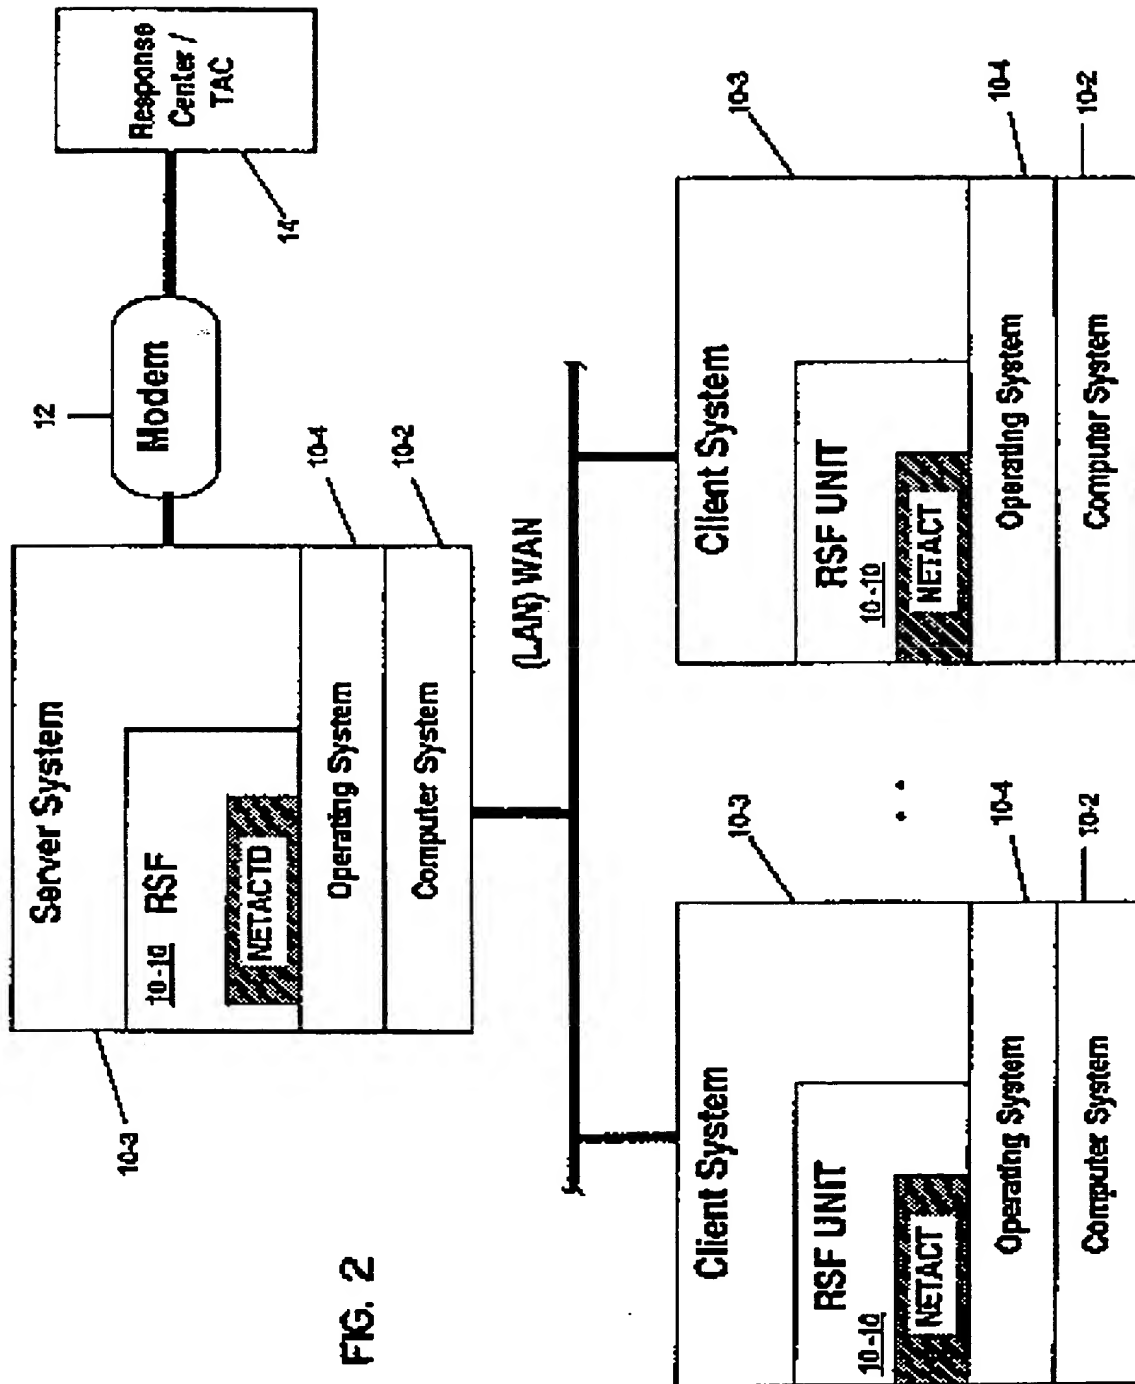
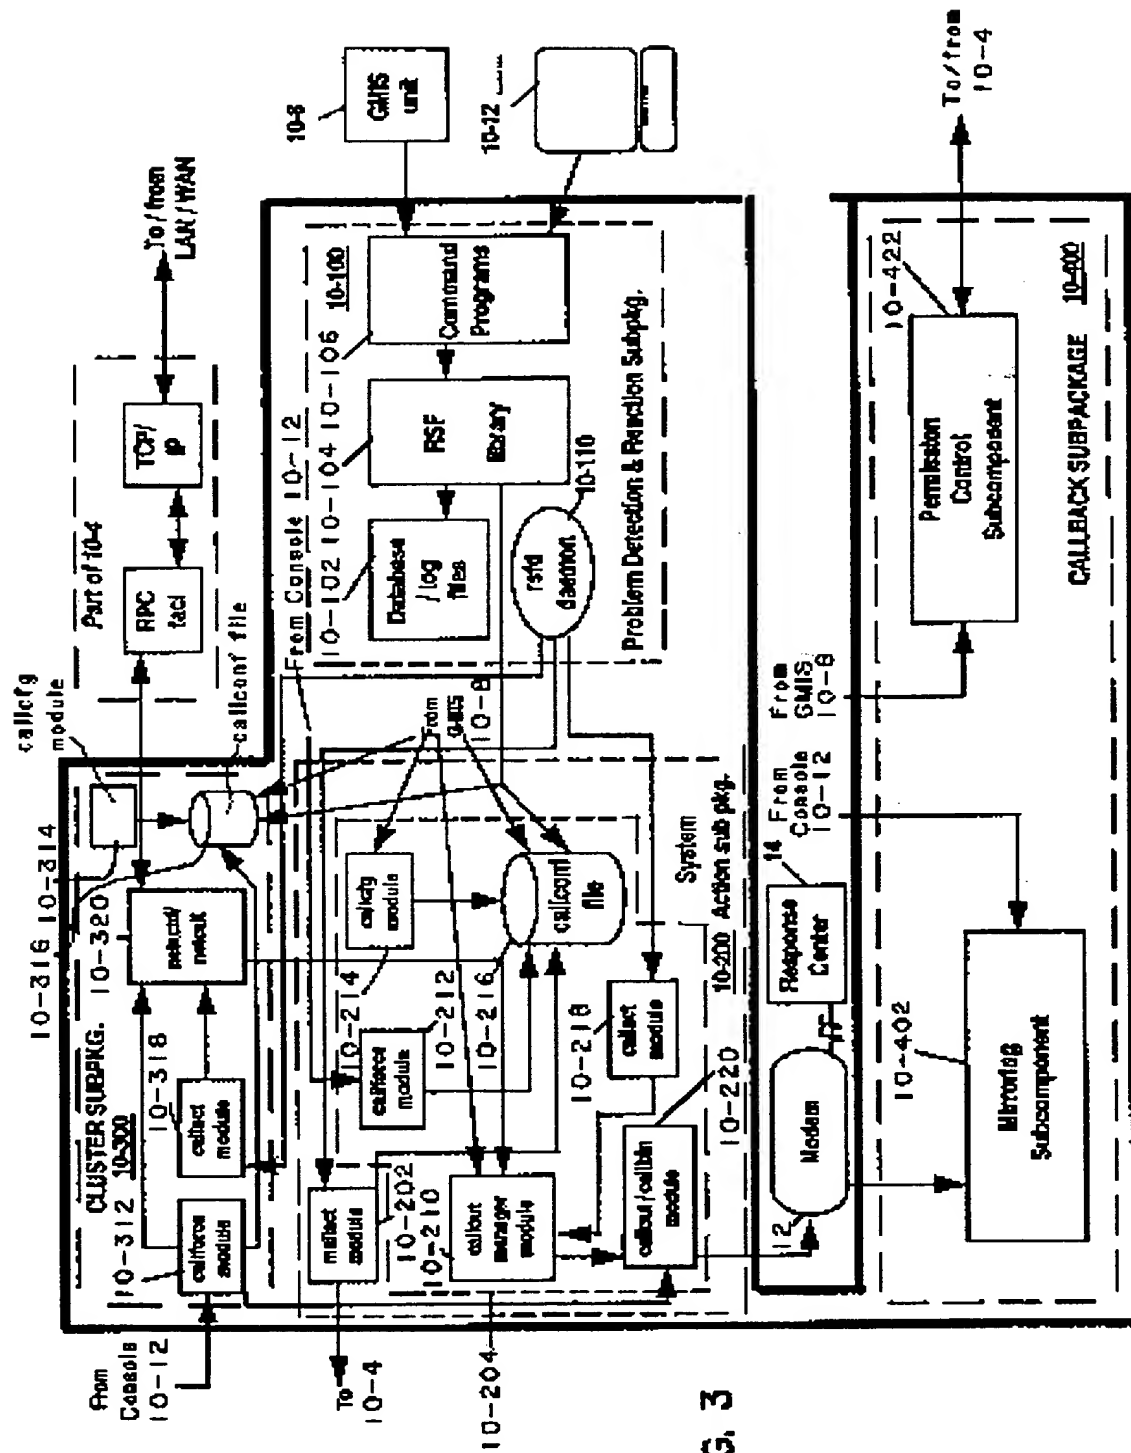


FIG. 2



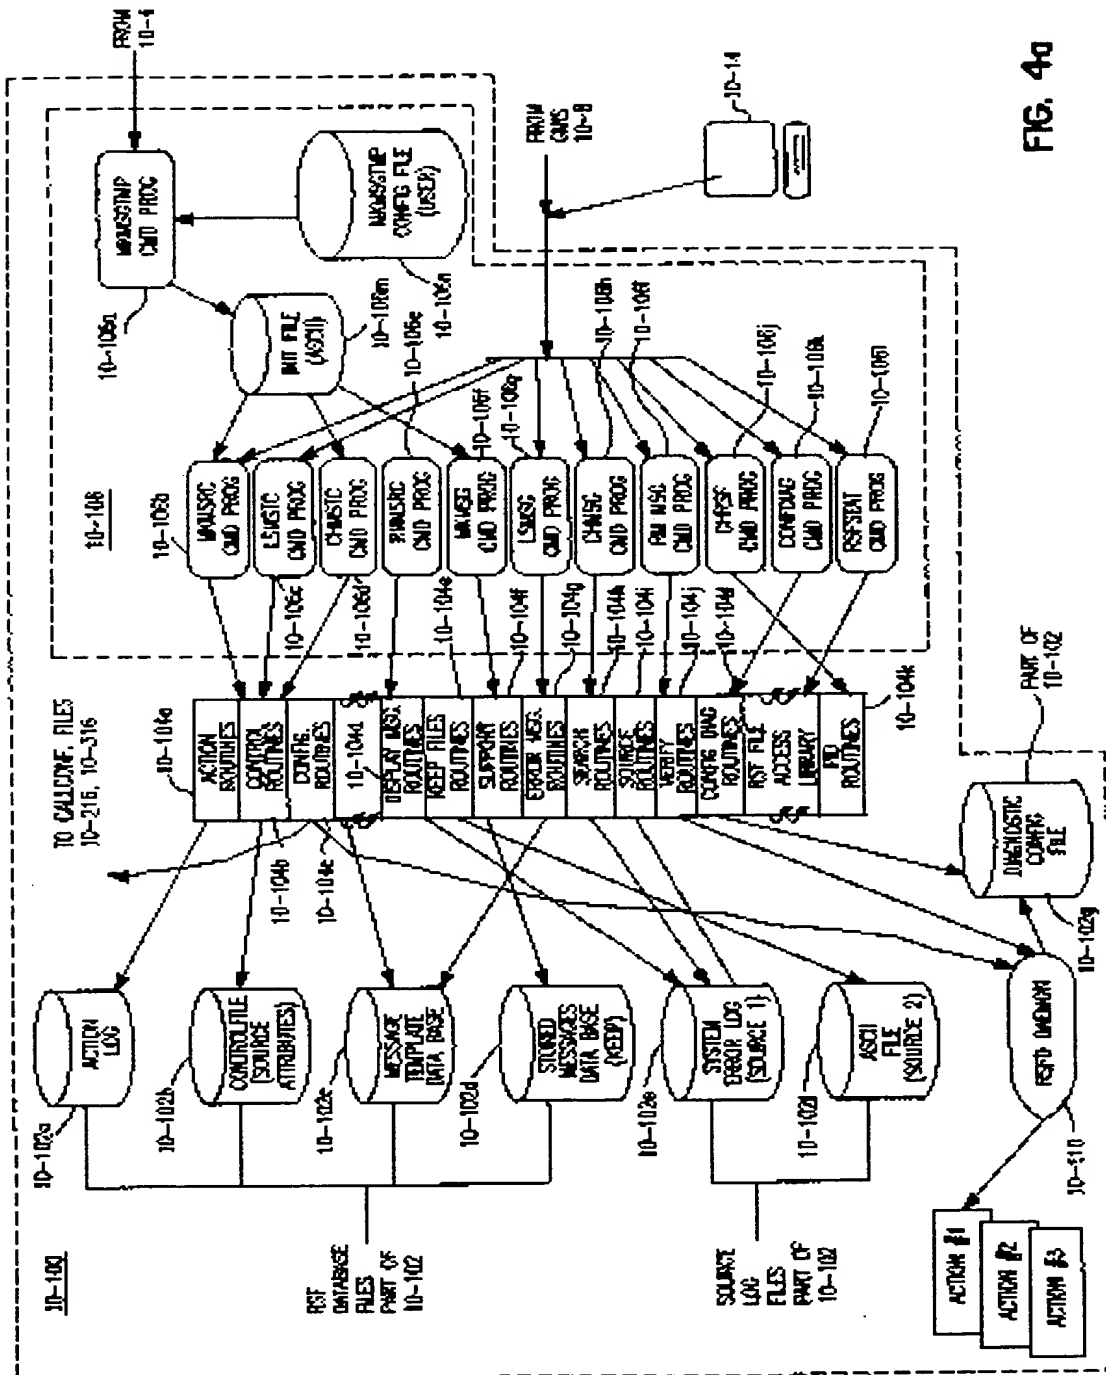


FIG. 4a

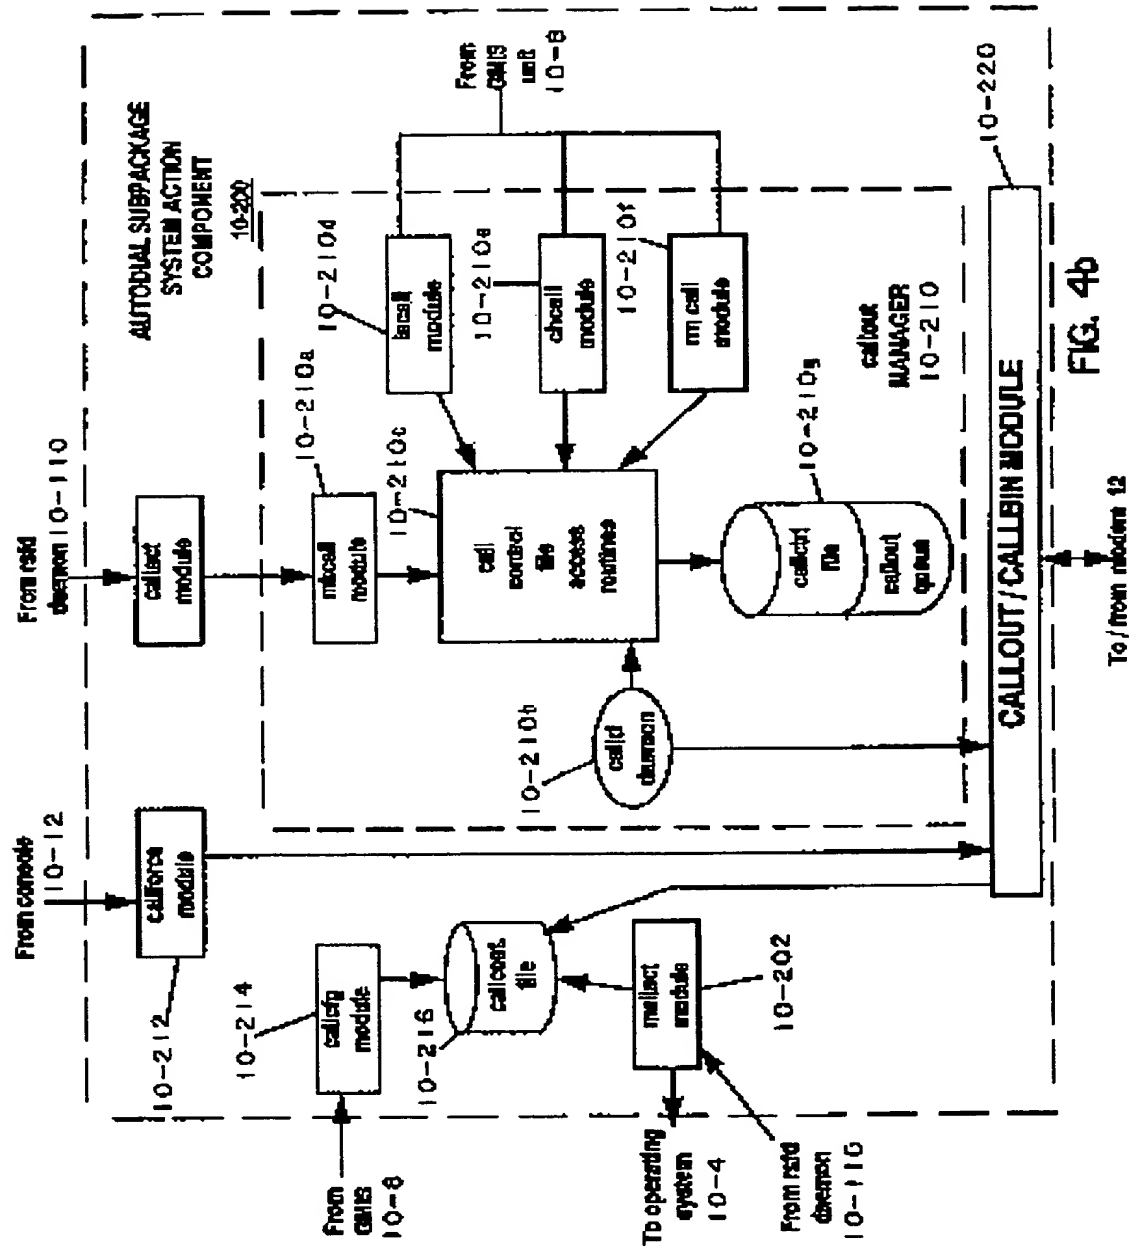


FIG. 4b

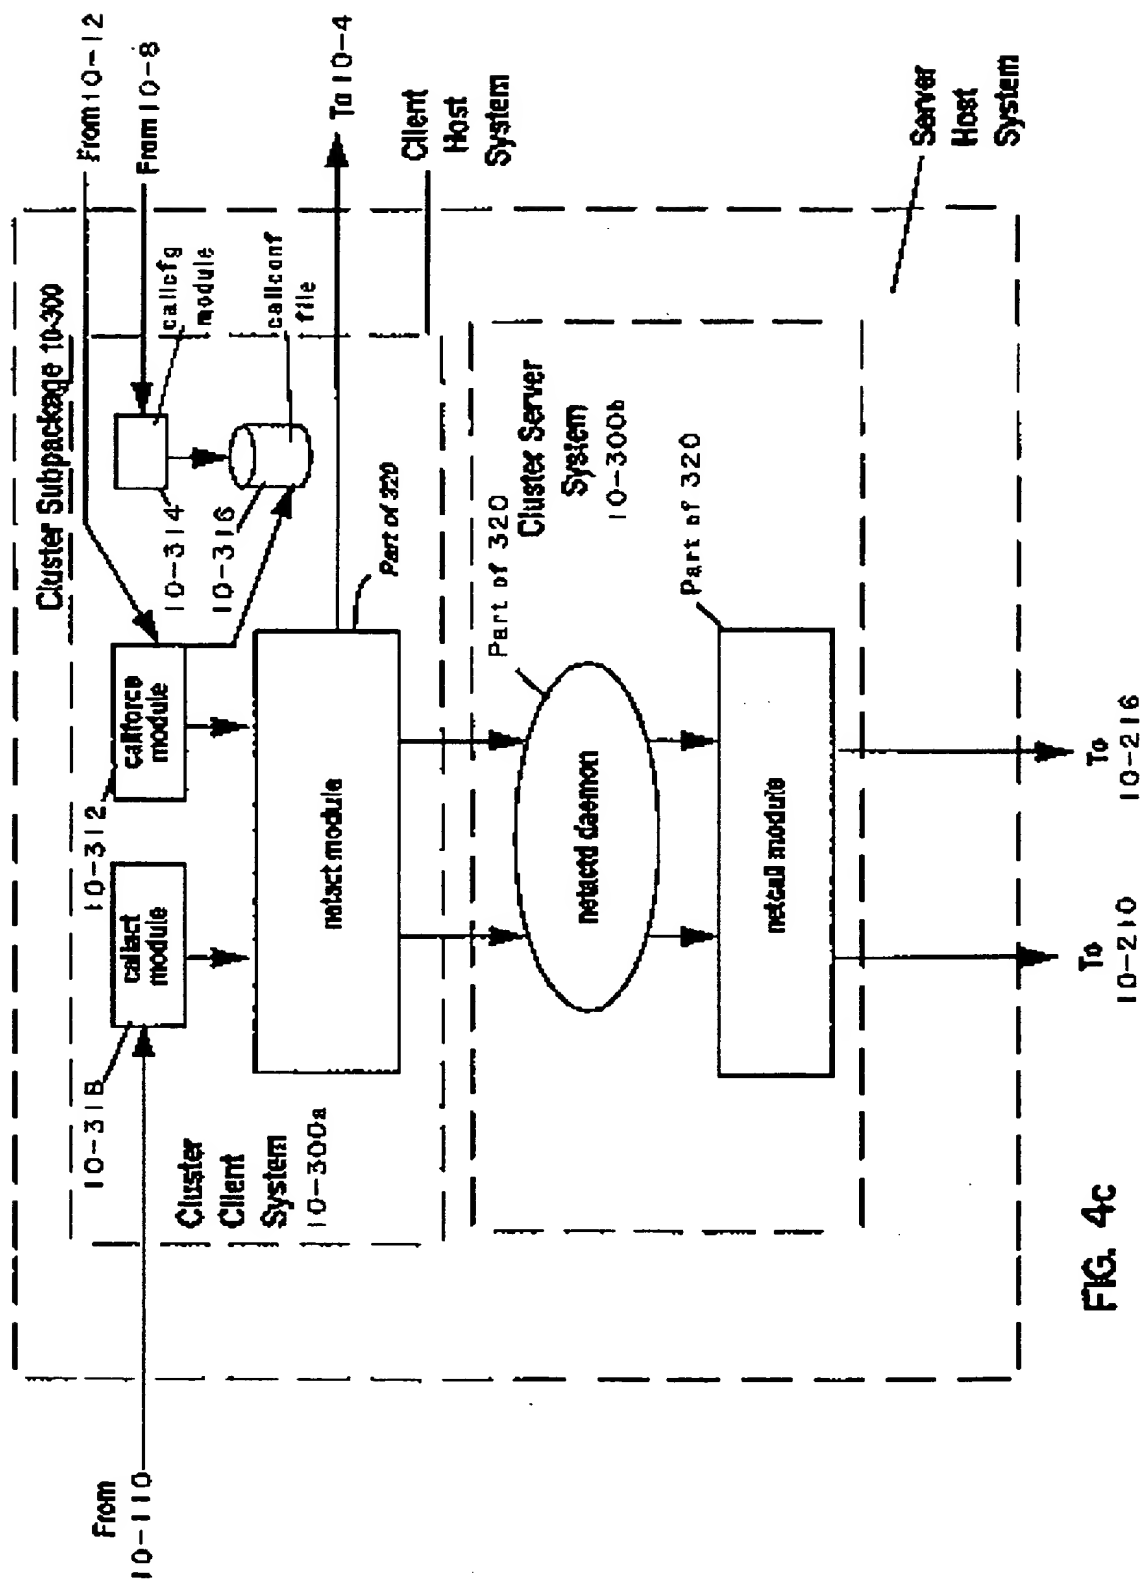


FIG. 4c

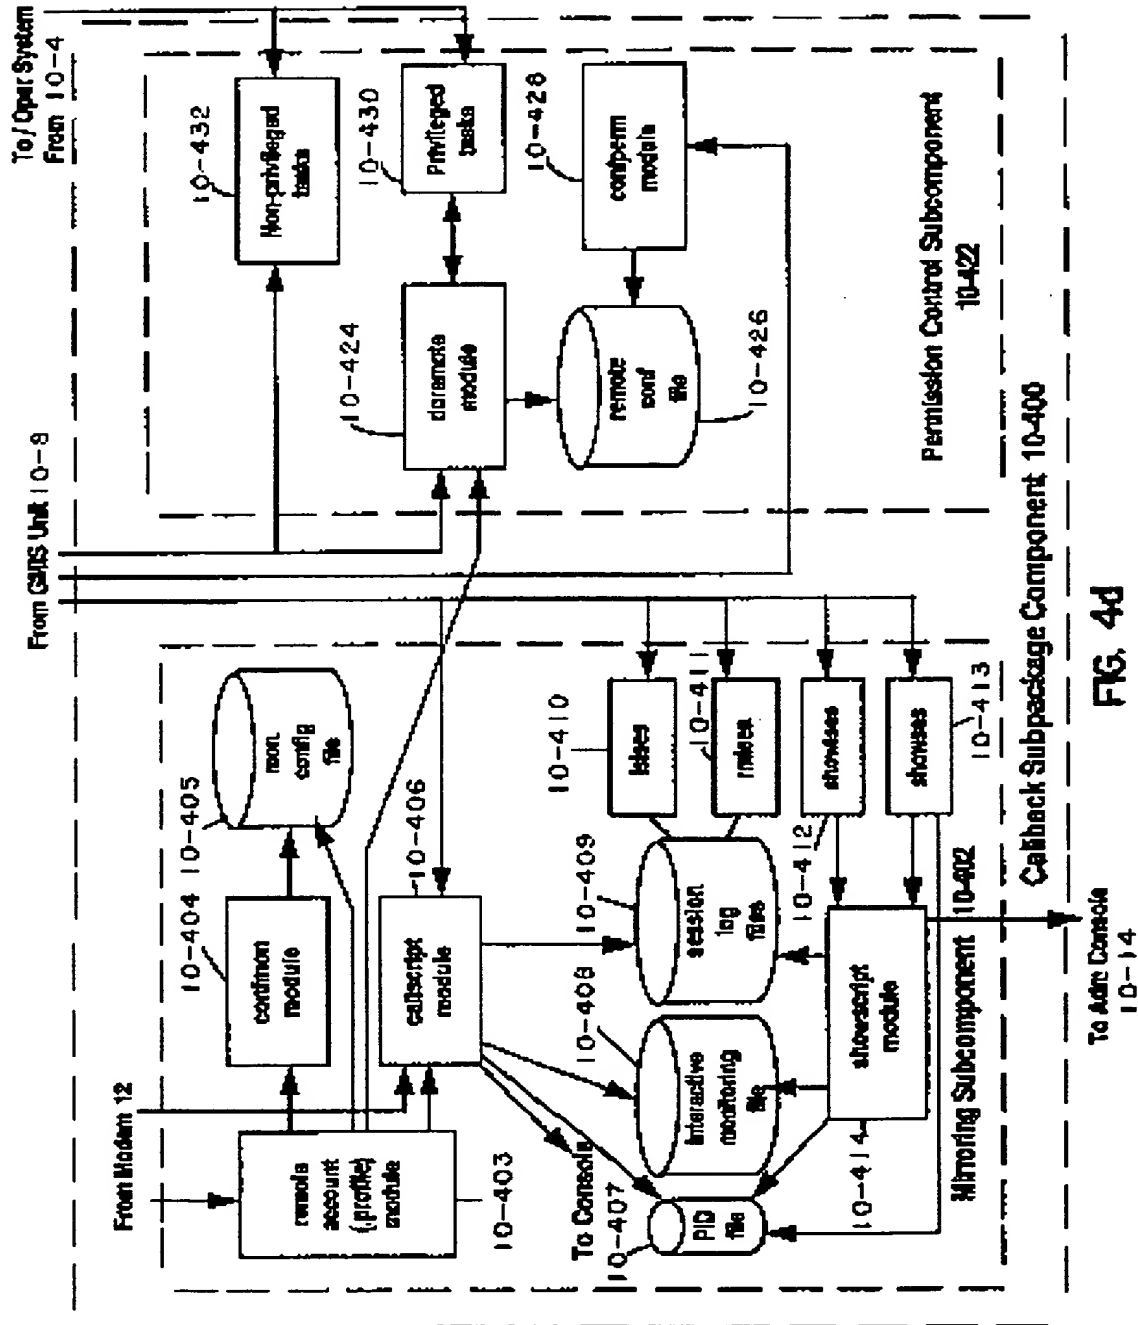


FIG. 4d

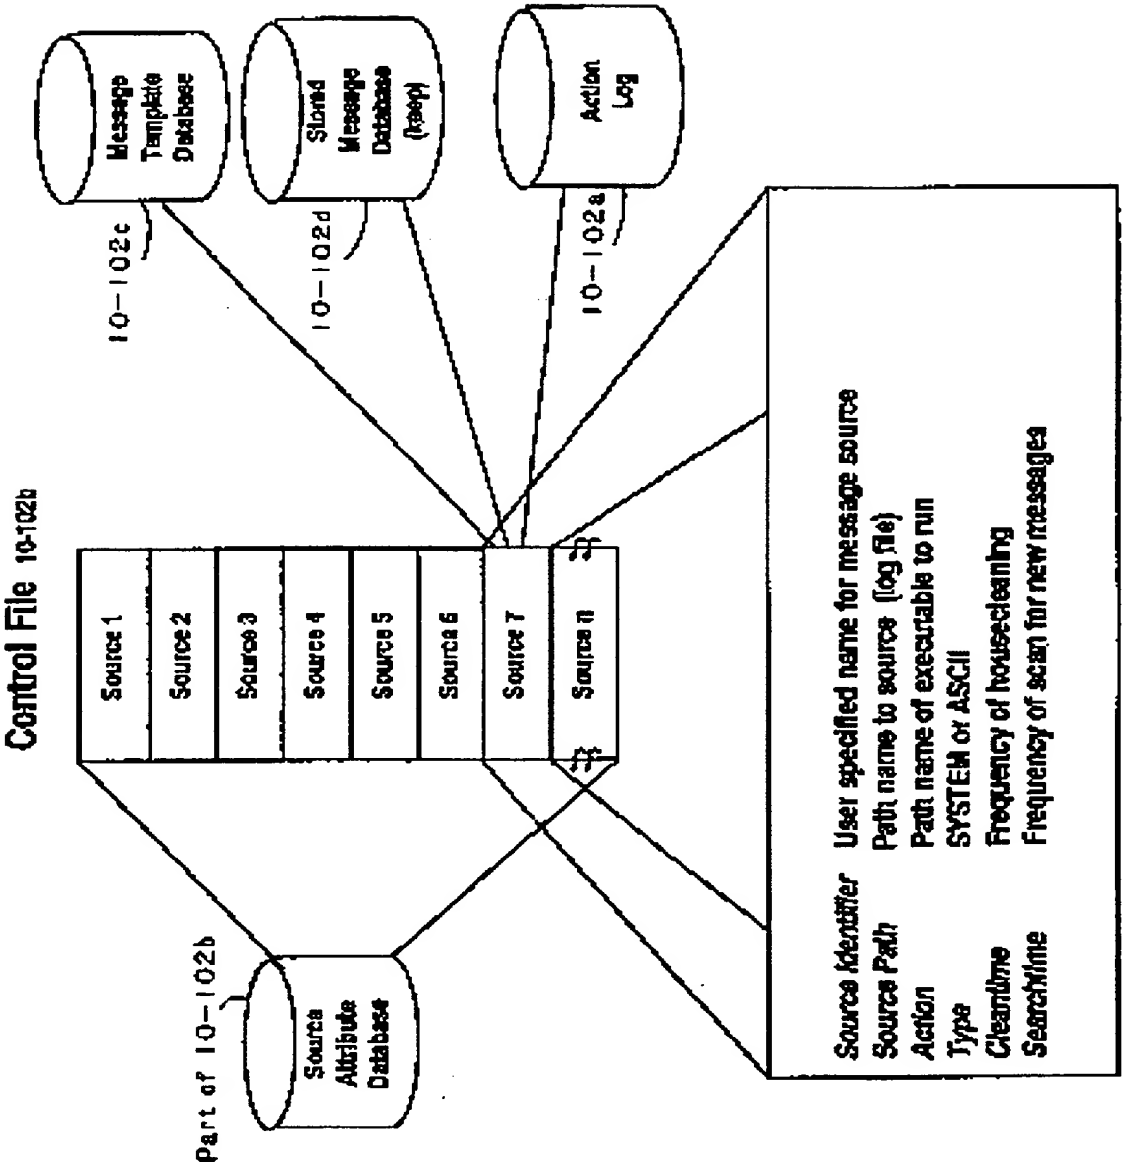


FIG. 5a

Source Message Template Database 10-102c

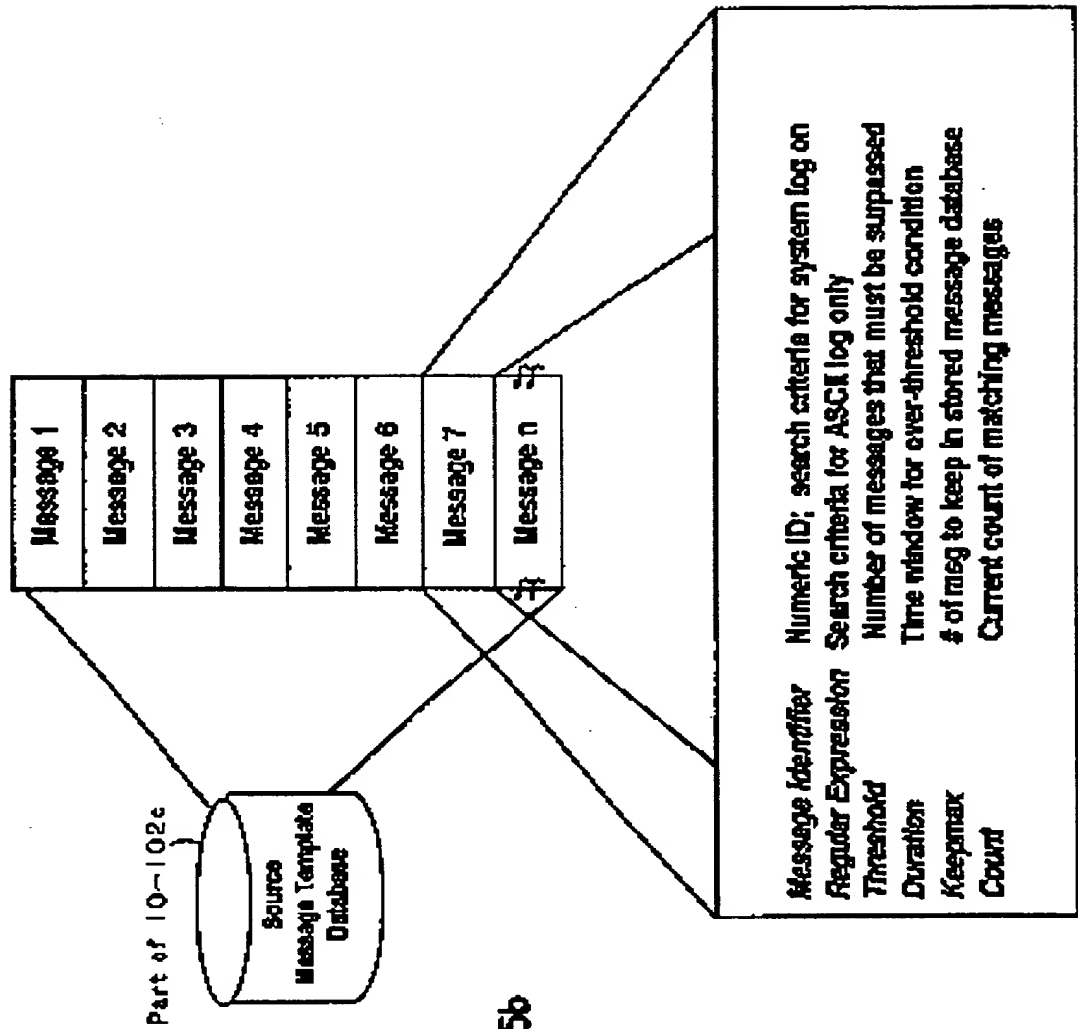


FIG. 5b

Record of actions for source "system"

Date: Thu Apr 1 14:26:34 1993
 ACTION: /usr/bin/callact
 RESULT: UNSUCCESSFUL (1)
 OUTPUT:
 Performing Callout: Thu Apr 1 14:26:30 EST 1993
 Error: Invalid message identifier
 Specified ID is not a hexadecimal number: haze1
 Date: Thu Apr 1 14:56:05 1993
 ACTION: /usr/bin/mailact
 RESULT: SUCCESSFUL
 OUTPUT:
 Date: Fri Apr 2 12:53:26 1993
 ACTION: /usr/bin/callact
 RESULT: SUCCESSFUL
 OUTPUT:
 Performing Callout: Fri Apr 2 12:53:19 EST 1993
 Successfully queued callout
 Date: Fri Apr 2 12:53:26 1993
 ACTION: /usr/bin/mailact
 RESULT: SUCCESSFUL
 OUTPUT:

Record of actions on behalf of cluster nodes

Date: Thu Apr 1 15:36:13 1993
 ACTION: /usr/bin/netcall
 RESULT: SUCCESSFUL
 OUTPUT:
 Callout on behalf of cluster node fiver
 Successfully sent message to BRC
 Customer Service Request Number: 20823928
 Date: Thu Apr 1 15:39:58 1993
 ACTION: /usr/bin/netcall
 RESULT: SUCCESSFUL
 OUTPUT:
 Callout on behalf of cluster node thayli
 Successfully sent message to BRC
 Customer Service Request Number: 20823929
 Date: Thu Apr 1 15:47:17 1993
 ACTION: /usr/bin/netcall
 RESULT: SUCCESSFUL
 OUTPUT:
 Callout on behalf of cluster node hyzenthlay
 Successfully sent message to BRC
 Customer Service Request Number: 20823930

FIG. 5c

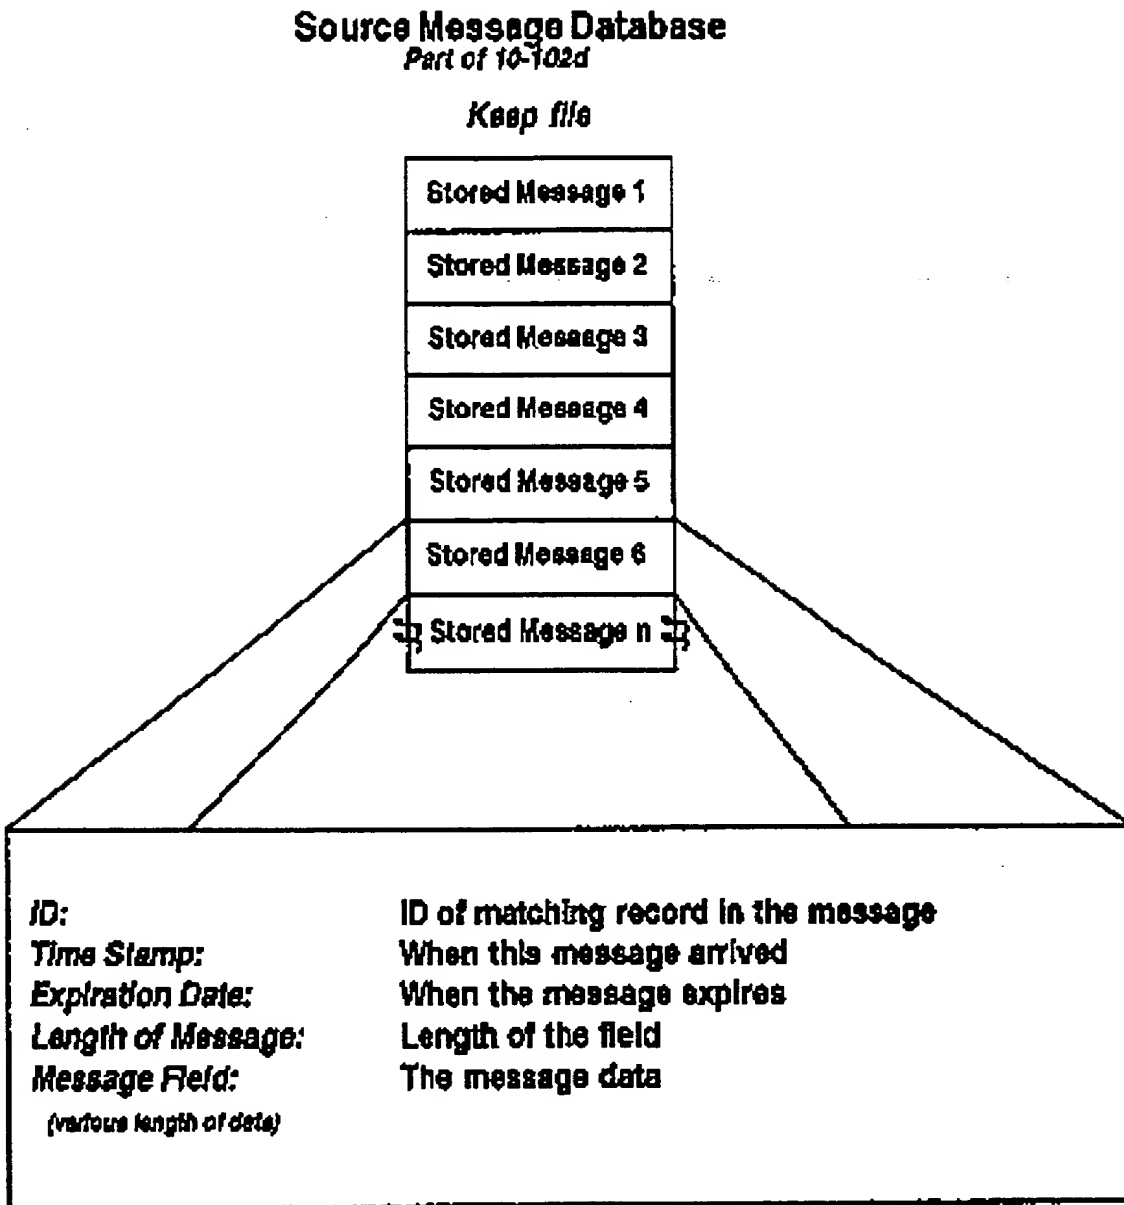


FIG. 5d

ID	LABEL	TYPE	CLASS	ERROR DESCRIPTION
00530EA6	DMA_ERR	UNKN	H	UNDETERMINED ERROR
0065D436	LAN0030	Temp	S	SOFTWARE PROGRAM ERROR
1063B942	LU0_ConfOp	PERM	S	CONFIGURATION OR CUSTOMIZATION ERROR
01D125F9	LAN801E	Temp	S	SOFTWARE PROGRAM ERROR
01F2D769	X15_ALERT2	PERM	H	X-25 RESTART REQUEST BY X.25 ADAPTER
0228SDD6	LAN805C	Perm	S	SOFTWARE PROGRAM ERROR
0260B032	SDL800E	PERM	S	SOFTWARE PROGRAM ERROR
026D4F56	SDL801D	PERM	S	SOFTWARE PROGRAM ERROR
0299F00B	FDDI_NOMBU	TEMP	S	RESOURCE UNAVAILABLE ERROR
0375DFC2	X19_ALERT9	TEMP	H	X-FRAME TYPE W RECEIVED
038F2580	SCSI_ERR7	UNKN	H	UNDETERMINED ERROR
038F3117	MPQP_DSRRD	TEMP	H	COMMUNICATION PROTOCOL ERROR
03ACD152	NB20	PERM	S	SOFTWARE PROGRAM ERROR
429B097	LAN8553	Perm	S	SOFTWARE PROGRAM ERROR
1C8C0	VCA_INITZ	TEMP	S	Host independent initialization failed
66	SCSI_ERR1	PERM	H	ADAPTER ERROR
	SDL0014	TEMP	S	SOFTWARE PROGRAM ERROR
	MEM2	PERM	H	Memory failure
	CFG_BU	PERM	S	Configuration failed;ad bus type


SYSTEM LOG FILE

Jun 23 08:54:51 TP_init: Can't allocate memory for first IOPB
 Jun 23 13:02:42 Feedback from MYU-MS does not indicate movement
 Jun 23 13:02:46 Controller retries attempted before command completed
 Jun 23 13:02:46 Can't allocate message buffer
 Jun 23 13:02:51 Illegal (odd) count specified in S/C list
 Jun 23 13:03:51 Video signal missing from TP module 2
 Jun 23 13:02:55 Cannot start motor (4:2): fail, sense key is 0x2231
 Jun 23 13:02:55 Cannot activate MYU 4 of TP module 2
 Jun 23 13:03:57 Audio signal missing from TP module 2
 Jun 23 13:03:59 Status reg 0x02, Bank 0x0003, Syndrome 0xFFFF, err on TP 2
 Jun 23 13:05:00 Can't Push/unmap unit structure
 Jun 23 13:05:00 Address not mapped properly
 Jun 23 13:05:01 Can't dump more than 512 MB physical memory


ASCII LOG FILE

FIG. 5e


FIG. 6

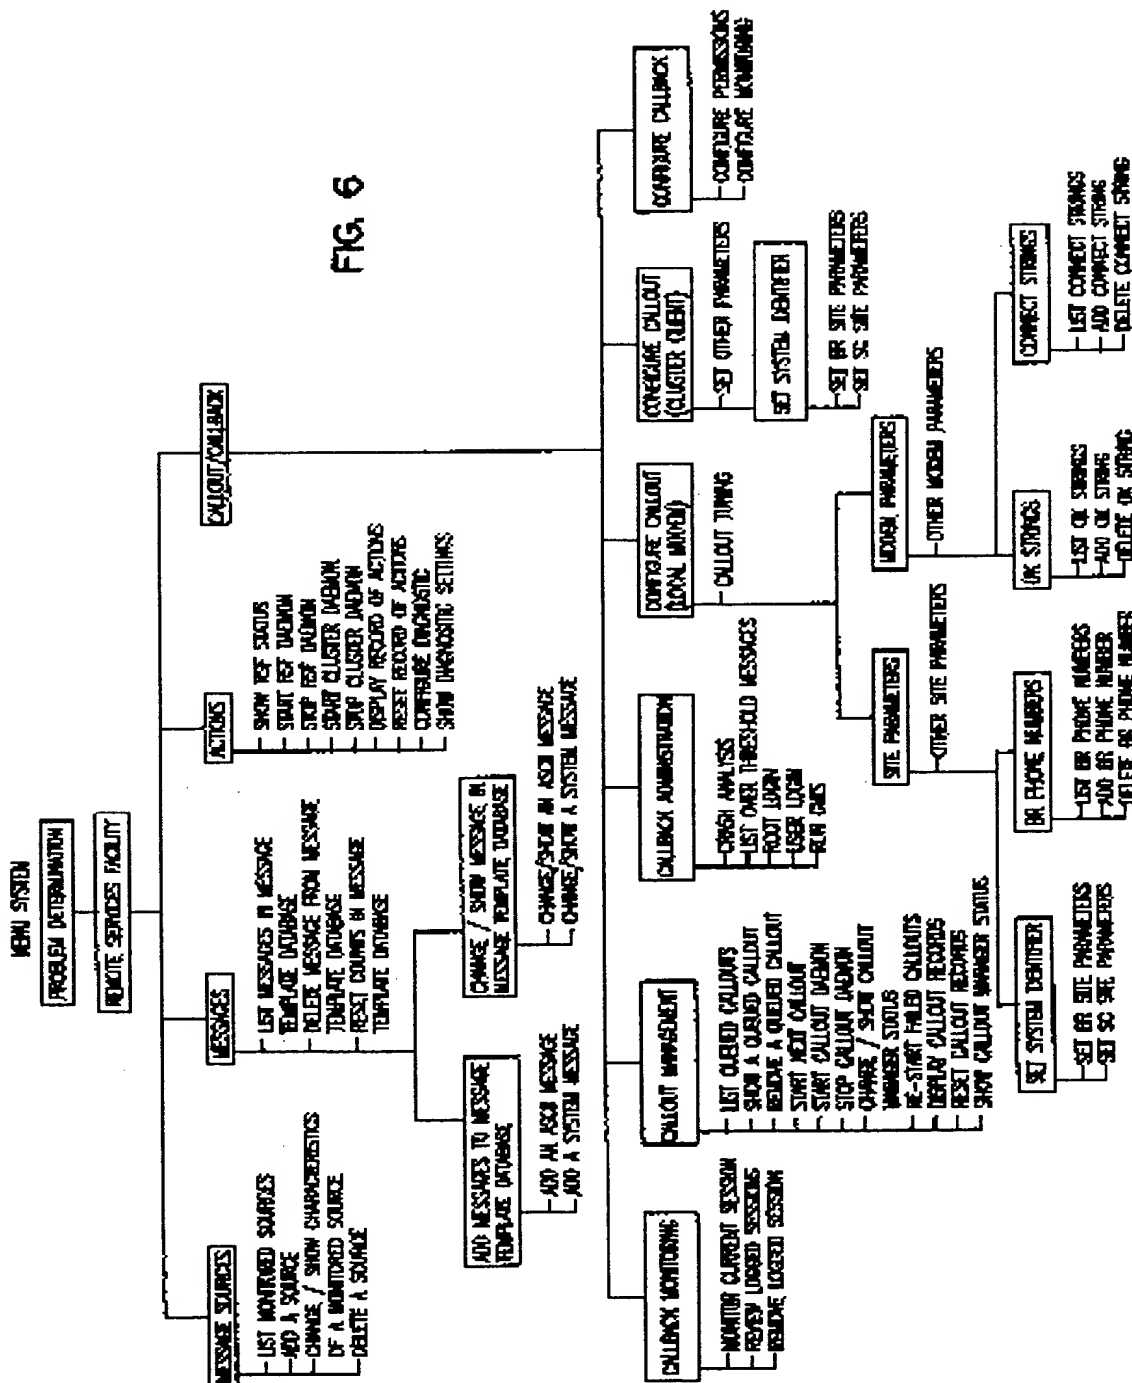


000: SAMPLE SEQUENCE OF RSF CONFIGURATION STEPS

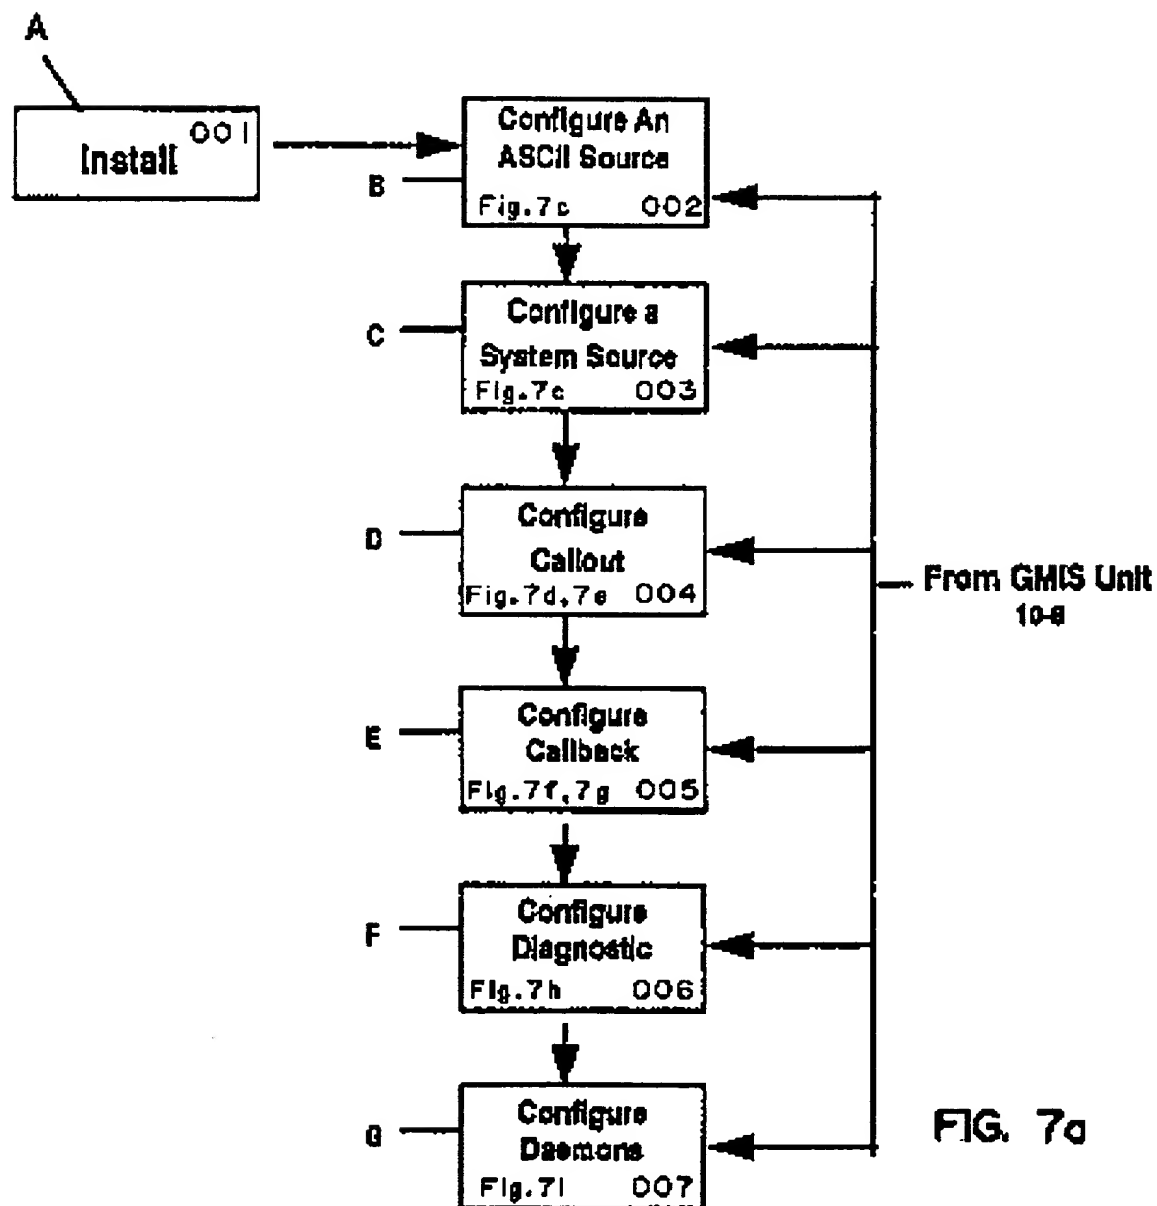

001: INSTALL. (Detail of CONFIG. during install)

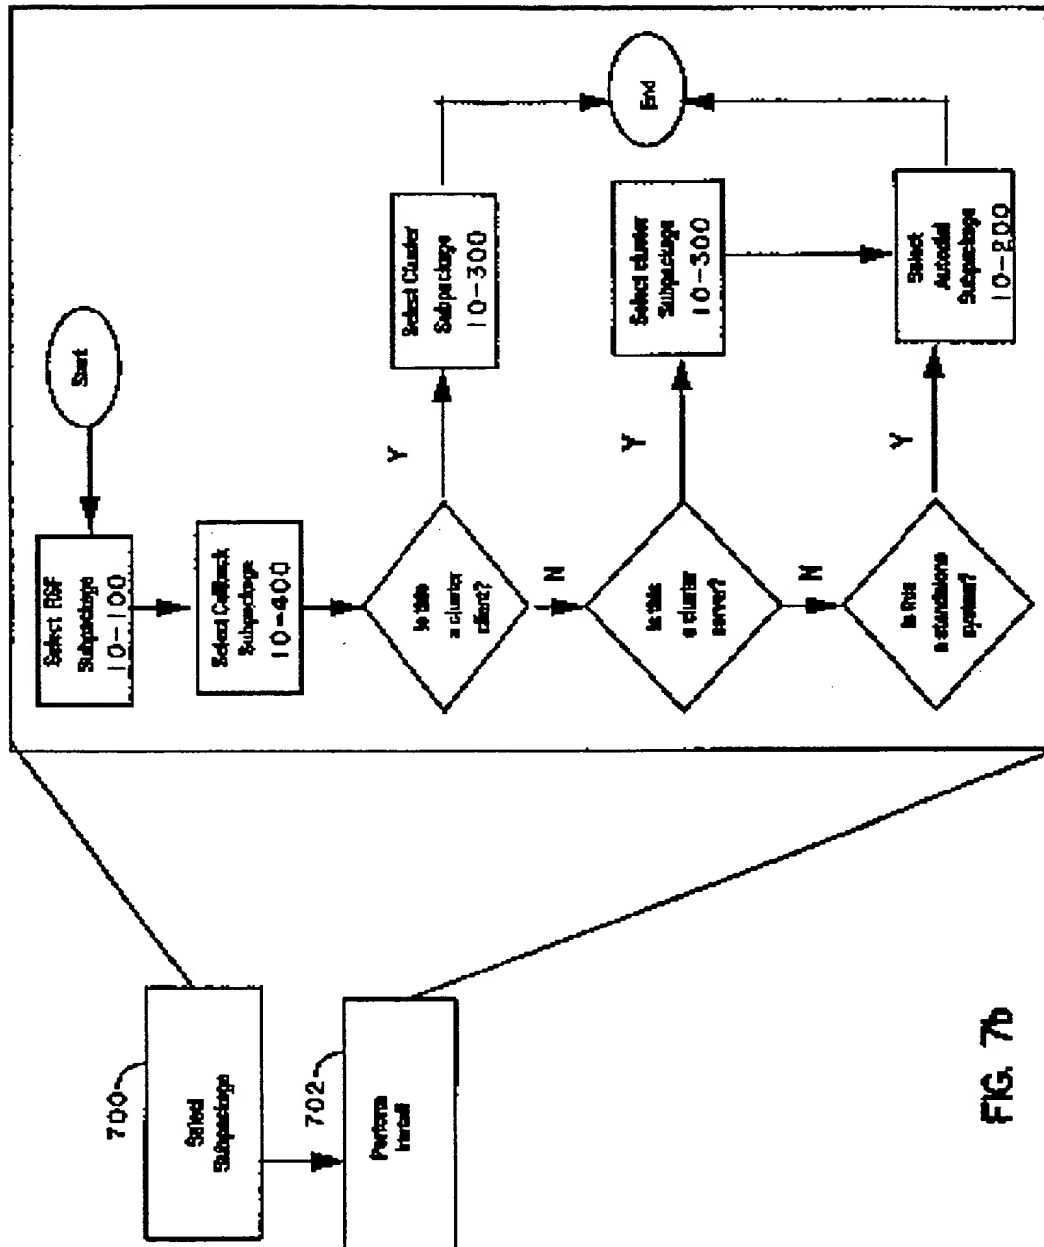

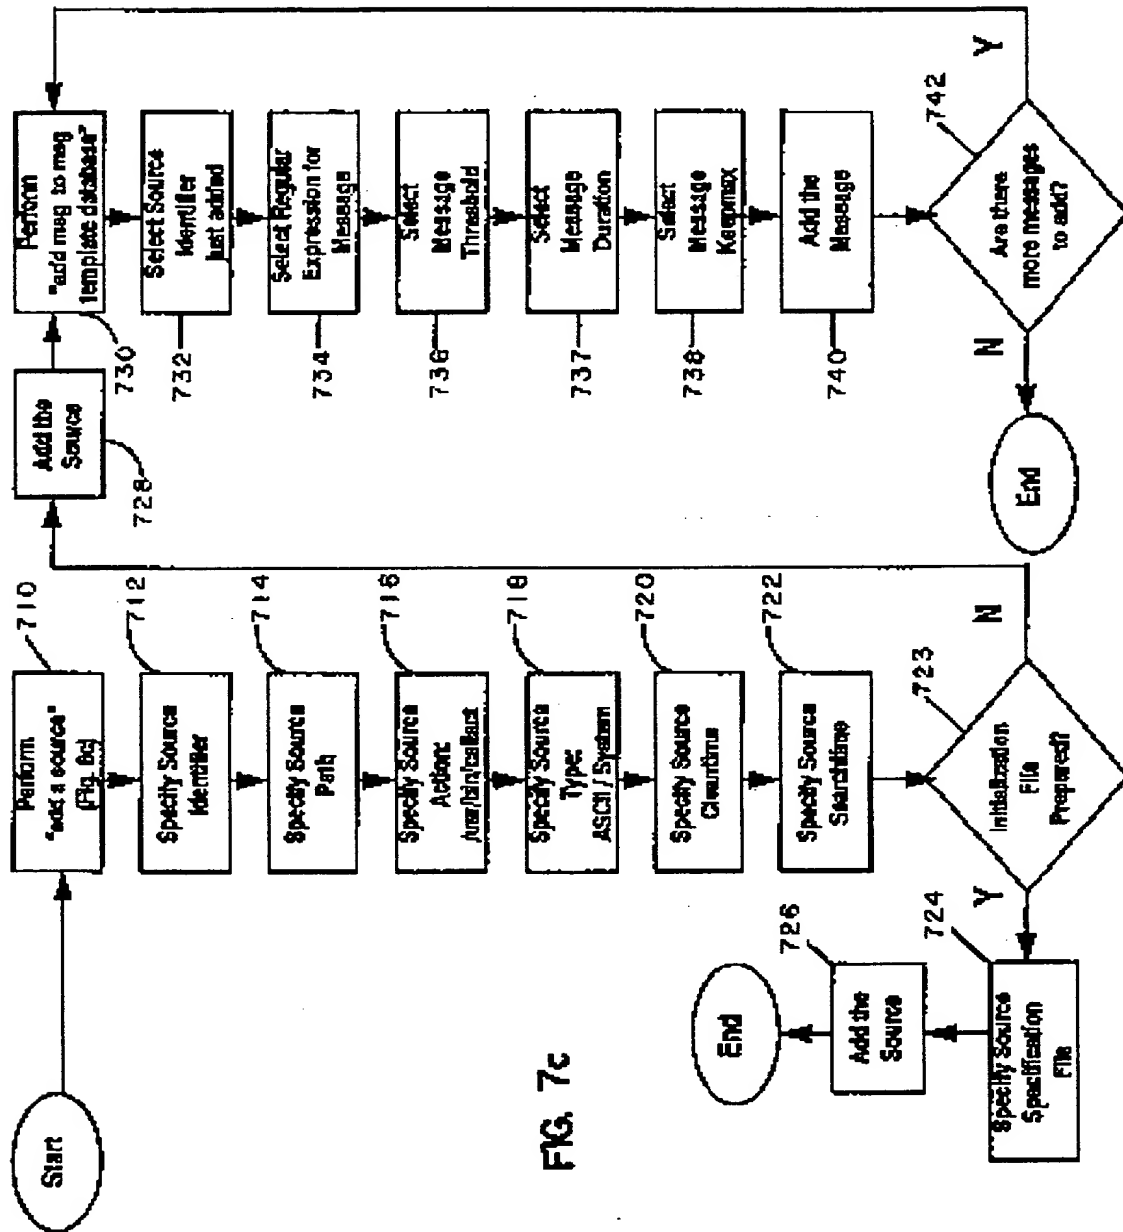

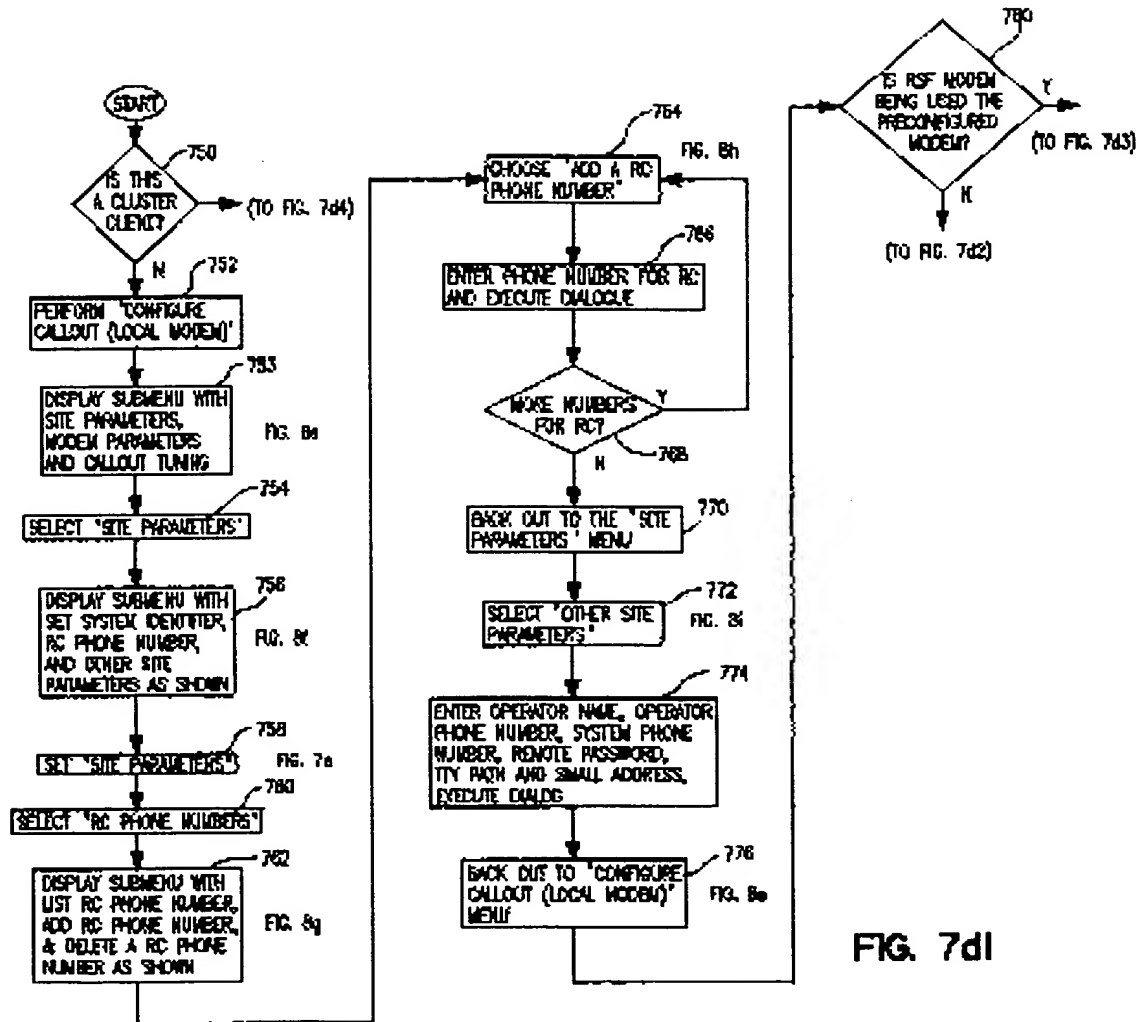


FIG. 7dI



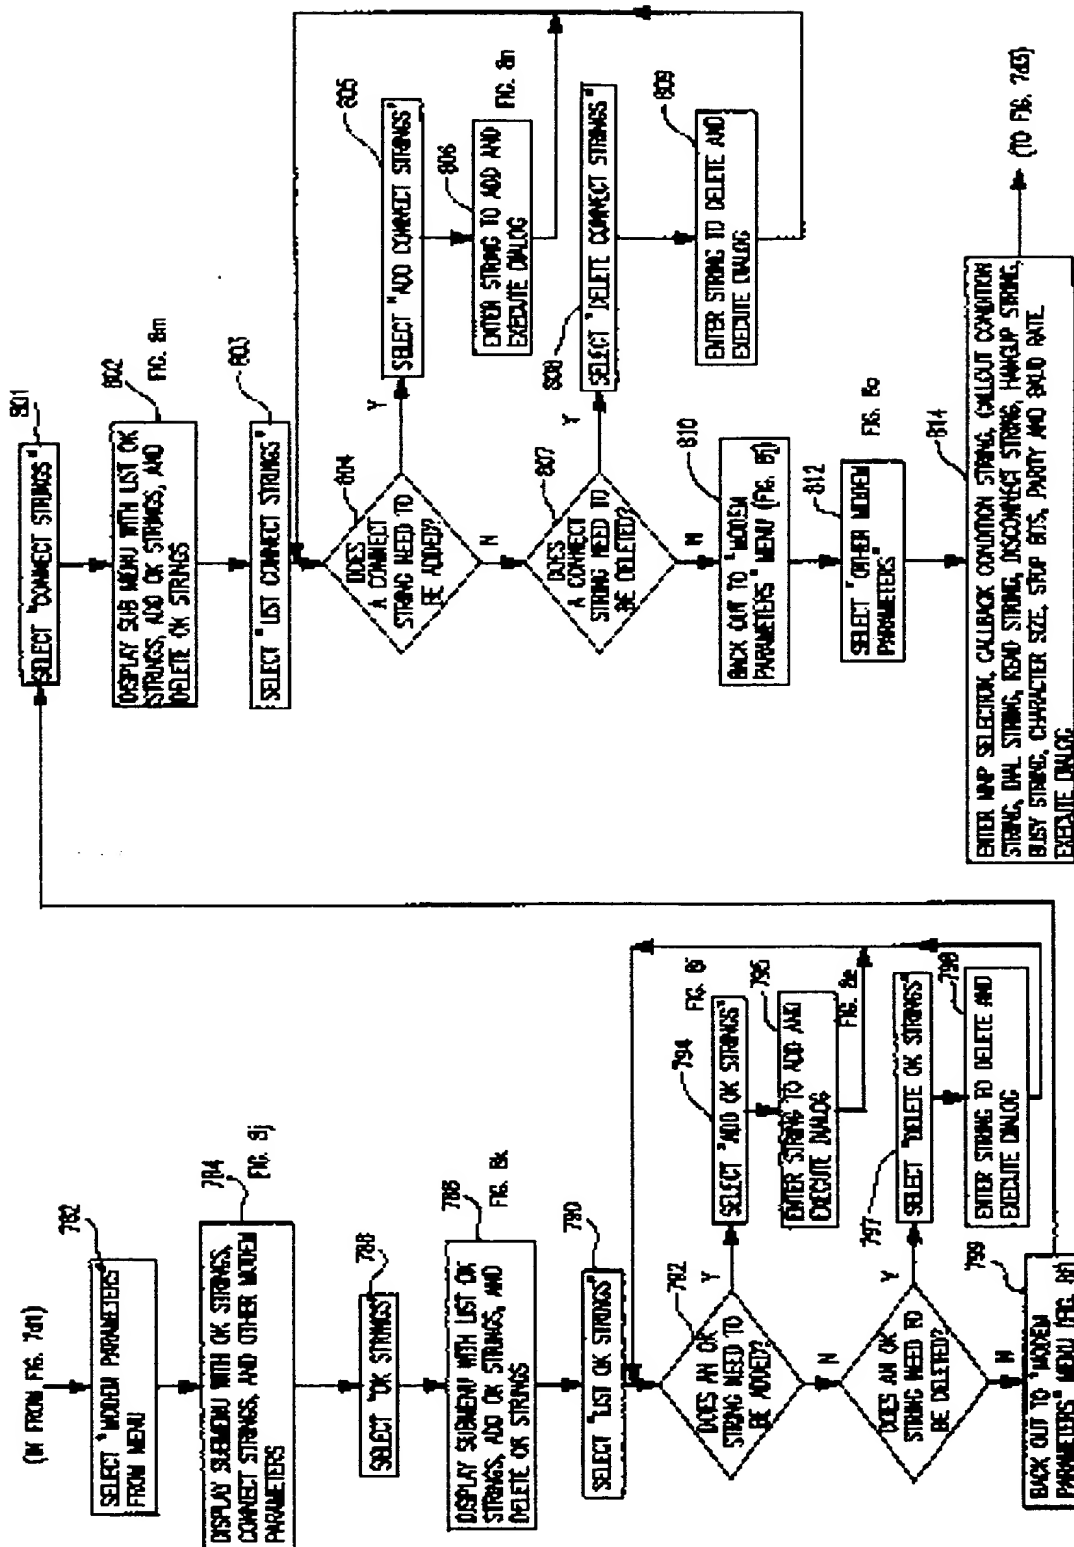


FIG. 7d2

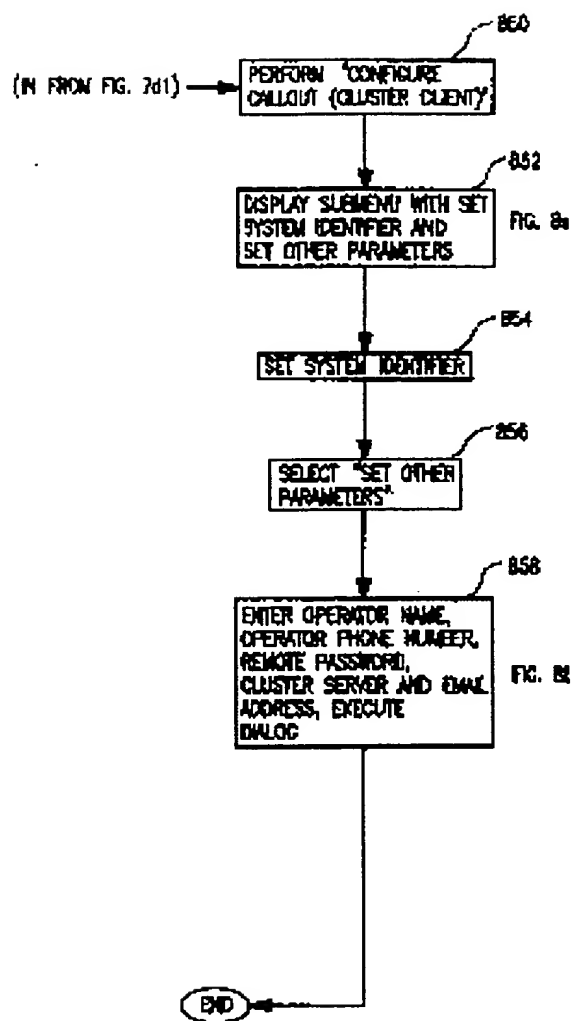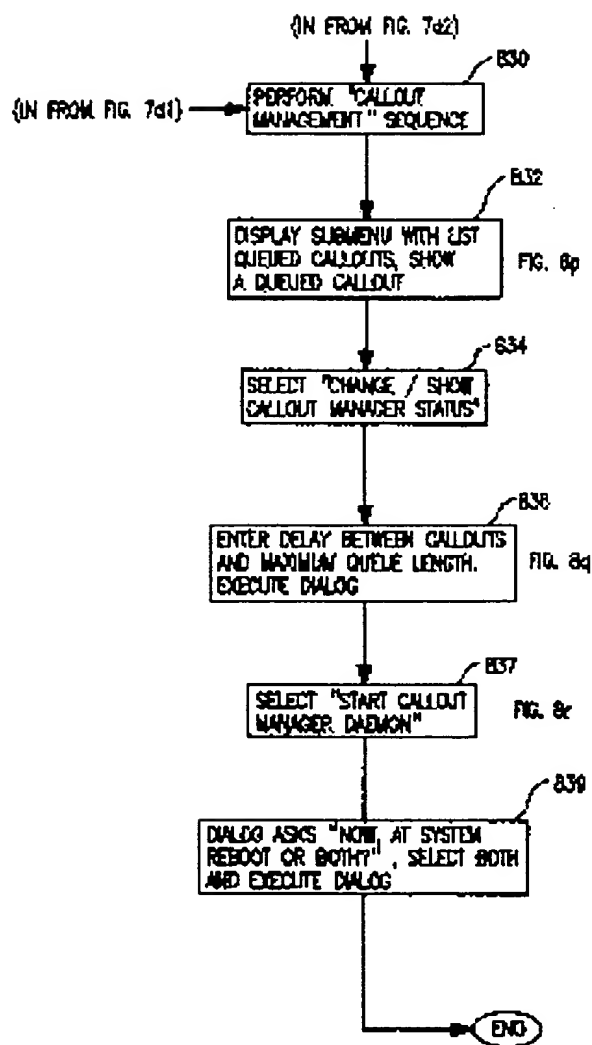

008: SET THE SYSTEM IDENTIFIER (detail)

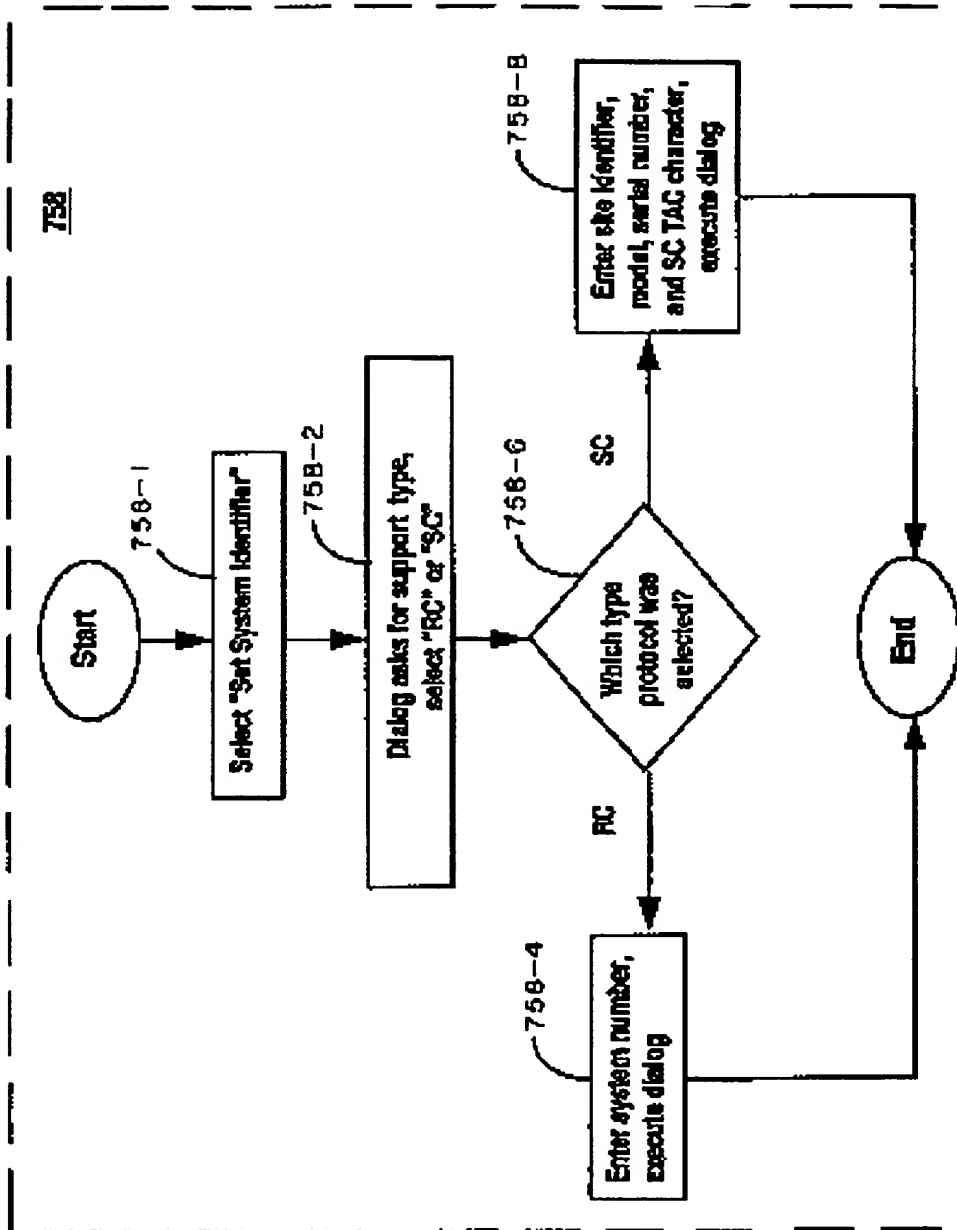


FIG. 7e

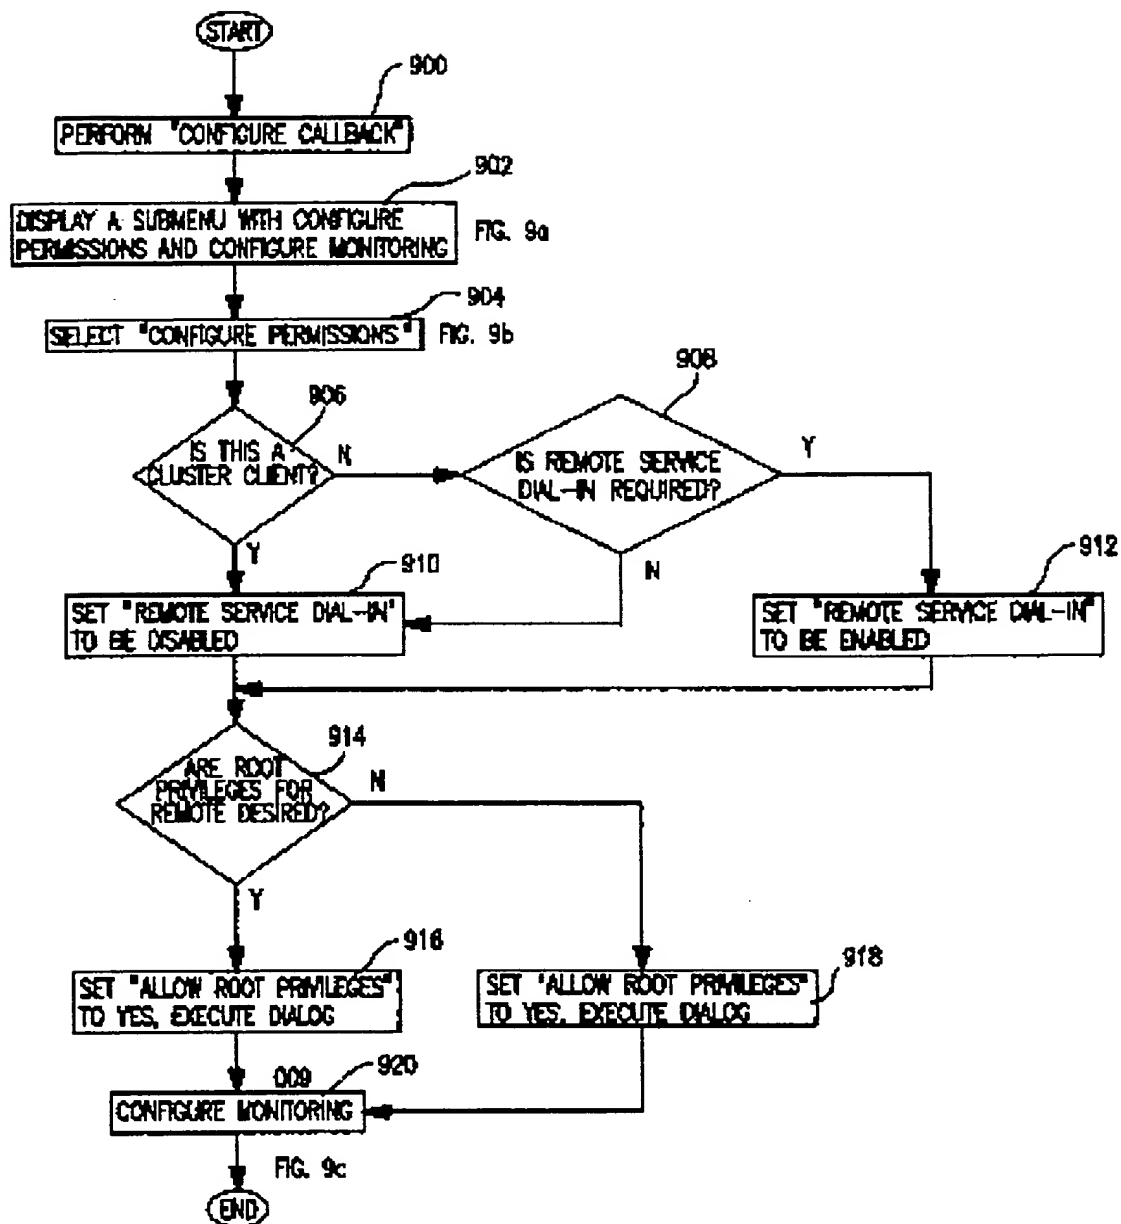


FIG. 7f

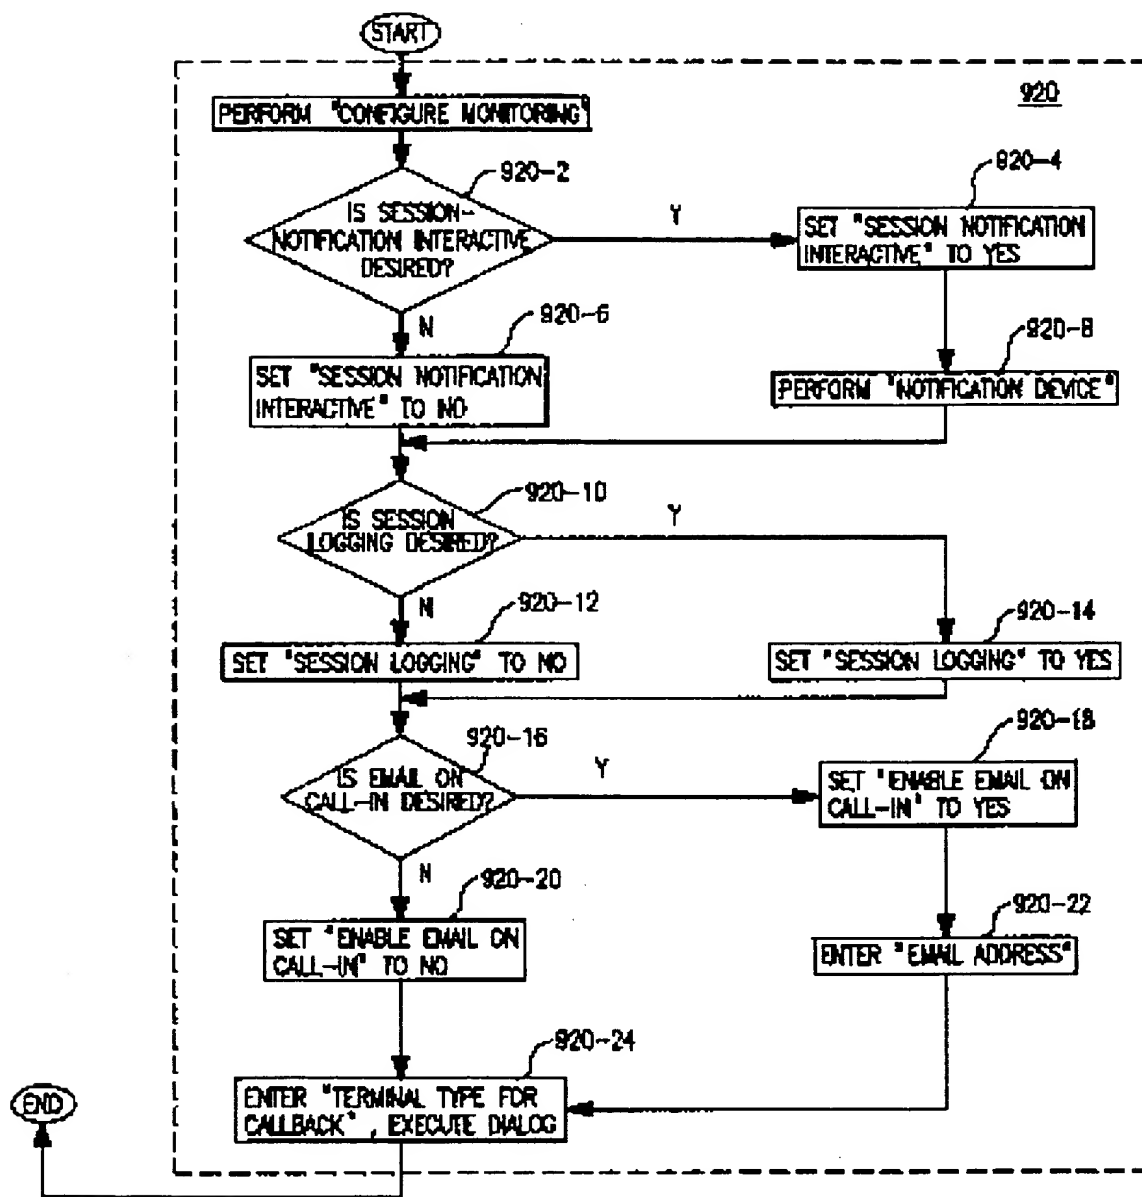


FIG. 7g

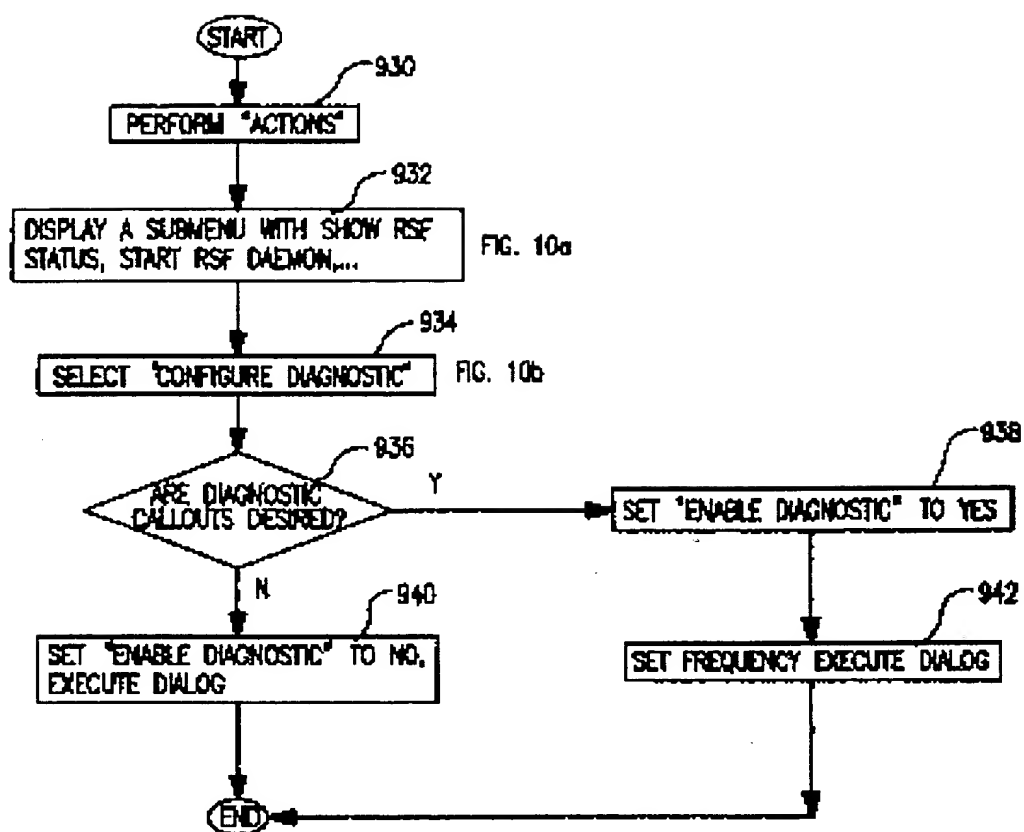


FIG. 7h

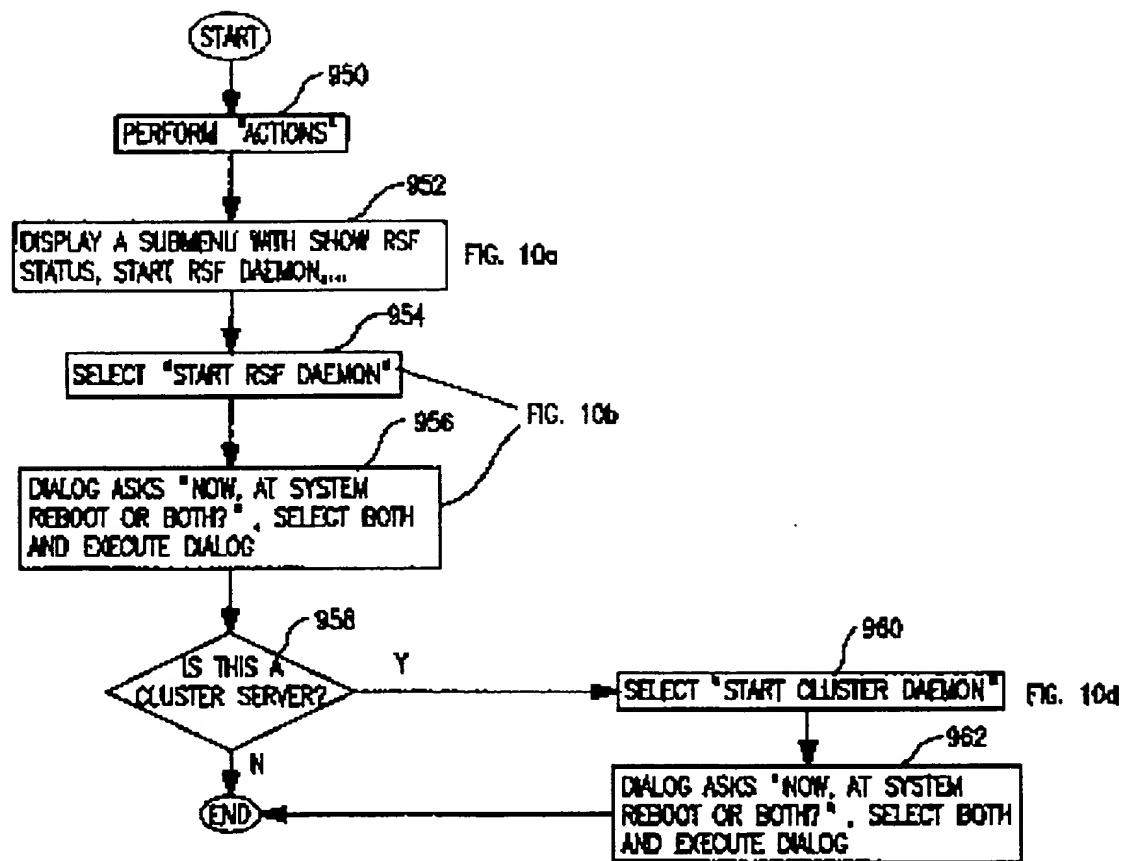


FIG. 71

Install Software With Updates			
Type or select values in entry fields. Press Enter AFTER making all desired changes.			
		[Entry Fields]	
* INPUT device / directory for software	/dev/fd0		
* SOFTWARE to install	[All]		
Automatically install PREREQUISITE software?	no		
COMMIT software?	no		
SAVE replaced files?	yes		
VERIFY software?	no		
EXTEND file systems if space needed?	yes		
REMOVE input file after installation?	no		
F1=Help F2=Refresh F3=Cancel F4=List Esc+5=Undo Esc+6=Command Esc+7=Edit Esc+8=Image Esc+9=Shell Esc+0=Exit Enter=Do			

FIG. 8a

Install Software With Updates			
Ty Pr			
SOFTWARE to install			
Move cursor to desired item and press Fj.			
ONE OR MORE items can be selected.			
Press Enter AFTER making all selections.			
[TOP]			
#	Installation Name	Label	File Content
1	rsf.all		
	Description: Will include ALL the images for rsf.		
2	rsf.rsfl.obj	00.17.0000.0000	
	RSF (Remote Services Facilities) Software, Remote Se I H mar,root		
[MORE...21]			
F1=Help F2=Refresh F3=Cancel Esc+7=Select Esc+8=Image Esc+0=Exit Enter=Do			

FIG. 8b

Add a Source	
Type or select values in entry fields. Press Enter AFTER making all desired changes.	
* <u>Source Description</u>	[Entry Fields]
* Source Path	{ }
* Action	{ }
Type	[ASCII]
Cicentime	[1-day]
Searchtime	[5-hours]
Initialization File	{ }
F1=Help F2=Refresh F3=Cancel F4=List Esc+5=Undo Esc+6=Command Esc+7=Edit Esc+8=Image Esc+9=Shell Esc+0=Exit Enter=Do	

FIG. 8c

Add a SYSTEM Message

Type or select values in entry fields.
Press Enter AFTER making all desired changes.

<p>Source Identifier</p> <p>Threshold</p> <p>Duration</p> <p>Keypass</p> <p>Initialization File</p>	<p style="text-align: center;">[Entry Fields]</p> <p>system</p> <p>{0}</p> <p>{5}</p> <p>{1-day}</p> <p>{20}</p> <p>{1}</p>	<p>+X</p> <p>+H</p> <p>+</p> <p>8</p> <p>}</p>
--	---	--

F1=Help	F2=Refresh	F3=Cancel	F4=List
Esc+5=Undo	Esc+6=Command	Esc+7=Edit	Esc+8=Image
Esc+9=Shell	Esc+0=Exit	Enter=Do	

FIG. 8d

Configure Callout (Local Modem)

Move cursor to desired item and press Enter.

Site Parameters

Modem Parameters

Callout Tuning

F1=Help	F2=Refresh	F3=Cancel	Esc+8=Image
Esc+9=Shell	Esc+0=Exit	Enter=Do	

FIG. 8e

Site Parameters

Move cursor to desired item and press Enter.

Get System Identification

ERC Phone Numbers

Other Site Parameters

F1=Help	F2=Refresh	F3=Cancel	Esc+8=Image
Esc+9=Shell	Esc+0=Exit	Enter=Do	

FIG. 8f

BRC Phone Numbers

Move cursor to desired item and press Enter.

USE BRC Phone Numbers
 Add a BRC Phone Number
 Delete a BRC Phone Number

F1=Help Esc+9=Shell	F2=Refresh Esc+0=Exit	F3=Cancel Enter=Do	Esc+8=Image
------------------------	--------------------------	-----------------------	-------------

FIG. 8g

Add a BRC Phone Number

Type or select values in entry fields.
 Press Enter AFTER making all desired changes.

BRC Phone Number [Entry Fields]

[1]

F1=Help Esc+5=Undo Esc+9=Shell	F2=Refresh Esc+6=Command Esc+0=Exit	F3=Cancel Esc+7=Edit Enter=Do	F4=List Esc+8=Image
--------------------------------------	---	-------------------------------------	------------------------

FIG. 8h

Set Other Parameters

Type or select values in entry fields.
 Press Enter AFTER making all desired changes.

Operator Name Operator Phone Number System Phone Number Remote Password TTY Path E-mail Address	[Entry Fields] [John B. Jones] [(508) 555-3325] [5055558275] [phoenix] [/dev/tty1] [root]
---	--

F1=Help Esc+5=Undo Esc+9=Shell	F2=Refresh Esc+6=Command Esc+0=Exit	F3=Cancel Esc+7=Edit Enter=Do	F4=List Esc+8=Image
--------------------------------------	---	-------------------------------------	------------------------

FIG. 8i

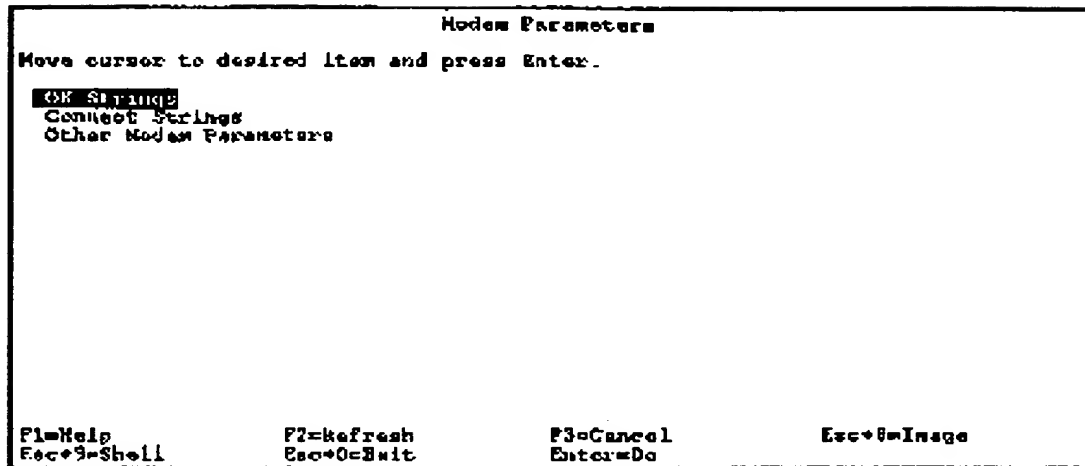


FIG. 8j

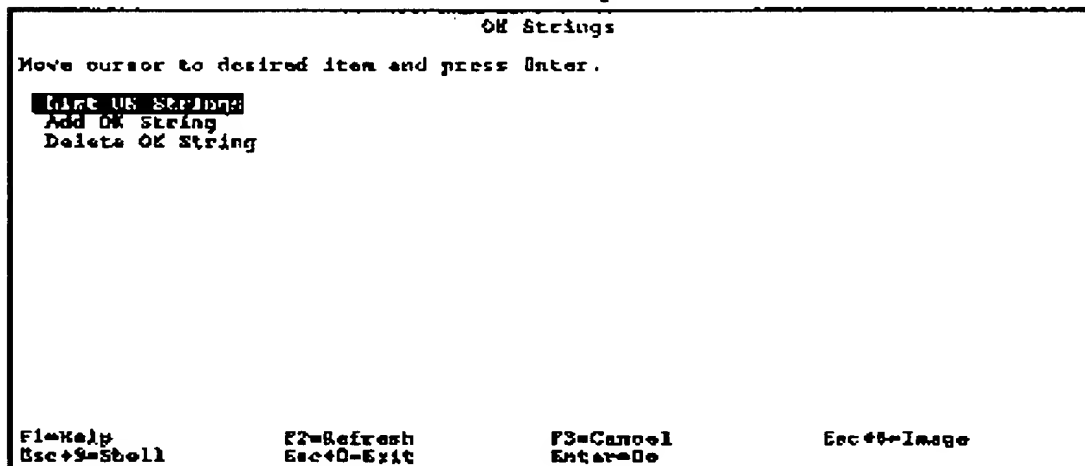


FIG. 8k

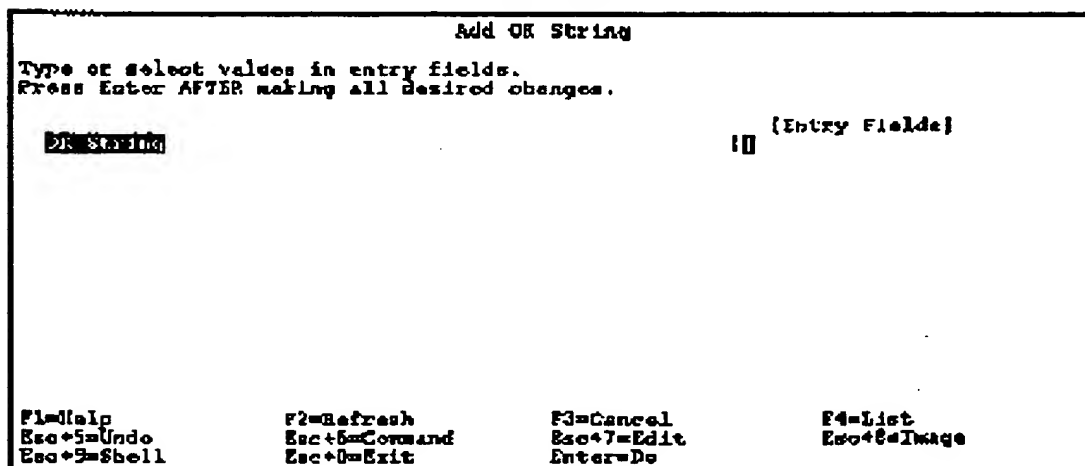


FIG. 8l

Connect Strings

Move cursor to desired item and press Enter.

[List Connect Strings]
 Add Connect String
 Delete Connect String

F1=Help F2=Refresh F3=Cancel Esc+8=Image
 Esc+9=Shell Esc+0=Exit Enter=Do

FIG. 8m

Add Connect String

Type or select values in entry fields.
 Press Enter AFTER making all desired changes.

[Connect String] [Entry Fields]

F1=Help F2=Refresh F3=Cancel F4=List
 Esc+5=Undo Esc+6=Command Esc+7=Edit Esc+8=Image
 Esc+9=Shell Esc+0=Exit Enter=Do

FIG. 8n

Other Modem Parameters

Type or select values in entry fields.
 Press Enter AFTER making all desired changes.

[Modem Selection] [Entry Fields]

Callback Condition String [Do]
 Callout Condition String [ATSFEOQ2SD=1sDO*FIaW]
 Dial String [ATSVXSVQEDaCO]
 Radio String [ATDT]
 Disconnect String [A/]
 Hangup String [+++]
 Busy String [ATWD]
 Character Size (bits) [7]
 Stop Bits [8] +8
 Parity [11] +8
 Baud Rate [none] +8
 [38400] +8

F1=Help F2=Refresh F3=Cancel F4=List
 Esc+5=Undo Esc+6=Command Esc+7=Edit Esc+8=Image
 Esc+9=Shell Esc+0=Exit Enter=Do

FIG. 8o

Callout Management

Move cursor to desired item and press Enter.

List Queued Callouts

- Show a Queued Callout
- Remove a Queued Callout
- Show Callout Manager Status
- Change / Show Callout Manager Status
- Start Next Callout
- Re-start Failed Callouts
- Display Callout Records
- Reset Callout Records
- Start Callout Management Daemon
- Stop Callout Management Daemon

F

F1=Help F2=Refresh F3=Cancel Esc+8=Image
 Esc+9=Shell Esc+0=Exit Enter=Do

FIG. 8p

Change / Show Callout Manager Status

Type or select values in entry fields.
 Press Enter AFTER making all desired changes.

Delay Between Callouts [Entry Fields]
 Maximum Queue Length [30-mins]
 [20]

F

F1=Help F2=Refresh F3=Cancel F4=List
 Esc+5=Undo Esc+6=Command Esc+7=Edit Esc+8=Image
 Esc+9=Shell Esc+0=Exit Enter=Do

FIG. 8q

Start Callout Management Daemon

Type or select values in entry fields.
 Press Enter AFTER making all desired changes.

Change Daemon How, At System Reboot, or Both? [Entry Fields]
 [How] +

F

F1=Help F2=Refresh F3=Cancel F4=List
 Esc+5=Undo Esc+6=Command Esc+7=Edit Esc+8=Image
 Esc+9=Shell Esc+0=Exit Enter=Do

FIG. 8r

Configure Callout (Cluster Client)

Move cursor to desired item and press Enter.

Set System Identifier
Set Other Parameters

F1=Help F2=Refresh F3=Cancel Esc+8=Image
Esc+9=Shell Esc+0=Exit Enter=Do

FIG. 8a

Set Other Parameters

Type or select values in entry fields.
Press Enter AFTER making all desired changes.

<p>Operator Name Operator Phone Number Remote Password Cluster Server E-mail Address</p>	<p>[Entry Fields] [John D. Jones] [(508) 555-3325] [phoenix] [hexel] [root]</p>
---	--

F1=Help F2=Refresh F3=Cancel F4=List
Esc+5=Undo Esc+6=Command Esc+7=Edit Esc+8=Image
Esc+9=Shell Esc+0=Exit Enter=Do

FIG. 8b

Configure Callback

Move cursor to desired item and press Enter.

Configure Permissions
Configure Monitoring

F1=Help F2=Refresh F3=Cancel Esc+B=Image
Esc+9=Shell Esc+0=Exit Enter=Do

FIG. 9a

Configure Permissions

Type or select values in entry fields.
Press Enter AFTER making all desired changes.

Configure Session 0 (0x1-25) [Entry fields]
Allow Root Privileges Disabled +
YES YES +

F1=Help F2=Refresh F3=Cancel F4=List
Esc+5=Undo Esc+6=Command Esc+7=Edit Esc+8=Image
Esc+9=Shell Esc+0=Exit Enter=Do

FIG. 9b

Configure Monitoring

Type or select values in entry fields.
Press Enter AFTER making all desired changes.

Session Notification Interaction [Entry fields]
Notification Device [0] +
Session Logging [/dev/console] +/
Enable E-mail on Call-in [0] +
E-mail Address [root] +
Terminal Type for Callback [vt100]

F1=Help F2=Refresh F3=Cancel F4=List
Esc+5=Undo Esc+6=Command Esc+7=Edit Esc+8=Image
Esc+9=Shell Esc+0=Exit Enter=Do

FIG. 9c

Actions			
Move cursor to desired item and press Enter.			
Show RSF Status			
Start RSF Daemon			
Stop RSF Daemon			
Start Cluster Daemon			
Stop Cluster Daemon			
Display Record of Actions			
Reset Record of Actions			
Configure Diagnostic			
Show Diagnostic Settings			
F1=Help Esc+9=Shell	F2=Refresh Esc+0=Exit	F3=Cancel Enter=Do	Esc+8=Image

FIG. 10a

Configure Diagnostic			
Type or select values in entry fields. Press Enter AFTER making all desired changes.			
Enable Diagnostic?		[Entry Fields]	
Frequency		[Yes]	+
		[Modify/LX]	+
F1=Help Esc+5=Undo Esc+9=Shell	F2=Refresh Esc+6=Command Esc+0=Exit	F3=Cancel Esc+7=Edit Enter=Do	F4=List Esc+8=Image

FIG. 10b

Start RSF Daemon			
Type or select values in entry fields. Press Enter AFTER making all desired changes.			
Change RSF Action Row, at System Reboot, or Both?		[Entry Fields]	
		[Now]	+
F1=Help Esc+5=Undo Esc+9=Shell	F2=Refresh Esc+6=Command Esc+0=Exit	F3=Cancel Esc+7=Edit Enter=Do	F4=List Esc+8=Image

FIG. 10c

#1=help
Esc+5=undo
Esc+9=sbqld

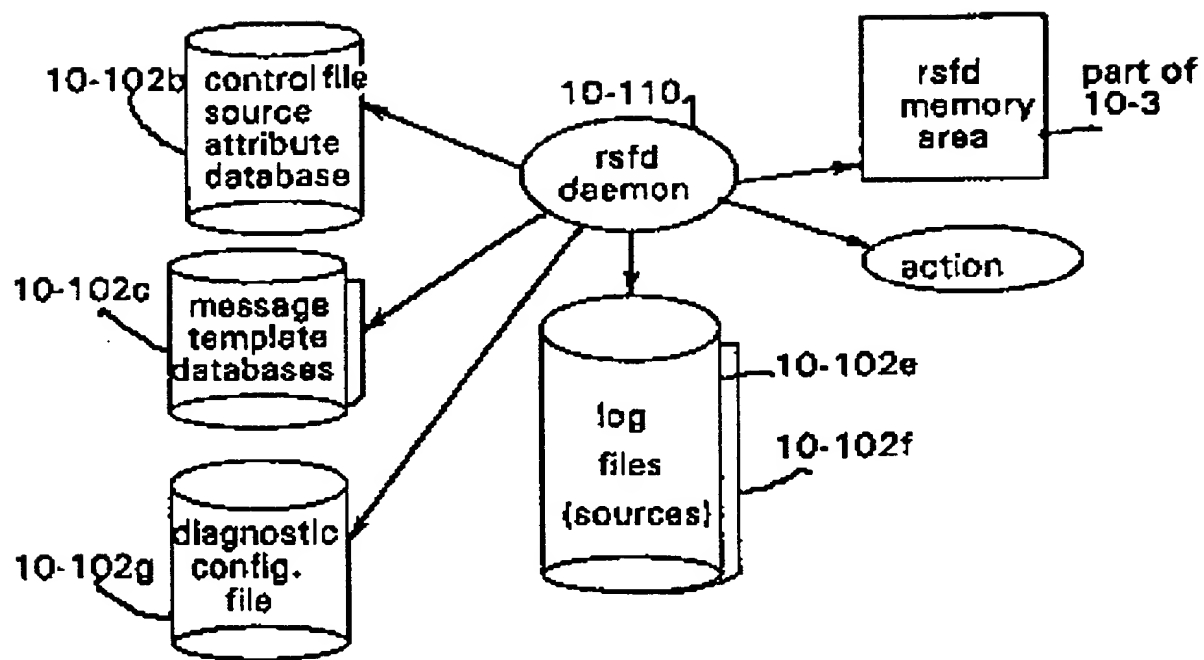


FIG. 11a

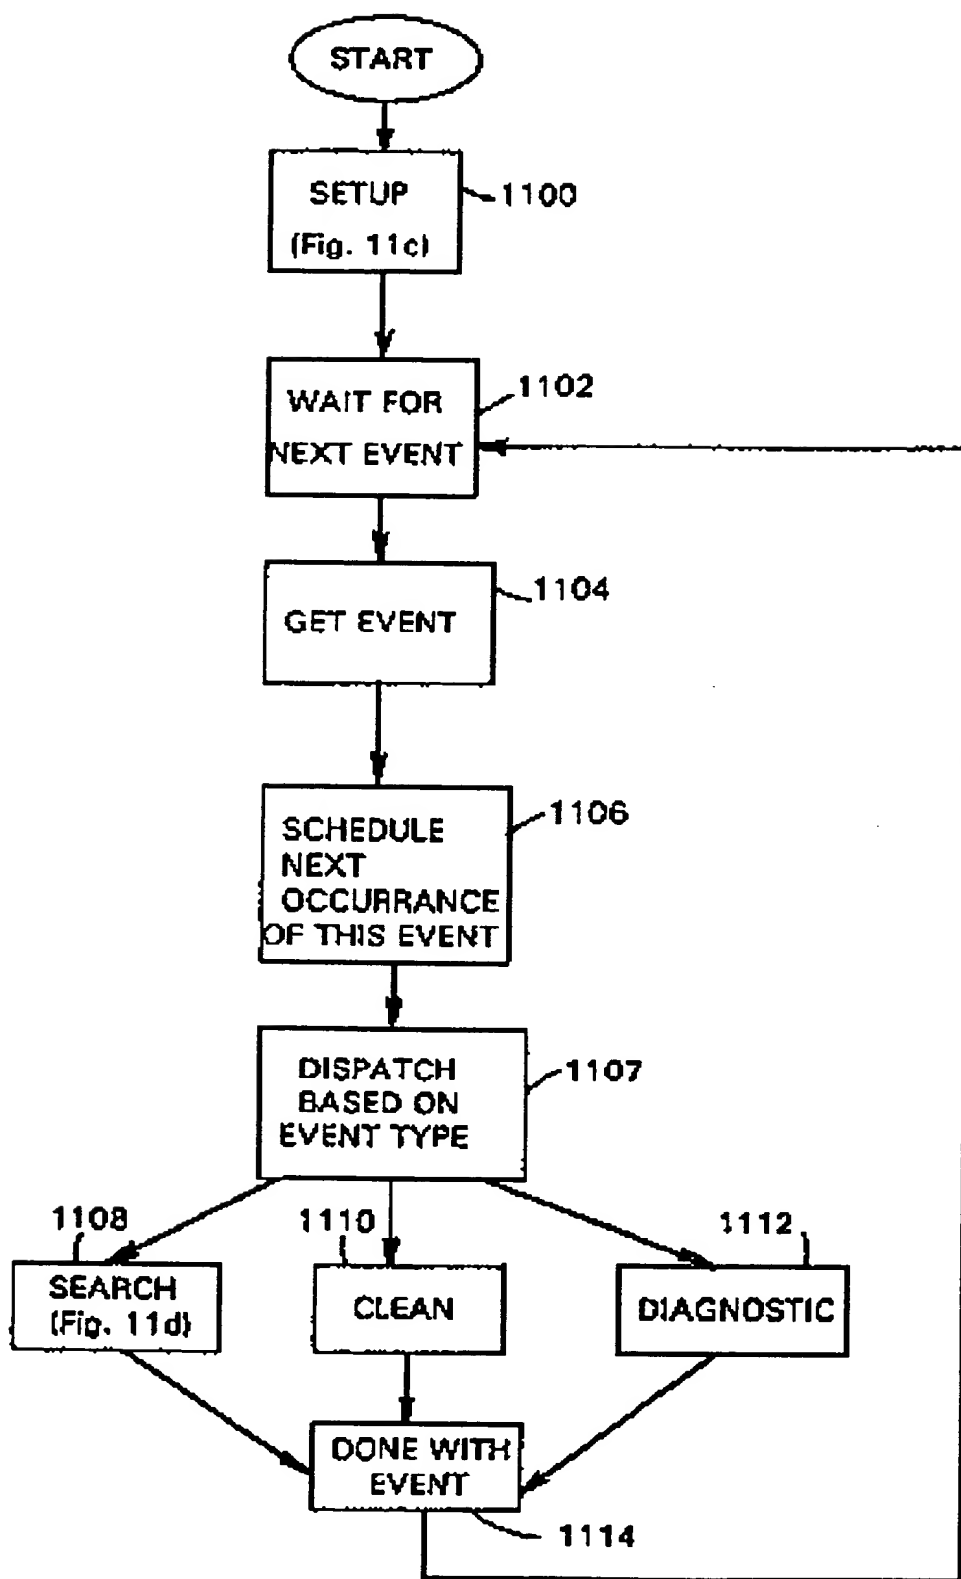


FIG. 11b

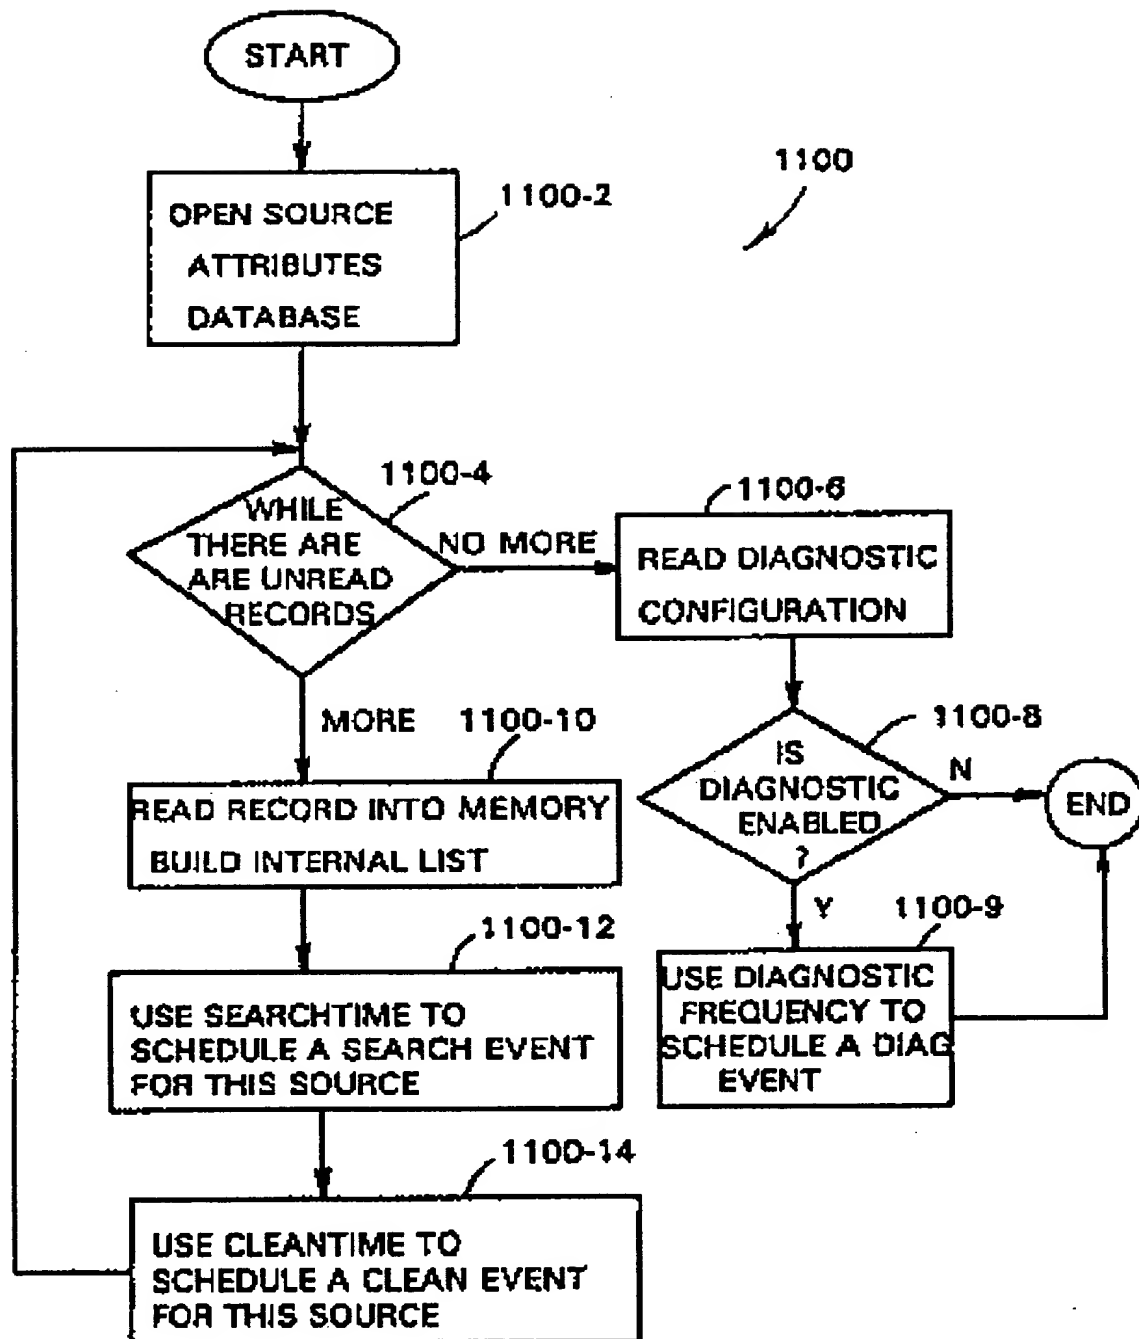


FIG. 11c

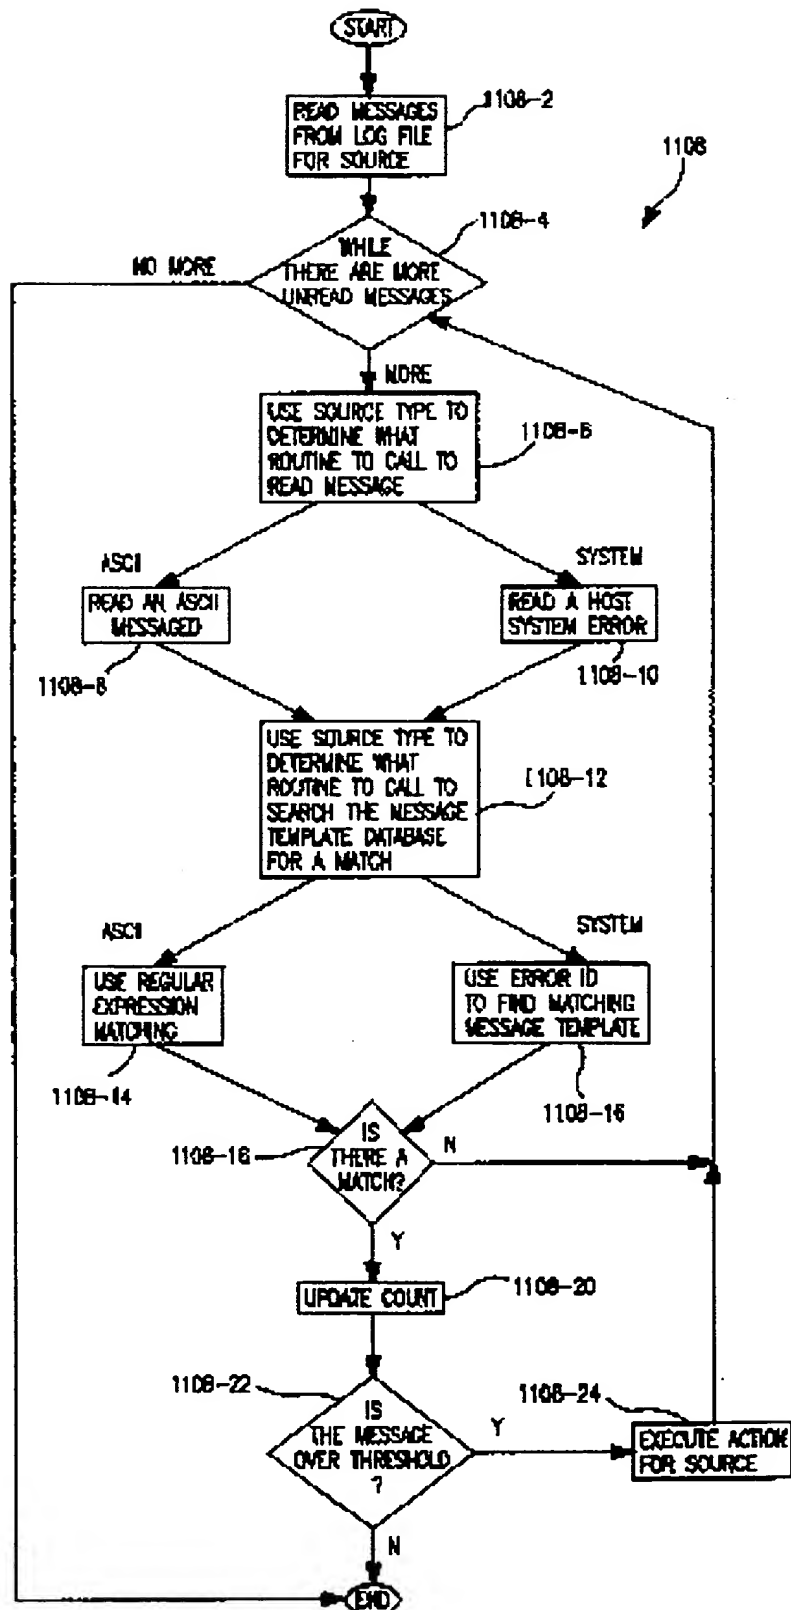


FIG. 11d

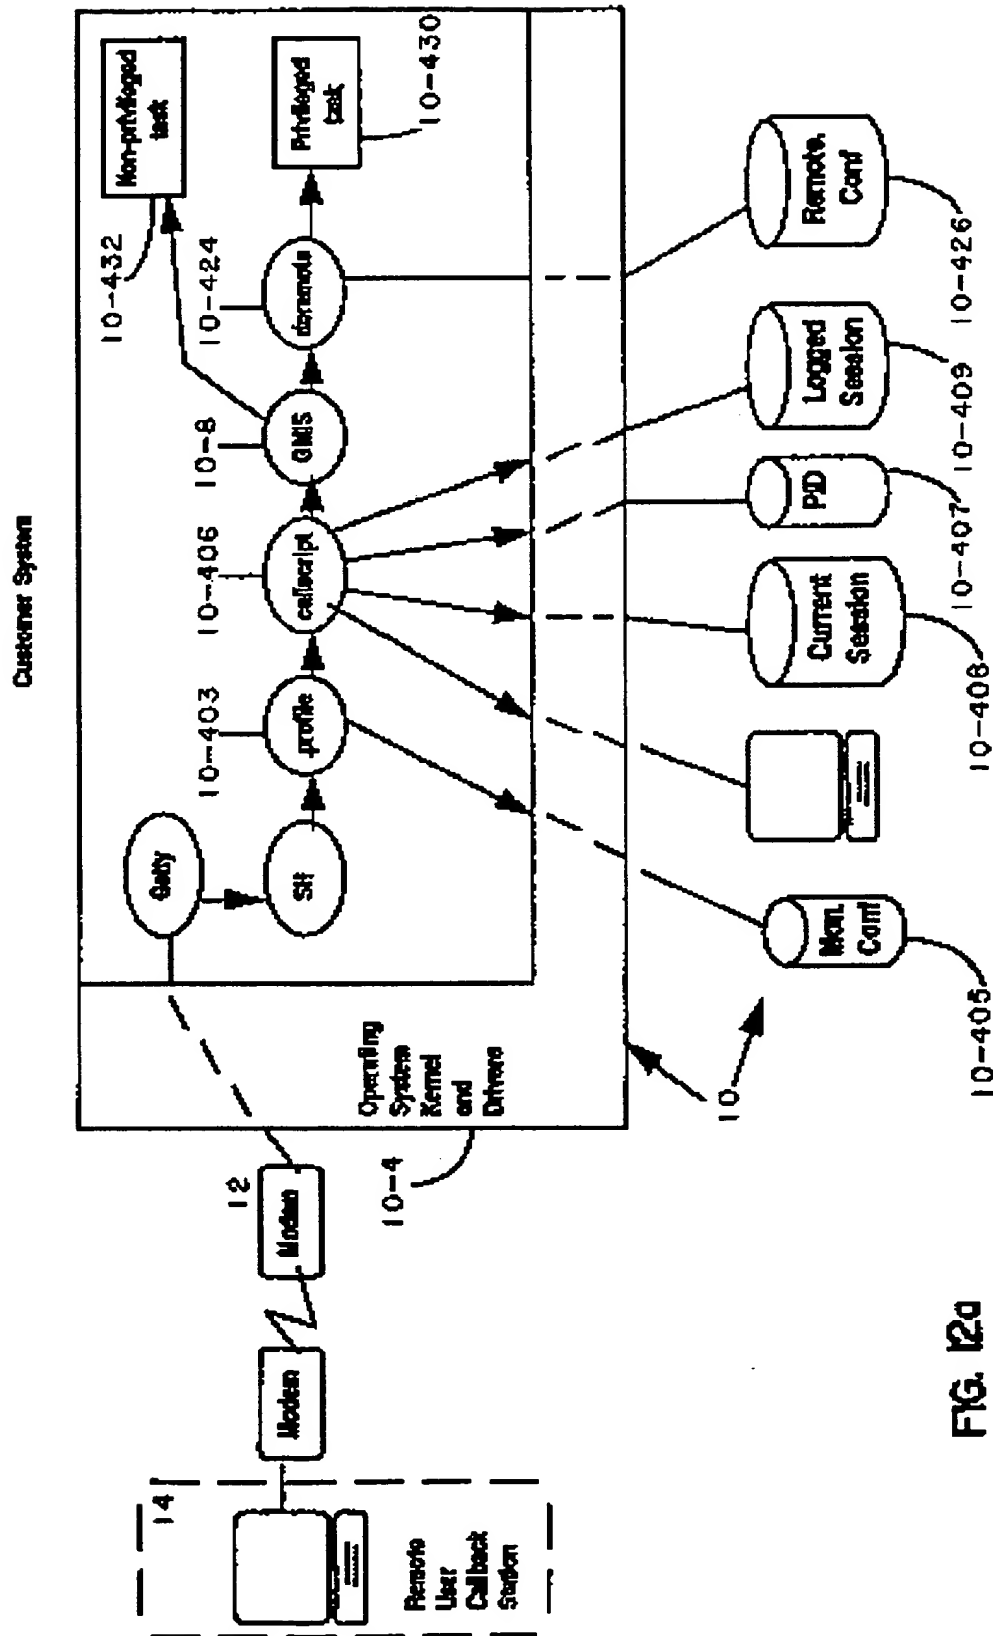
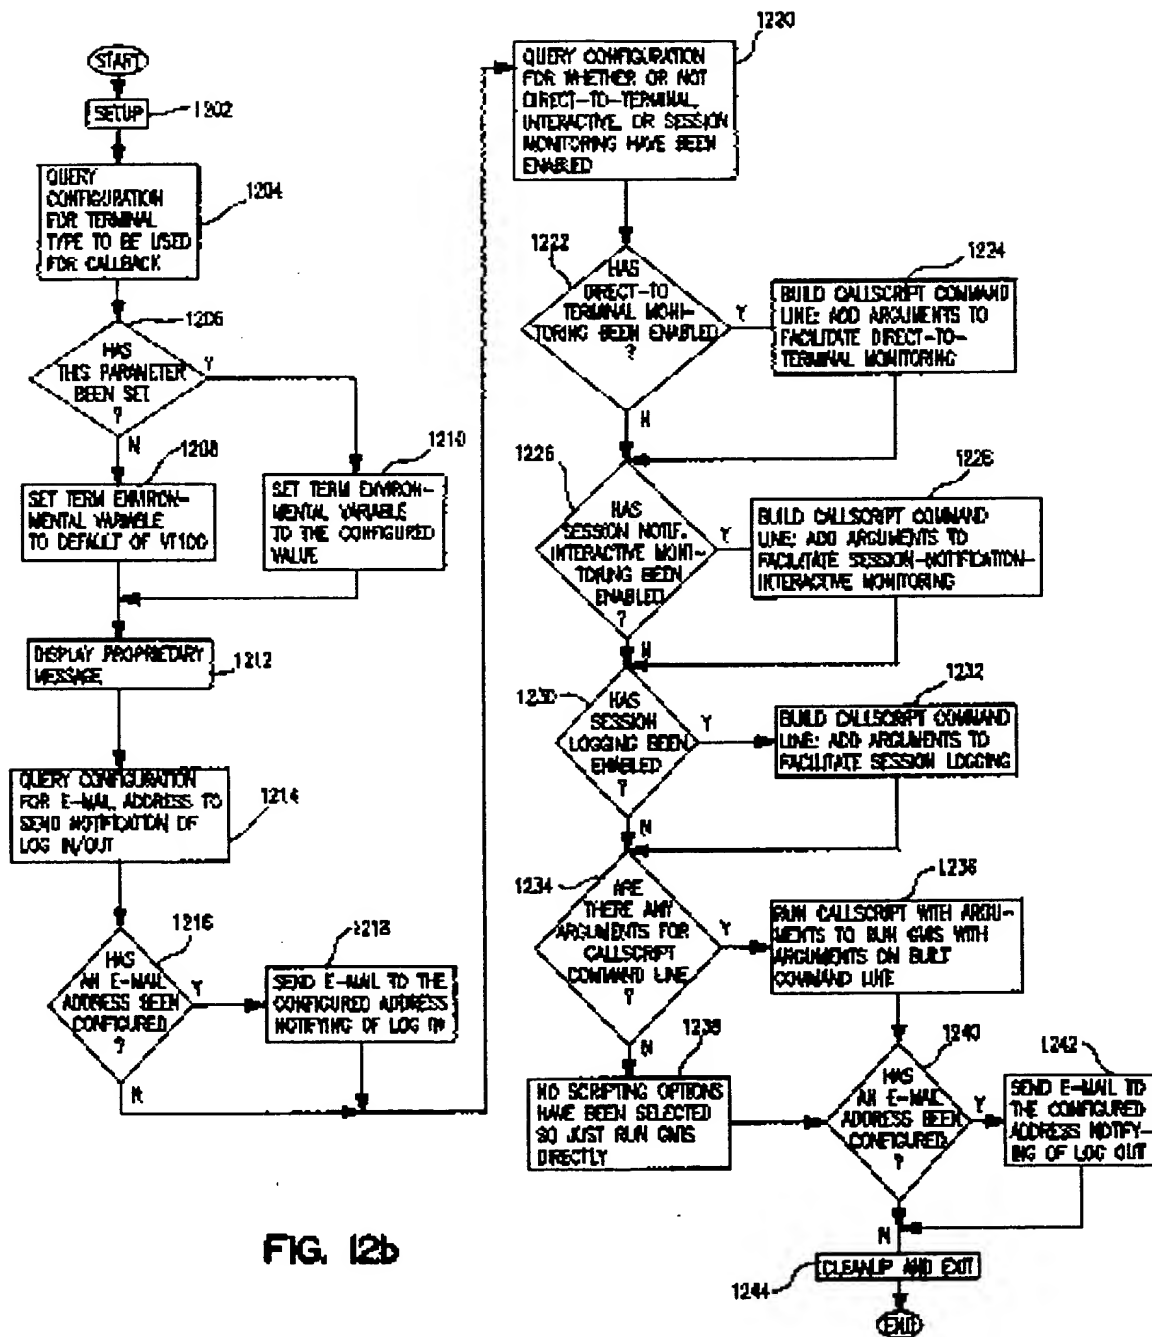


FIG. 12a



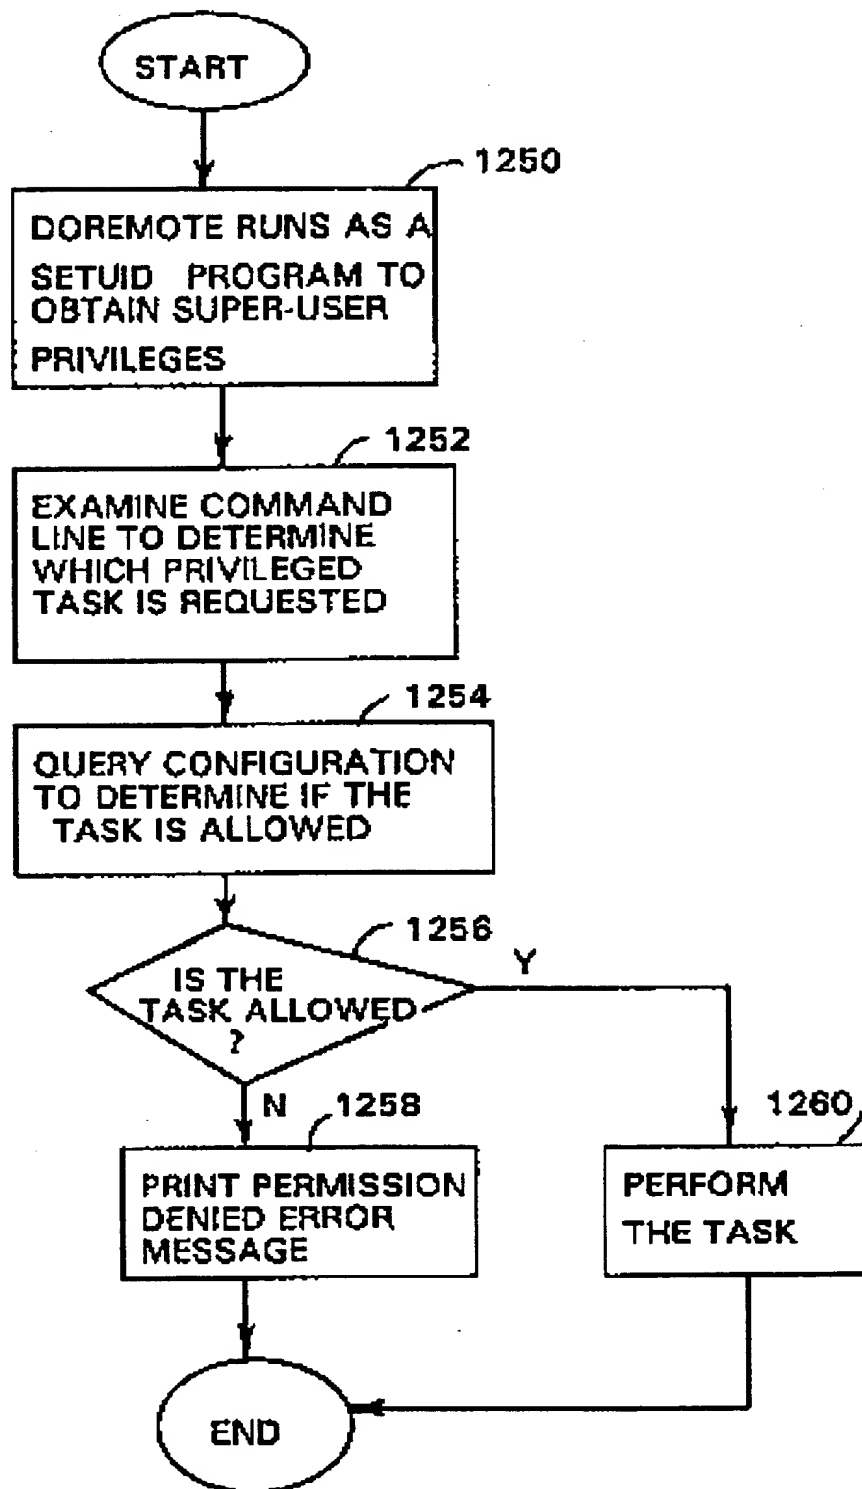


FIG. 12c

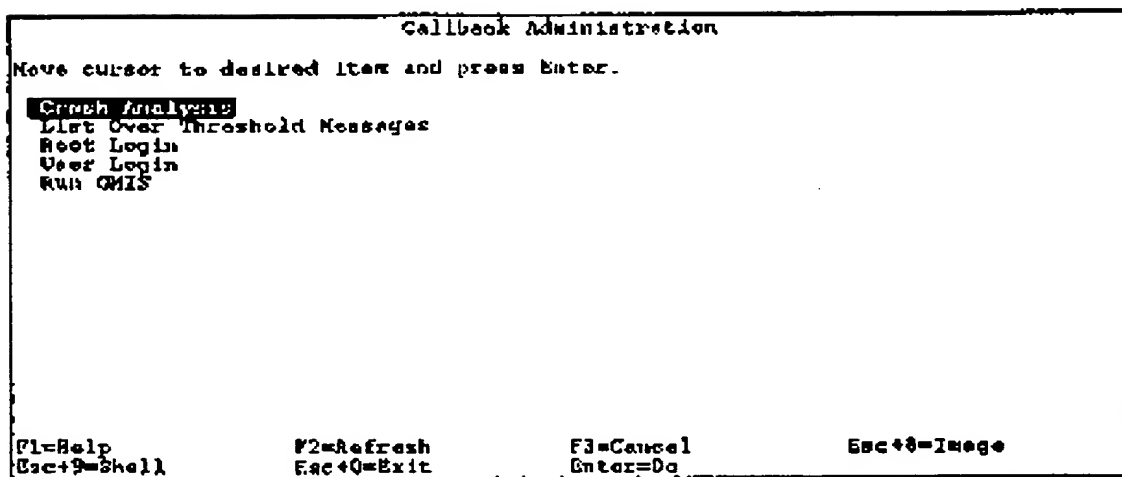
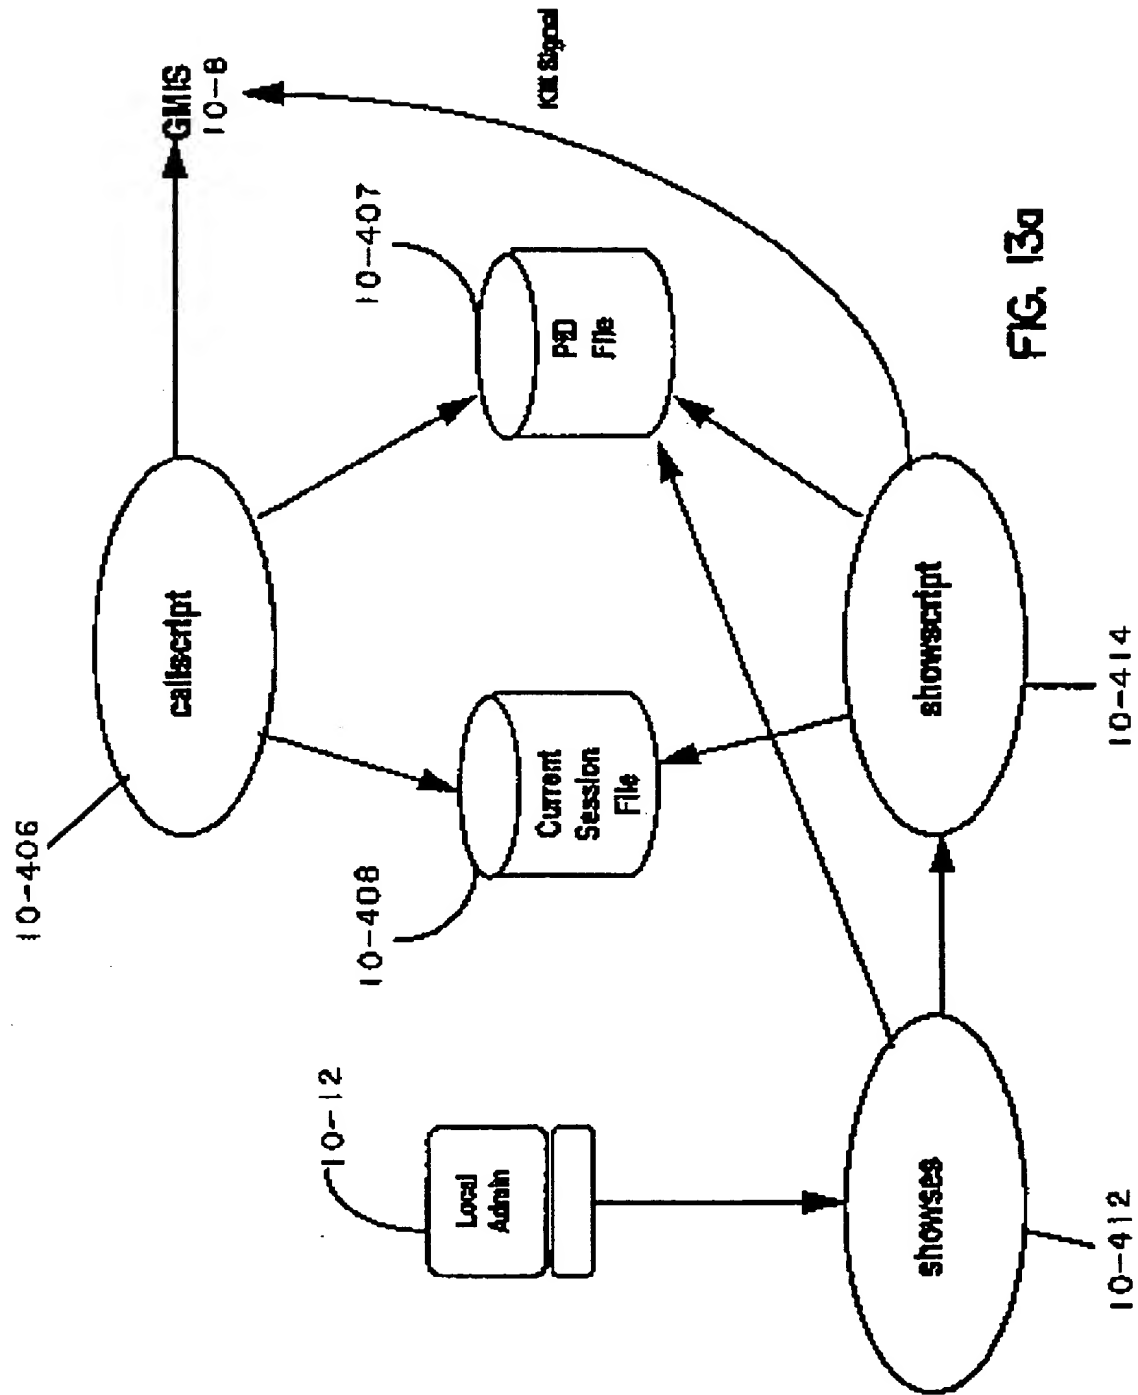


FIG. 12d



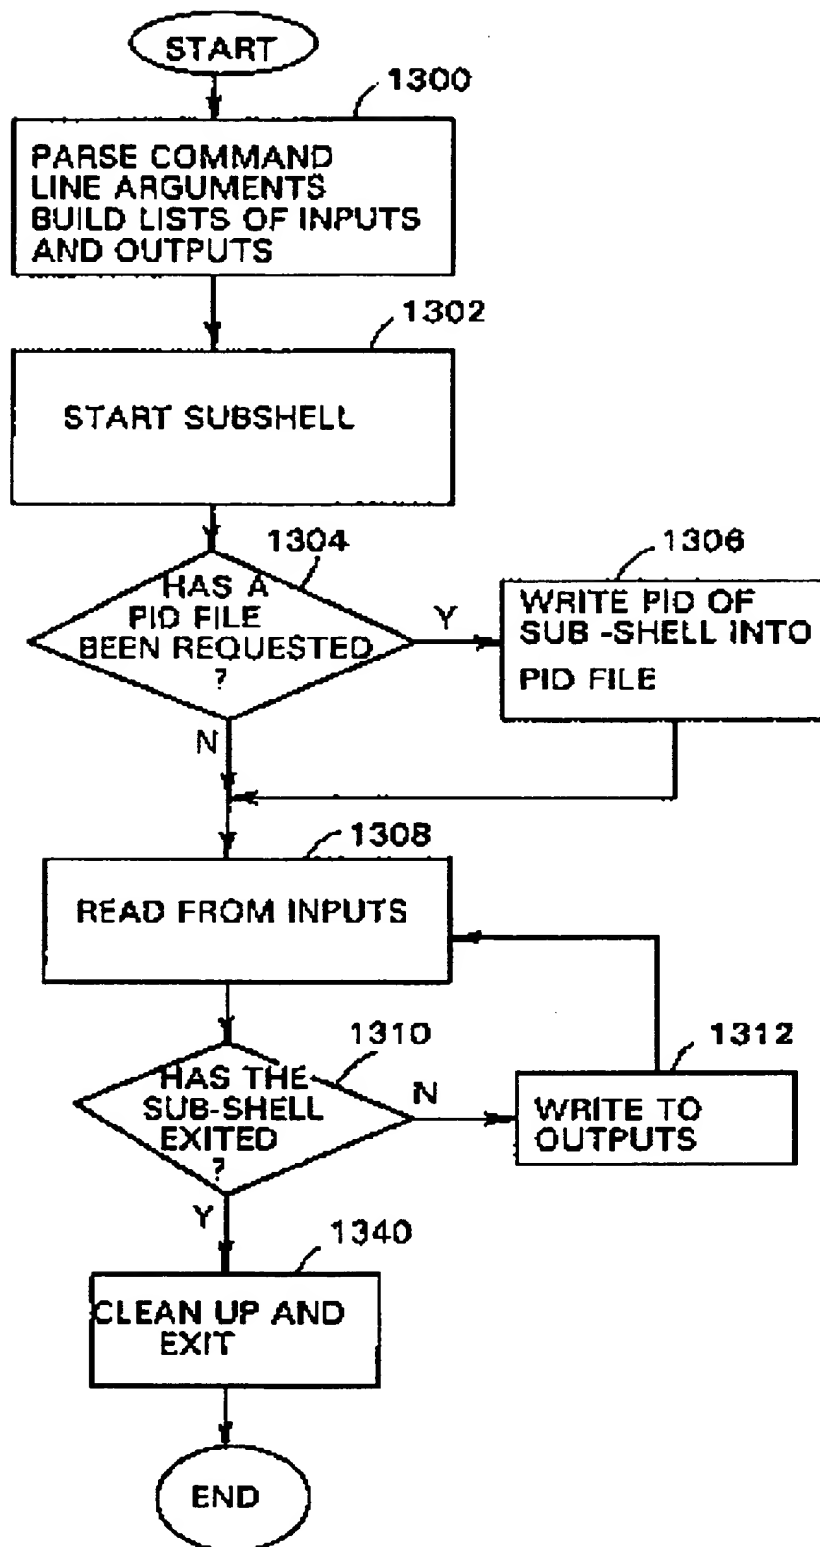


FIG. 13b

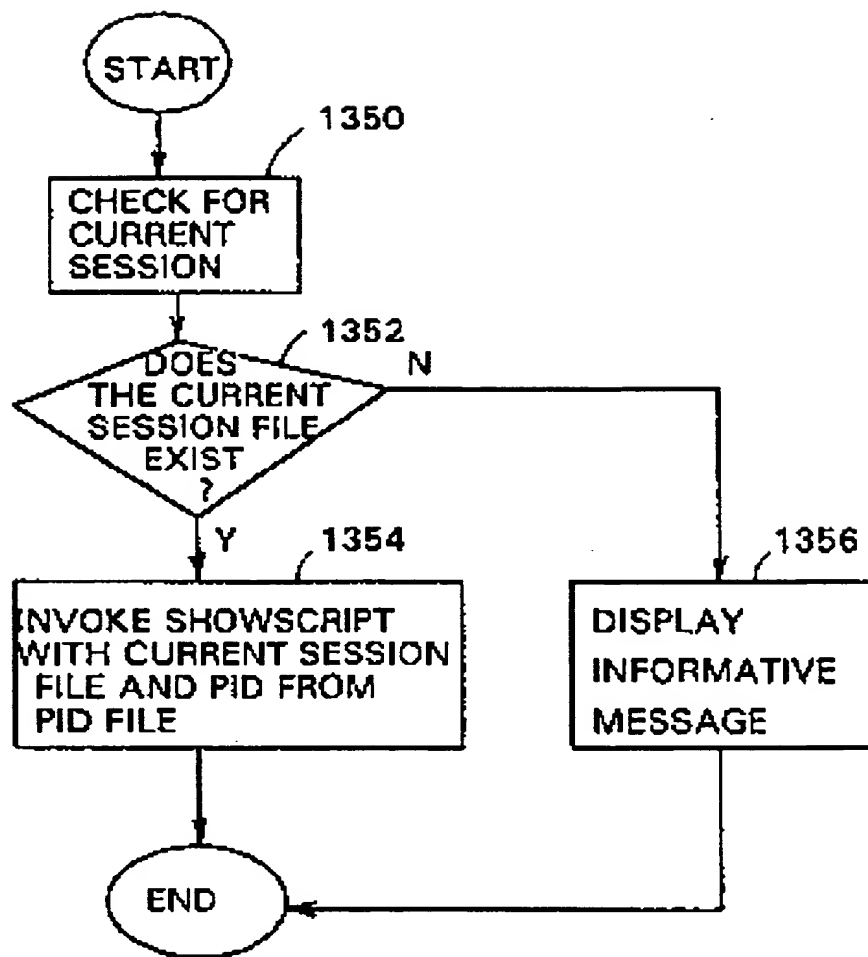


FIG. 13c

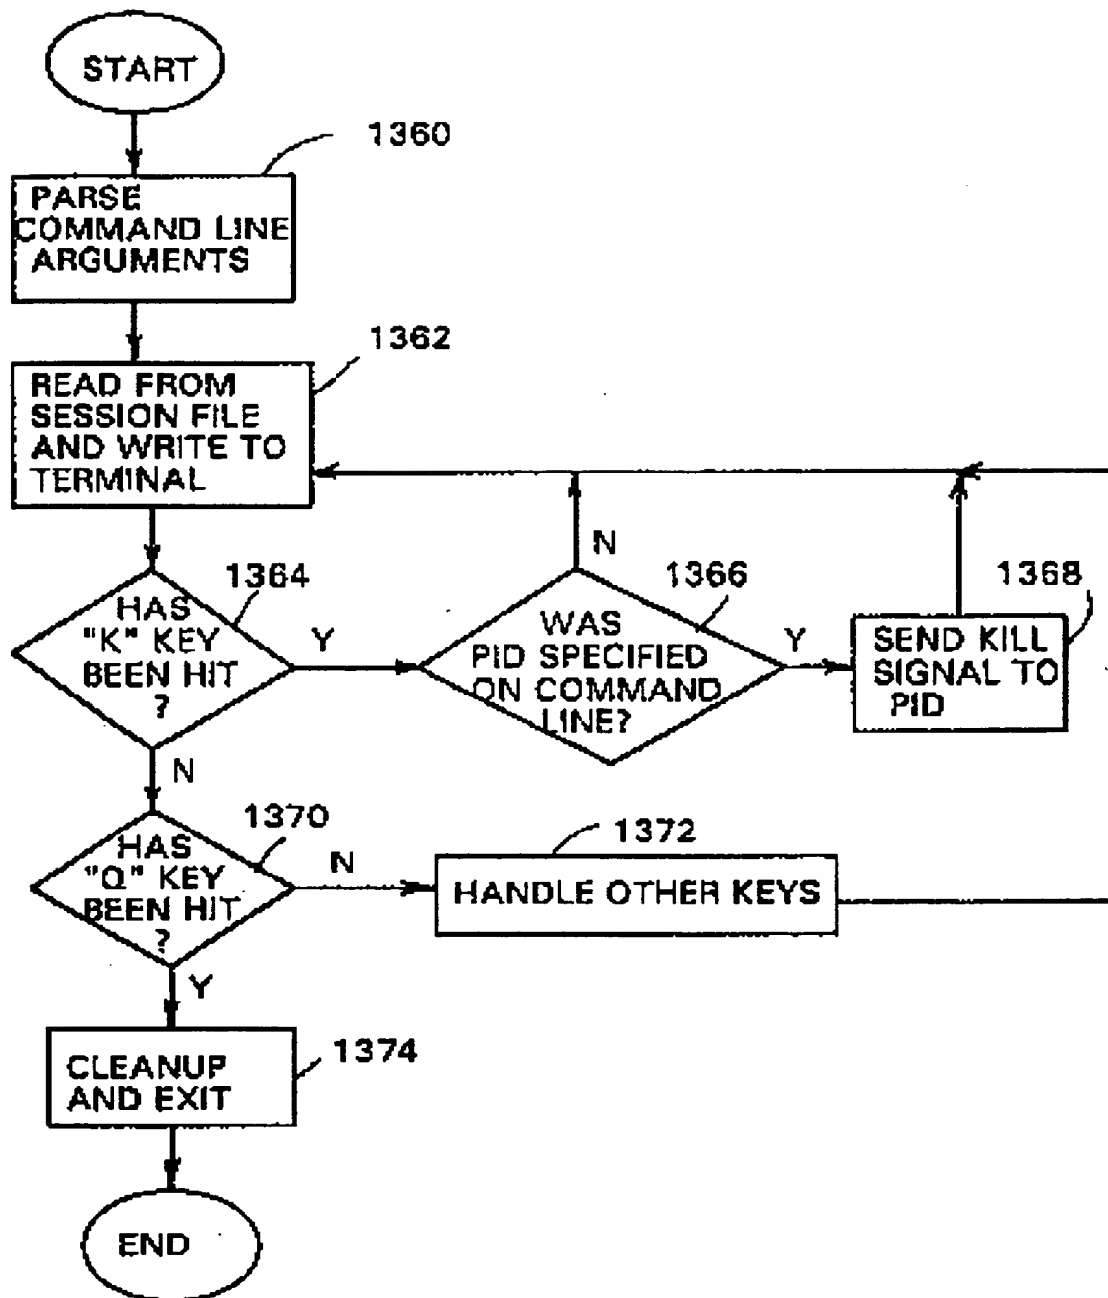


FIG. 13d

**This Page is Inserted by IFW Indexing and Scanning
Operations and is not part of the Official Record**

BEST AVAILABLE IMAGES

Defective images within this document are accurate representations of the original documents submitted by the applicant.

Defects in the images include but are not limited to the items checked:

- ☐ **BLACK BORDERS**
- ☐ **IMAGE CUT OFF AT TOP, BOTTOM OR SIDES**
- ☐ **FADED TEXT OR DRAWING**
- ☐ **BLURRED OR ILLEGIBLE TEXT OR DRAWING**
- ☐ **SKEWED/SLANTED IMAGES**
- ☐ **COLOR OR BLACK AND WHITE PHOTOGRAPHS**
- ☐ **GRAY SCALE DOCUMENTS**
- ☐ **LINES OR MARKS ON ORIGINAL DOCUMENT**
- ☐ **REFERENCE(S) OR EXHIBIT(S) SUBMITTED ARE POOR QUALITY**
- ☐ **OTHER:** _____

IMAGES ARE BEST AVAILABLE COPY.

As rescanning these documents will not correct the image problems checked, please do not report these problems to the IFW Image Problem Mailbox.